



Termoventilatore Radiateur soufflant

Fan heater

Heizlüfter

Climatizador

Termowentylator

VÄRMEFLÄKT

 
 
 
 
 
 
TERMO-VENTILADOR

 
 
 
 
ΑΕΡΟΘΕΡΜΟ



SHARM

istruzioni per l'uso - notice d'emploi - instruction for use
Gebrauchsanweisung - Instrucciones para el uso
Instrukcja użytkowania - Bruksanvisning - Instruções para o uso
Οδηγίες για την χρήση

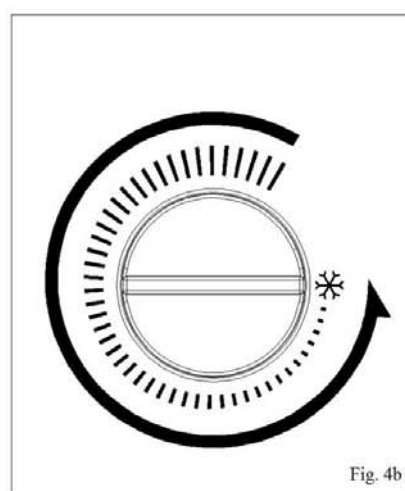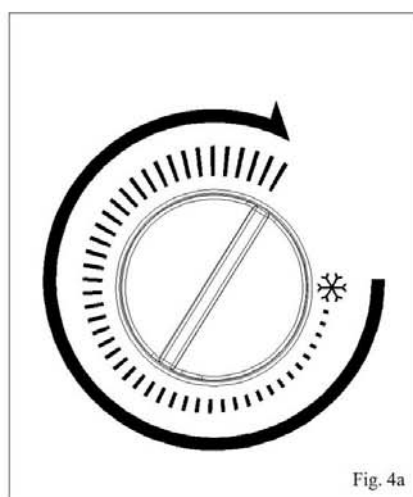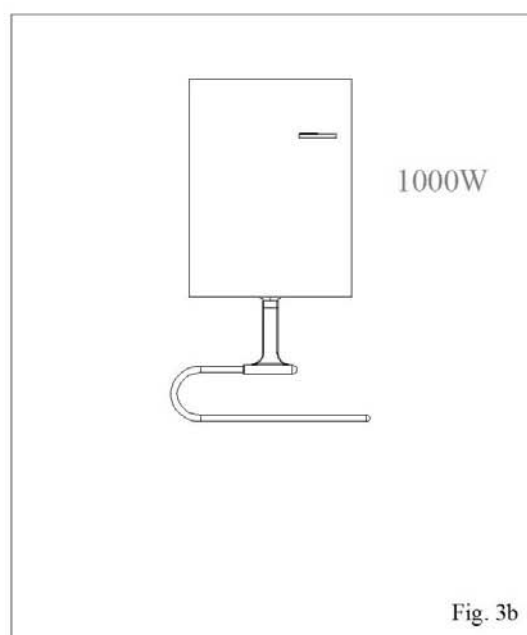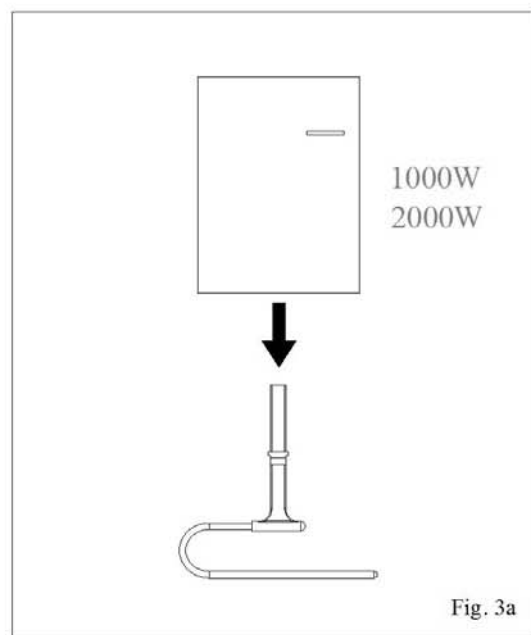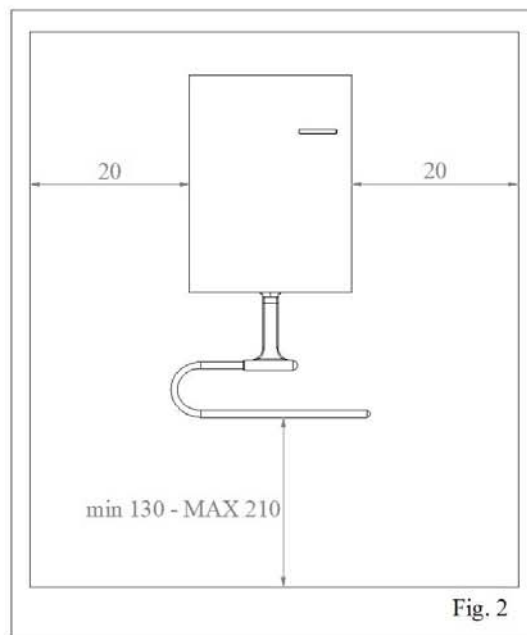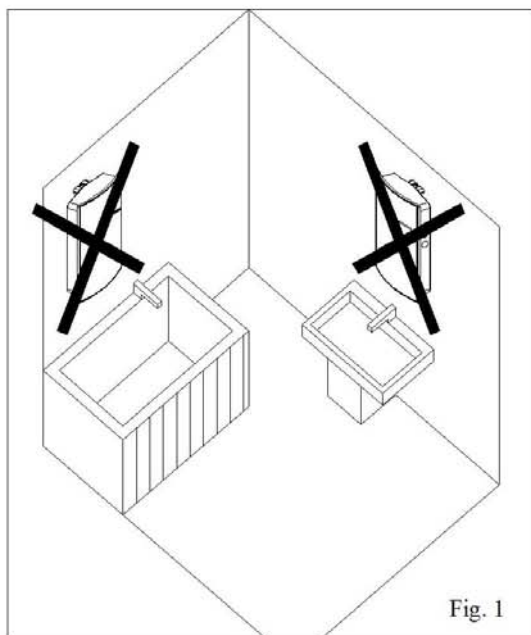

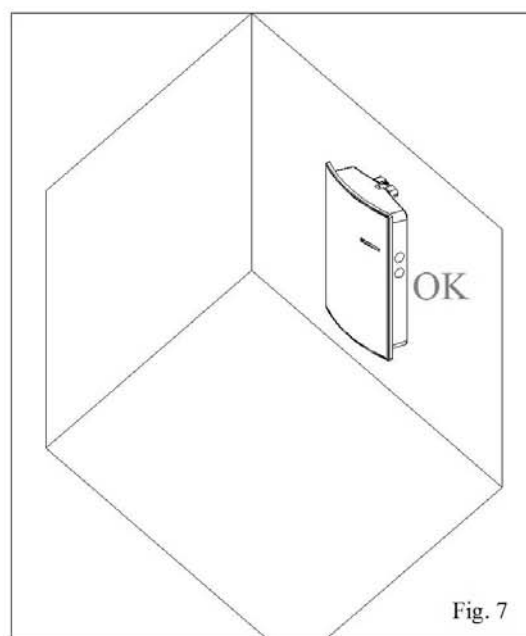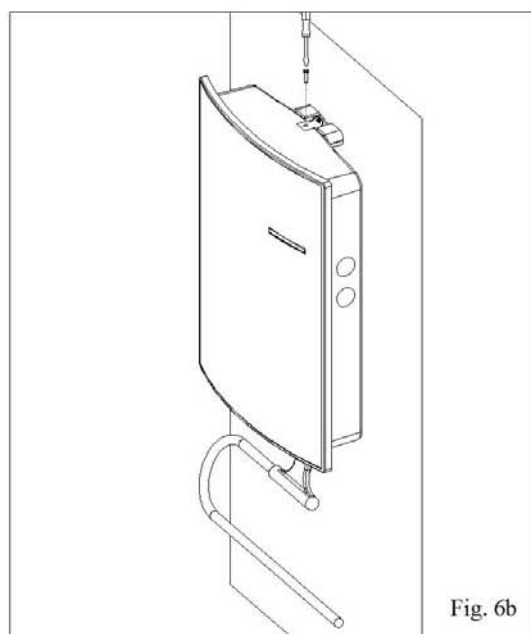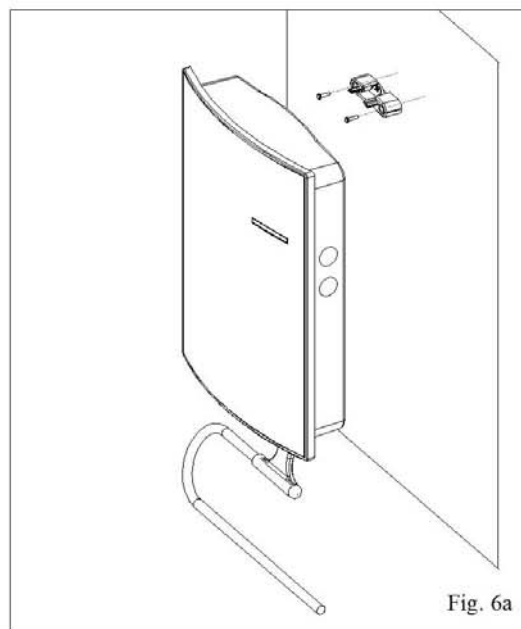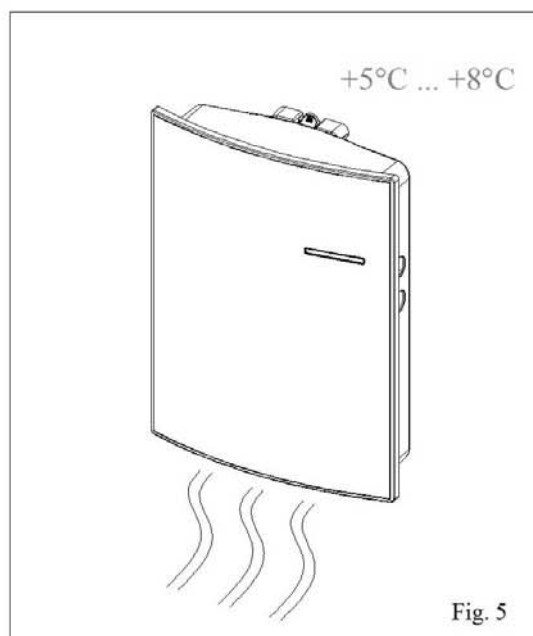

SAFETY INFORMATION

- **The appliance must only be used as described in the instructions for use. Use for any other purpose is inadmissible! Any damage attributed to incorrect operation, improper use or non-observance of the safety information will invalidate all liability and the warranty!**
- All liability is disclaimed for any frost damage caused by a heating capacity that is insufficient for the room size, bad heat insulation of the room, incorrect use or force majeure (e.g. power failure)
- Only connect the appliance to a.c. mains as specified on the rating plate!
- Never touch live parts! **Danger to life!**
- Never operate the appliance with wet hands! **Danger to life!**
- Do not store or use any flammable materials or spray in the vicinity of the appliance! **Fire hazard!**
- The appliance could not be used in the immediate vicinity of baths, showers, water connections, wash-basins or swimming pools. (fig. 1)
- Do not use the appliance in flammable atmospheres (e.g. in the vicinity of combustible gases or spray cans)! **Explosion and fire hazard!**
- **Important!** Do not insert any foreign objects into the appliance openings! **Risk of injury (electric shock) and damage to the appliance!**
- **Attenzione!** The front grill becomes very hot when the appliance is in use! Place the appliance so that it cannot be touched by accident. **Risk of burns!** The appliance will cool down gradually after being switched off.
- Do not place any items of clothing, hand towels or similar over the grill to dry. **Risk of overheating and fire hazard!**
- **ATTENTION!** Only suitable for drying textiles previously washed with water!
- The appliance is not intended for use by young children or infirm persons without supervision! Young children should be supervised to ensure that they do not play with the appliance!
- The appliance is not suitable for animal breeding purposes!
- These instructions for use belong to the appliance and must be kept in a safe place. When changing owners, these instructions must be surrendered to the new owner!
- Appliances with mains plug are not suitable for connection to permanent wiring!
- The socket-outlet must be accessible at all times to enable the mains plug to be disconnected as quickly as possible!
- Never use the appliance if the appliance or cord is damaged. **Risk of injury!**
- If the power cord is damaged or if the appliance is damaged to the extent that electrical parts are exposed, immediately disconnect from the supply and refer to the store from where the appliance was purchased. **Improper repairs can expose the user to considerable danger.**

PACKING

- After unpacking the appliance, check the same for transport damage and the contents for completeness! In the event of damage or an incomplete delivery, contact your authorised retailer!
- Do not discard the original box! It can be used for storage and dispatch to avoid transport damage!
- Dispose of the packing material in a proper manner! Plastic bags should be kept away from children!

LOCATION

- Place the appliance as showed in the picture (see fig.6) The appliance openings must not be obstructed in any way!
- Never place the appliance on an unstable support (for example on a bed) as it could cause appliance's fall.
- Never place the appliance directly under a wall socket!

CLEANING

- First switch off the appliance and disconnect the plug from the socket! Do not use any abrasive or caustic cleaning agents!
- Clean the housing with a moist cloth, vacuum cleaner or brush.
- Never immerse the appliance in water! **Danger to life!**
- If the appliance is not going to be used for some time, it should be protected against excessive dust and dirt.

DISPOSAL

- Old appliances must be disposed of in a proper manner!
- All repairs must be referred to authorised personnel! Refer all repairs to an authorised retailer!
- Important!** Any tampering with the appliance will invalidate the warranty.
- Repairs carried out improperly and by unqualified persons may have serious consequences for the user!

GENERAL SAFEGUARD

- Read carefully the instructions provided in this booklet, as they give important information with regard to installation, utilisation and maintenance safety. Preserve this manual carefully for future reference.
- After unpacking the unit and before any use, make sure the mechanical parts of the unit and all its attachments are not damaged. In case of doubts, do not use the appliance and refer to a qualified electrician.
- All packing elements (plastic bags, polystyrene, nails, etc.) should be kept out of the reach of children, as being potentially dangerous.
- Before connecting the unit, make sure the voltage details on the identifying plate correspond to those of your mains power supply.
- Should the wall outlets and the unit plug be incompatible with each other, have the wall outlet replaced by an appropriate one by a qualified electrician, who, in particular, shall also make sure cross section of the wires corresponds to the absorbed power of the appliance. Generally, adapters, multiple sockets and/ or extension cables should not be used. However, if necessary, only use single or multiple adapters and extension cables, which comply with the existing safety standards, making sure however that the current carrying capacity limits, marked on the single adapter and on the extension cables, as well as the maximum power limit marked on the multiple adapter, are not exceeded.
- **This appliance must only be used for the purposes it was designed for, i.e. to warm household rooms. Any different use to be considered as improper and therefore dangerous. The manufacture cannot be held responsible for any damages deriving from improper, awkward and unreasonable uses.**
- The use of any electric appliance involves the observance of some basic rules..
- In particular:
 - Never touch the appliance with wet or damp hands.
 - Never pull the mains supply cord or the appliance, to unplug from the mains outlet.
 - Never leave the appliance exposed to weather agents (rains, sunshine, etc.)
 - Never let children or incapable persons use the appliance, unattended.
 - Before any cleaning or maintenance, disconnect the unit from the electric supply, either by unplugging it or by switching the mains power supply off.
 - Should the appliance be out of order and/or not operate properly, stop it and do not make any intervention. For any repairs, only apply to an After-Sales Service Centre authorised that original spare parts be used only. Non-compliance with this directive might compromise safety of the appliance.

- Should you decide to stop using an appliance of this type, it is recommended to make it unusable, by cutting the mains supply cord, after unplugging it from the mains outlet. Further, it is also recommended that all dangerous of the appliance are made harmless, specially for children, who might make use of the worn-out appliance for their own amusement.

- This appliance must only be used for the purpose for which it has been explicitly designed, i.e. to warm household rooms. An incorrect installation may cause damages to persons, animals or objects, for which the manufacturer cannot be held liable.

- In order to avoid dangerous overheating, it is recommended to fully unwind the mains supply cord and use the appliance according to the "Instructions for Use" provided.

- Never leave the appliance unnecessarily plugged in. Unplug from mains outlet, whenever the unit is not used.

- Never obstruct ventilation or heat dissipation openings or slots.

- Should the mains supply cord of this appliance be damaged, have it replaced only by an After-Sale Service Centre authorised by the manufacturer, special tools being needed.

The appliance is made in conformity with directives CEE 73/23 (LVD) e 89/336 (EMC) modified by directives 93/68.

MAINS CABLE

- Position the power cord so that it does not pose a tripping hazard or can be stepped on! Only use approved extension cable that is suitable for the appliance rating, e.g. mark of conformity!

- The power cord must not come into contact with hot appliance parts!

- Never pull the plug out of socket at the cord! Never move the appliance by pulling at the cord or use the cord for carrying purposes!

- Do not coil the cord around the appliance! Do not use the appliance with the cord coiled! This applies particularly to using a cable drum.

- Do not crush the cord or drag it over sharp edges or place it over heated hotplates or naked flames!

WALL MOUNTING

- The minimum distances must be observed (Fig. 2.)

- For wall mounting, care must be taken not to damage concealed cables. For this reason, no holes must be made above or below wall power sockets.

- The appliance may only be operated when mounted vertically on a wall (Fig. 7) The appliance must not be mounted on ceilings.

- The appliance should be fitted and connected by a qualified electrician. The installation must be isolated from the supply before carrying out electrical work.

- For this purpose, in the case of appliances without mains plug, an all-pole switch with minimum 3mm contact opening must be provided in the permanent electrical installation.

TOWEL RAIL

When the towel rail is folded upwards (see Fig.3) the heat output is reduced automatically to 1000 Watt.

INDICATOR LIGHT

- The indicator lights during heating.

TEMPERATURE SETTING "T"

- The thermostatic control T should be set to "MAX". Once the required room temperature is reached it can be turned back until a "click", switch off can be heard (fig. 4). This set temperature will be kept almost constant by the thermostatic control switching on and off automatically.

POWER REGULATION "S"

- When set to "0" appliance is not working

- When set to "1000" appliance absorbs 1000W

- When set to "2000" appliance absorbs 2000 W

FROST PROTECTION

- When the temperature falls below +5°C...+8°C, the appliance switches on automatically (fig. 5)

OVERHEAT PROTECTION

- The built-in overheat protection automatically switches off the appliance in the event of a fault! In this case (depending on model), the plug must be disconnected from the socket and the controls set to "0"! After a short cooling phase, the appliance is ready to use again! If the fault should reoccur, contact your authorised retailer!

argoclima s.p.A.

headquarters

via Varese,90

21013 Gallarate(VA)Italy

Tel: +39 0331 755111

Fax: +39 0331 776240

www.argoclima.com

argoclima Iberica S.L.

C/Chile nº10 Ed.Madrid 92.Of.011.

28290 Las Matas de las RozasMadrid

Tel: +34 916 304661

Fax: +34 916 303613

Nº S.A.T.: 902 195054

argoclima Hellas A.E.

25 Vouliagmenis

165 61 Glifada-GREECE

Tel.: +30 2 1096.37.428-429

Fax: +30 2 1096.37.432