SHARP®

MODEL

EL-9950

GRAPHING CALCULATOR

OPERATION MANUAL

Introduction

This graphing calculator can handle many types of mathematical formulas and expressions for you. It is powerful enough to process very complex formulas used in rocket science, but yet so compact that it fits in your coat pocket. The main features of this graphing calculator are as follows:

• Graphing Capability to help you visualize what you are working on,

• Slide Show Function to help you understand common formulas, prepare for presentations,

• Large memory capacity, with fast processing speed, and more.

We strongly recommend you read this manual thoroughly. If not, then browse through the very first chapter "Getting Started", at least. Last, but not least, congratulations on purchasing the Graphing Calculator!

NOTICE

• The material in this manual is supplied without representation or warranty of any kind. SHARP assumes no responsibility and shall have no liability of any kind, consequential or otherwise, from the use of this material.

• SHARP strongly recommends that separate permanent written records be kept of all important data. Data may be lost or altered in virtually any electronic memory product under certain circumstances. Therefore, SHARP assumes no responsibility for data lost or otherwise rendered unusable whether as a result of improper use, repairs, defects, battery replacement, use after the specified battery life has expired, or any other cause.

• SHARP assumes no responsibility, directly or indirectly, for financial losses or claims from third persons resulting from the use of this product and any of its functions, the loss of or alteration of stored data, etc.

• The information provided in this manual is subject to change without notice.

• Screens and keys shown in this manual may differ from the actual ones on the calculator.

• Some of the accessories and optional parts described in this manual may not be available at the time you purchase this product.

• Some of the accessories and optional parts described in this manual may be unavailable in some countries.

• All company and/or product names are trademarks and/or registered trademarks of their respective holders.

Contents

Caring for Your Calculator

- Do not carry the calculator around in your back pocket, as it may break when you sit down. The display is made of glass and is particularly fragile.

- Keep the calculator away from extreme heat such as on a car dashboard or near a heater, and avoid exposing it to excessively humid or dusty environments.

- Since this product is not waterproof, do not use it or store it where fluids, for example water, can splash onto it. Raindrops, water spray, juice, coffee, steam, perspiration, etc. will also cause malfunction.

- Clean with a soft, dry cloth. Do not use solvents.

- Do not use a sharp pointed object or exert too much force when pressing keys.

- Avoid excessive physical stress.

Chapter 1
Getting Started

Before Use

Inserting batteries - resetting the memory

1. Open the battery cover located on the back of the calculator. Pull down the notch, then lift the battery cover up to remove it.
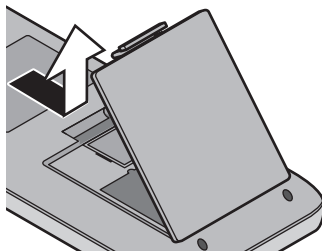
2. Insert the batteries, as indicated. Make sure that the batteries are inserted in the correct directions.
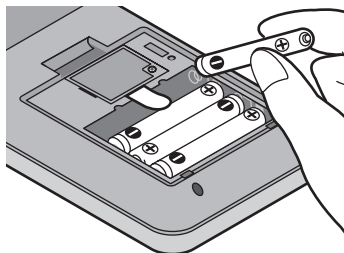
3. Pull off the insulation sheet from the memory backup battery.

4. Place the battery cover back, and make sure that the notch is snapped on.
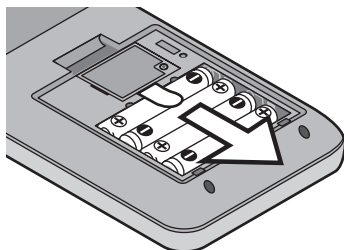
5. **After a few seconds,** press
   $\boxed{\text{ON}}$ and you will see the following message on the display:

   > PRESS [CL] KEY TO CLEAR ALL DATA
   > PRESS [ON] KEY TO CANCEL

6. **Make sure to press $\boxed{\text{CL}}$ to reset the calculator's memory**. The memory will be initialized and "ALL DATA CLEARED" will be displayed. Press any key to set the calculator ready for normal calculation mode.

Note: If the above message does not appear or malfunction occurs, check the direction of the batteries and close the cover again. If this does not solve the problem, remove the battery cover, and then gently push the **RESET** switch with the tip

of a ball-point pen or a similar object while pressing ⟨ ON ⟩ simultaneously. And then, follow steps 4 to 6 above.
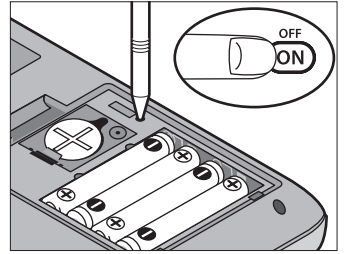
DO NOT use a tip of a pencil or mechanical pencil, a broken lead may cause a damage to the button mechanism.

Adjusting display contrast

Since the display contrast may vary with the ambient temperature and/or remaining battery power, you may want to adjust the contrast accordingly. Here's how:

1. Press ⟨2ndF⟩, then OPTION.

2. Adjust the contrast by using the ⟨ + ⟩ and ⟨ − ⟩ keys.

   ⟨ + ⟩ : increases the contrast
   ⟨ − ⟩ : decreases the contrast

3. When done, press ⟨ CL ⟩ to exit the mode.

Turning the calculator OFF

Press ⟨2ndF⟩ ⟨OFF⟩ to turn the calculator off.

Automatic power off function

- The calculator is automatically turned off when there is no key operation for approximately 10 minutes (The power-off time depends on the conditions.)

- The calculator will not automatically power off while it is executing calculations ("∎" flashes on the upper right corner of the display.)

Using the Hard Cover

To open the cover:
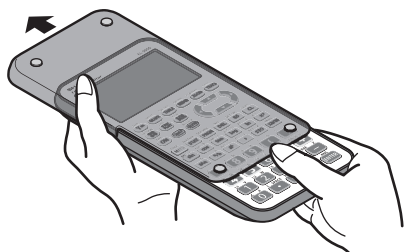
When in use:

When not in use:

Part Names and Functions

Main Unit

① **Display screen**

② **Power ON/ OFF key**

④ **Graphing keys**

⑤ **Cursor keys**

③ **Key operation keys**
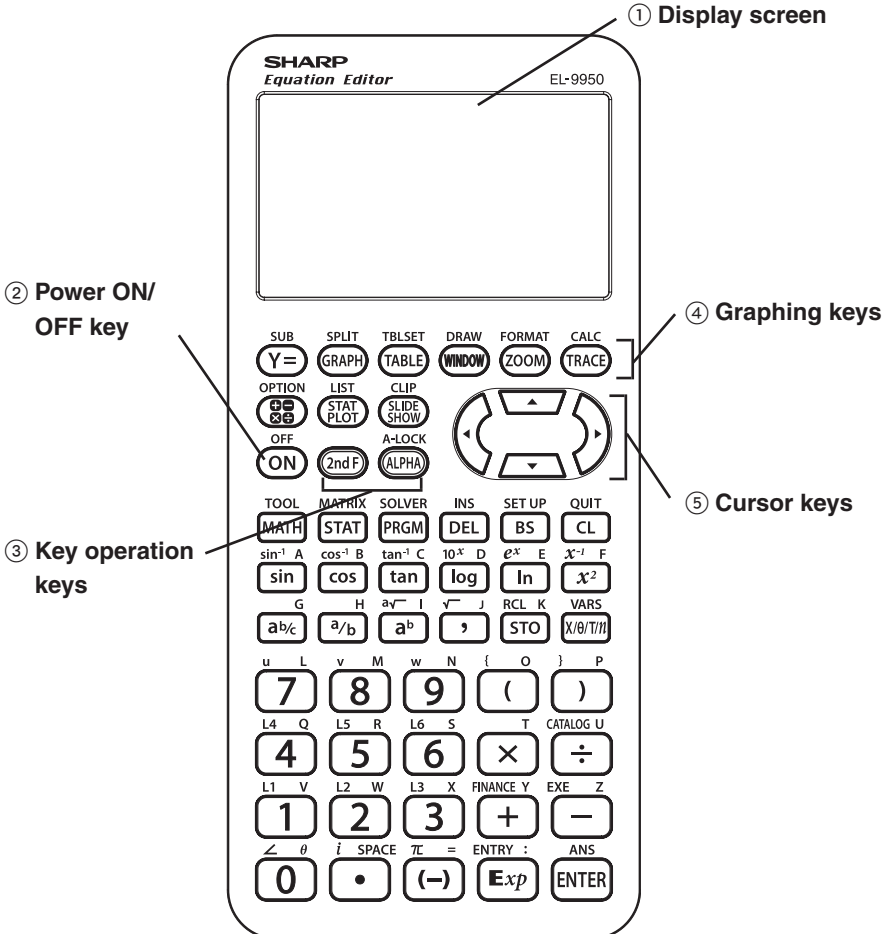
① **Display screen:**

Displays up to 132 pixels wide by 64 pixels tall of graphs and texts.

② **Power ON/OFF key:**

Turns calculator ON. To turn off the calculator, press $\boxed{\text{2ndF}}$, then $\boxed{\text{OFF}}$.

③ **Key operation keys:**

These keys are used to change the key functions.

$\boxed{\text{2ndF}}$:	Changes the cursor to "2", and the next keystroke enters the function or mode printed above each key in orange.
$\boxed{\text{ALPHA}}$:	Changes the cursor to "A", and the next keystroke enters the alphabetical letter printed above each key in green.
Note:	Press $\boxed{\text{2ndF}}$ $\boxed{\text{A-LOCK}}$ to lock the specific keys in the alphabet entering mode. (ALPHA-LOCK)

④ **Graphing keys:**

These keys specify settings for the graphing-related mode.

$\boxed{\text{Y=}}$:	Opens the formula input screen for drawing graphs.
$\boxed{\text{GRAPH}}$:	Draws a graph based on the formulas programmed in the $\boxed{\text{Y=}}$ window.
$\boxed{\text{TABLE}}$:	Opens a Table based on the formulas programmed in $\boxed{\text{Y=}}$.
$\boxed{\text{WINDOW}}$:	Sets the display ranges for the graph screen.
$\boxed{\text{ZOOM}}$:	Changes the display range of the graph screen.
$\boxed{\text{TRACE}}$:	Places the cursor pointer on the graph for tracing, and displays the coordinates.
$\boxed{\text{SUB}}$:	Displays the substitution feature.
$\boxed{\text{SPLIT}}$:	Displays both a graph and a table at the same time.
$\boxed{\text{TBLSET}}$:	Opens the table setup screen.
$\boxed{\text{DRAW}}$:	Draws items on the graph. Use this key also to save or recall the graph/pixel data.
$\boxed{\text{FORMAT}}$:	Sets the operations of the graph screen.
$\boxed{\text{CALC}}$:	Calculates specific values based on formulas programmed in $\boxed{\text{Y=}}$.

⑤ **Cursor keys:**

Enables you to move the cursor (appears as _, ▌, etc. on the screen) in four directions. Use these keys also to select items in the menu.

Reset switch (in the battery compartment)**:**

Used when replacing batteries or clear the calculator memory.

[▦▤] **key:** Returns calculator to calculation screen.

[OPTION] **key:** Sets or resets the calculator settings, such as LCD contrast and memory usage.

[CLIP] **key:** Obtains the screen for the slide show.

[LIST] **key:** Accesses list features.

[SLIDE SHOW] **key:** Creates your own slide shows.

[STAT PLOT] **key:** Sets the statistical plotting.

Basic Operation keys

[ENTER]: Used when executing calculations or specifying commands.

[CL] / [QUIT]: Clear/Quit key

[BS]: Backspace delete key

[DEL]: Delete key

[INS]: Toggle input mode between insert and overwrite (in one-line edit mode).

[SETUP]: Allows you to set up the basic behavior of this calculator, such as to set answers in scientific or normal notation.

Menu keys

$\boxed{\text{MATH}}$:   Enter the Math menu with additional mathematical functions.

$\boxed{\text{STAT}}$:   Enter the statistics menu.

$\boxed{\text{PRGM}}$:   Enter the programming menu.

$\boxed{\text{TOOL}}$:   Converts hexadecimal, decimal, octal and binary numbers or solves systems of linear equations, finds roots for quadratic and cubic equations.

$\boxed{\text{MATRIX}}$:   Enter menu for matrix functions.

$\boxed{\text{SOLVER}}$:   Enter screen and menu for Solver features.

$\boxed{\text{VARS}}$:   Enter the menu for calculator specific variables.

$\boxed{\text{FINANCE}}$:   Enter menu for financial solver and functions.

Scientific Calculation keys

See each chapter for details.

Basic Key Operations

Since this calculator has more than one function assigned to each key, you will need to follow a few steps to get the function you need.

Example

Operation of x^2

$\boxed{\text{2ndF}}$ $\boxed{x\text{-1}}$: Specify x^{-1}

$\boxed{\text{ALPHA}}$ $\boxed{\text{F}}$: Specify character F

$\boxed{x^2}$: Specify x^2

- Press "as is" to get the function and number printed on each key.

- To access secondary function printed above each key in yellow, press $\boxed{\text{2ndF}}$ first, then press the key. Press $\boxed{\text{CL}}$ to cancel.

- To press the key printed above each key in purple, press $\boxed{\text{ALPHA}}$ first, then press the key. When in Menu selection screen however, you do not have to press $\boxed{\text{ALPHA}}$ to access the characters. Press $\boxed{\text{CL}}$ to cancel.

- If you want enter alphabetical letters (purple) sequentially, use $\boxed{\text{2ndF}}$ $\boxed{\text{A-LOCK}}$. Press $\boxed{\text{ALPHA}}$ to return to the normal mode.

- In this manual, alphanumeric characters to be entered are indicated as they are (without using the key symbols). Use of the key symbol indicates that it is for selecting the menu specified by the character or number. The above example also indicates the key notation rules of this manual.

Quick Run-through

Here are the major ingredients for 18 doughnuts:

$\dfrac{1}{4}$ cup warm water

$\dfrac{3}{4}$ cup warm milk

$\dfrac{1}{3}$ cup sugar

4 cups all-purpose flour

2 eggs

3 tablespoons butter

Based on these values, solve the following problems using the calculator.

Question   If you make 60 doughnuts according to the above recipe, how many cups of warm milk are required?

At first, you may calculate how many cups of warm milk are required for 1 doughnut =

$$\dfrac{3}{4} \div 18$$

As for the ordinary calculator, the answer is 0.041666666. But how much is 0.04166666 of a cup of warm milk?

Set up the calculator before calculation

1. Press 📇 to enter the calculation screen.
2. Press CL to clear the display.

Change answer mode from decimals to fractions

1. Press 2ndF SETUP.

2. Select **F ANSWER** and press 2.

3. Press CL.

Enter fractions

3. Press 3 $\boxed{\text{a}/\text{b}}$ 4 $\boxed{\blacktriangleright}$.

4. Press $\boxed{\text{a}/\text{b}}$ 18 $\boxed{\blacktriangleright}$.

5. Press $\boxed{\text{ENTER}}$.

$$\frac{\frac{3}{4}}{18}$$

$$\frac{1}{24}$$

Now we have found $\frac{1}{24}$ of a cup of warm milk is required per one doughnut, how many cups are required for 60 doughnuts?

If you want to use the answer of the previous calculation, press $\boxed{\text{ANS}}$ and you do not have to reenter the value.

6. Press $\boxed{\text{2ndF}}$ $\boxed{\text{ANS}}$ $\boxed{\times}$, or directly $\boxed{\times}$ (multiplication).

"Ans×" is displayed. ANS is a calculator specific variable which indicates the answer of calculations just before.

* When you enter + (addition), − (subtraction), × (multiplication), ÷ (division), it is not required to press $\boxed{\text{ANS}}$.

7. Press 60.

$$\frac{\frac{3}{4}}{18}$$

$$\frac{1}{24}$$

Ans×60

8. Press $\boxed{\text{ENTER}}$.

18

$$\frac{1}{24}$$

Ans×60

$$2\frac{1}{2}$$

Answer: $2\frac{1}{2}$ cups of warm milk are required for making 60 doughnuts.

Chapter 2
Operating the Graphing Calculator

Basic Key Operations - Standard Calculation Keys
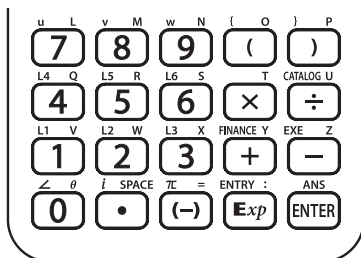
The standard calculation keys, located at the bottom four rows of the keyboard, enable you to access the basic functions of the calculator.

1. Entering numbers

Use the number keys ([0] ~ [9]), decimal point key ([·]), and negative number key ([(−)]) to enter numbers into the calculator. To clear the screen entry, press [CL].

Number entry

Example

Type 10.23456789 onto the Calculation screen.

1. Enter the Calculation screen, then clear the screen entry:

   [⊞] [CL]

2. Enter numbers with the number keys and decimal point key, as follows:

   10 [·] 23456789
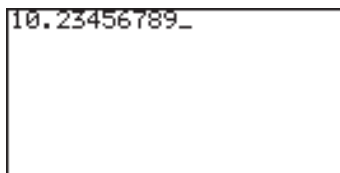
Note: ⎡**E**xp⎤ can be used to enter a value in scientific notation.

Example

$6.3 \times 10^8 + 4.9 \times 10^7$

⎡⊞⊟⎤ ⎡ CL ⎤ 6.3 ⎡**E**xp⎤ 8 ⎡ + ⎤
4.9 ⎡**E**xp⎤ 7

```
6.3E8+4.9E7_
```

Entering a negative value

The negative number key ⎡ (–) ⎤ can be used to enter numbers, lists, and functions with negative values. Press ⎡ (–) ⎤ before entering the value.

Note: Do not use the ⎡ − ⎤ key to specify a negative value. Doing so will result in an error.

Example

Type -9460.827513 into the Calculation screen.

⎡⊞⊟⎤ ⎡ CL ⎤ ⎡ (–) ⎤ 9460.827513

```
-9460.827513_
```

2. Performing standard math calculations

By utilizing the ⌈ + ⌉ ⌈ − ⌉ ⌈ × ⌉ and ⌈ ÷ ⌉ keys, you can perform the standard arithmetic calculations of addition, subtraction, multiplication, and division. Press ⌈ENTER⌉ to perform each calculation.

Perform an arithmetic calculation

Example

Obtain the answer to "6 × 5 + 3 − 2".

⌈⊞⌉ ⌈ CL ⌉ 6 ⌈ × ⌉ 5 ⌈ + ⌉ 3 ⌈ − ⌉ 2 ⌈ENTER⌉

```
6×5+3−2
                              31
```
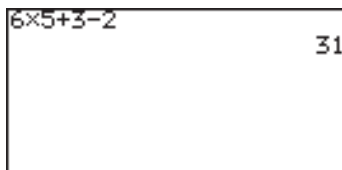
Using parentheses

With the ⌈ (⌉ and ⌈) ⌉ keys, parentheses (round brackets) can be added to group sections of expressions. Sections within the parentheses will be calculated first. Parentheses can also be used to close the passings of values in various functions, such as "round(1.2459,2)".

Example

Obtain the answer to "(9 + 7) × (5 − 3)".

⌈⊞⌉ ⌈ CL ⌉ ⌈ (⌉ 9 ⌈ + ⌉ 7 ⌈) ⌉ ⌈ × ⌉ ⌈ (⌉ 5 ⌈ − ⌉ 3 ⌈) ⌉ ⌈ENTER⌉

```
(9+7)×(5−3)
                              32
```
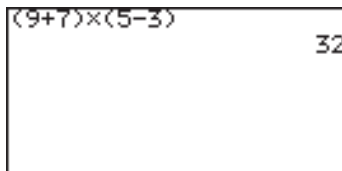
Note: The multiplication sign "×", as the one in the above example, can be abbreviated if it proceeds a math function, a parenthesis "(", or a variable. Please note that the precedence of calculations may be changed (see page 3).

And, the multiplication sign "×" after a parenthesis ")" cannot be abbreviated. For examples, Abbreviating "(1 + 2) × 3" to "(1 + 2) 3" will result in an error.

Cursor Basics

The cursor indicates where the next entry will be placed. The cursor may be placed automatically to different areas by various functions and tools, or can be moved around by using the ⌈ ◄ ⌉ ⌈ ► ⌉ ⌈ ▲ ⌉ ⌈ ▼ ⌉ keys. Use the cursor keys to select a menu item, select a cell item in a matrix, and trace along a graph.

Example

Enter "$\sqrt[4]{65536} \times \sqrt[3]{8}$" in the Calculation screen. Then press ⎡ENTER⎤ to calculate.

1. Press ⎡⊞⊟/⊠⊞⎤, then ⎡ CL ⎤ to clear the display.

2. Enter 4 for the root's depth, then press ⎡2ndF⎤ ⎡ᵃ√⎤.
   The root figure is entered, with the cursor automatically placed below the figure.
   For detailed instructions of how to use the ⎡2ndF⎤ key, refer to "Second Function Key" and "ALPHA Key" in this chapter.

3. Enter 65536.
   At this moment, the cursor is still placed under the root figure.

4. Press ⎡ ▶ ⎤ to move the cursor out of the area, then enter ⎡ × ⎤ at the cursor.

5. Press ⎡2ndF⎤ ⎡ᵃ√⎤ again. Notice that the cursor is automatically placed so that you can specify the depth of this root figure. Type 3, ⎡ ▼ ⎤, and 8.

6. Press ⎡ENTER⎤ to obtain the answer.

$$\sqrt[4]{65536} \times \sqrt[3]{8}$$
$$32$$

Cursor appearance and input method

The cursor also displays information regarding the calculator's input method. See the following diagram.

Mode	Symbol	Remarks
Normal mode	▄▄▐█ ◀▌	The appearance of the cursor pointer may vary according to the mode or position. The major shapes and the definitions are as follows:
When ⎡ALPHA⎤ is pressed	A ▢▐	
When ⎡2ndF⎤ is pressed	▐ ▨▐	◀▌ : Insert mode ▐ : Overwrite mode

* ▐, ▐ and ▐ appear at the insertion point within the functions such as a/b and $\sqrt[a]{}$.

Editing Entries

Editing modes   The calculator has the following two editing modes: equation mode, and one line mode.

You can select one from the G EDITOR menu of the SETUP menu.

Equation editor

One line editor

```
5³
         125
```

```
5^3
         125
```
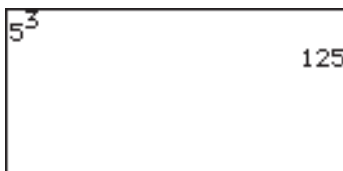
* See page ??? for details.

Cursor navigation

Use ◀ ▶ ▲ ▼ to move the cursor around, and use the DEL BS CL keys to edit entries.

• DEL key deletes an entry AT THE CURSOR.

• BS key erases one BEFORE THE CURSOR.

• Use CL to clear the entire entry line.

About the Insert mode
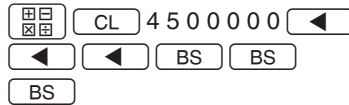
When the editing mode is set to one-line, insert mode needs to be manually specified. Press and release 2ndF, then INS to set the insert mode. Press 2ndF INS again to return to the overwrite mode.

The CL key clears all screen entries in the Calculation screen, as well as clearing error messages. It also clears a single line equation in the Y= screen.

Example

Type **3096**, then change **3** to **4**. When done, jump the cursor to the very end of the numbers.

⊞▦ CL 3 0 9 6 ◀
◀ ◀ ◀ DEL 4
▶ ▶ ▶

```
3096_
```

```
096
```

```
4096_
```
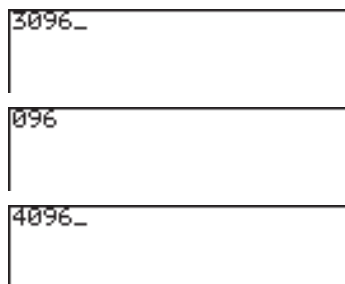
Example

Type 4500000, then remove 500.
`4000`

[⊞] [CL] 4 5 0 0 0 0 0 [◄]
[◄] [◄] [BS] [BS]
[BS]

Tips: You can jump the cursor to the beginning or the end of line by
using the [2ndF] and [◄] [►] keys. Likewise, press [2ndF]
[▼] to jump the cursor all the way to the bottom. Press [2ndF]
[▲] to jump the cursor to the top. To learn about how to use the
[2ndF] key and its functions, refer to the section "Second Function
Key" of this chapter.

Second Function Key

Use [2ndF] to call up the calculator's extended key functions, math functions and
figures.

All functions associated with [2ndF] are color coded orange, and are printed above each
key.

Example

Enter "2π" on the screen.

1. Press [⊞] [CL] to clear the screen, then enter "2" by
    pressing [2].

2. Press [2ndF]. When the key
    is released, the cursor on the
    screen changes, indicating
    that a second function is now
    ready to be called up.
    `2▓`

3. Press [π] ([(−)] key).
    The entry appears on the
    screen.
    `2π_`

ALPHA Key

Use $\boxed{\text{ALPHA}}$ to enter an alphabet character. All 26 characters accessible, as well as "θ ", "=", " : ", and space.

All functions associated with $\boxed{\text{ALPHA}}$ are color coded green, and are printed above each key.

Note: Do not type out math figures (***sin***, ***log***, etc.), graph equation names (**Y1**, **Y2**, etc.), list names (**L1**, **L2**, etc.), or matrix names (**mat A**, **mat B**, etc.), etc. with $\boxed{\text{ALPHA}}$ keys. If "SIN" is entered from $\boxed{\text{ALPHA}}$ mode, then each alphabet character — "S", "I" and "N" — will be entered as a variable. Call up the figure and equation names from within the second functions and various menus instead. If a colon (:) is used, data may continue to be entered in more than one term.

Entering one Alphabet character

Example

Enter $2 \times A$ on the screen.

1. Press $\boxed{\text{▦}}$ $\boxed{\text{CL}}$ to clear the screen. Enter "2 ×" by pressing 2 $\boxed{\times}$.
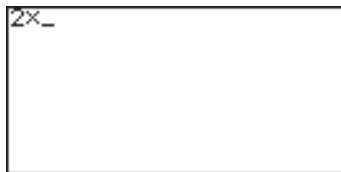
2. To enter "A", press $\boxed{\text{ALPHA}}$; the cursor pattern changes to "A̲" upon releasing the key.

3. Press $\boxed{\text{A}}$ to call "A" at the cursor.
   After the entry, the cursor pattern changes back to normal.

Entering 1 or More Alphabet characters

To type more than one alphabet character, use $\boxed{\text{2ndF}}$ then $\boxed{\text{ALPHA}}$ to apply the "ALPHA-LOCK". When done, press $\boxed{\text{ALPHA}}$ to escape from the mode.

Math Function Keys

Mathematical functions can be called up quickly with the Math Function keys.

| sin | Enters a sine function at the cursor |

| sin-1 | Enters an arc sine function at the cursor |

| cos | Enters a cosine function at the cursor |

| cos-1 | Enters an arc cosine function at the cursor |

| tan | Enters a tangent function at the cursor |

| tan-1 | Enters an arctangent function at the cursor |

| log | Enters a logarithm function at the cursor |

| 10^x | Enters "10 to the xth power", then sets the cursor at the "x" |

| ln | Enters a natural logarithm function at the cursor |

| e^x | Enters "e-constant to the power of x", then sets the cursor at the "x" |

| x^2 | Enters "^{2}" at the cursor, to raise a number to the second power |

| x^{-1} | Enters "$^{-1}$" at the cursor, to raise a number to the negative first power |

| $a\frac{b}{c}$ | Enters a mixed number. |

| a/b | Enters a fraction. |

| a^b | Enters an exponent. |

| $a\sqrt{}$ | By itself enters a "root" figure; the cursor will be set at "a", the depth. |

Note: If a number precedes $\boxed{\text{a}b\!\!/\!c}$ $\boxed{\text{a}\!\!/\!b}$ $\boxed{\text{a}^b}$ and $\boxed{\text{a}\sqrt{}}$, then the number will be set as the first entry of the figure. Else, the first entry is blank and the cursor flashes.

Examples

2 $\boxed{\text{a}b\!\!/\!c}$ 3 $\boxed{\blacktriangledown}$
4 $\boxed{\blacktriangleright}$

$2\dfrac{3}{\square}$

$\boxed{\text{CL}}$ $\boxed{\text{a}b\!\!/\!c}$
$\boxed{\blacktriangleleft}$ 2 $\boxed{\blacktriangleright}$ 3 $\boxed{\blacktriangledown}$ 4 $\boxed{\blacktriangleright}$

$\dfrac{\square}{\square}$

$\boxed{,}$ Enters " , " (a comma) at the cursor

$\boxed{\sqrt{}}$ Enters a "root" figure at the cursor

$\boxed{\text{STO}}$ Stores a number or a formula into a variable

$\boxed{\text{RCL}}$ Recalls an item stored in a variable

$\boxed{x/\theta/\text{T}/n}$ Enters a variable "x", "θ", "T", or "n". The variable is automatically determined according to the calculator's coordinate setup: "x" for rectangular, "θ" for polar, "T" for parametric, "n" for sequential.

$\boxed{\text{VARS}}$ Brings up the VARS menu.

MATH, STAT, and PRGM Menu Keys

By using the [MATH], [STAT], and [PRGM] keys, you can access many menu items for complex calculation tasks. The appendix "List of Menu/Sub-menu Items" shows the contents of each, with detailed descriptions of each sub-menu item.

Note that the contents of menu items differ drastically between the Basic keyboard and the Advanced keyboard. For example, the [PRGM] menu for the Basic mode contains only one item (**A EXEC**), while in the Advanced mode there are three menu items (**A EXEC, B EDIT**, and **C NEW**).

Example

Round the following number beyond the decimal point: 34.567

1. Press [⊞⊟] [CL], then [MATH]. The MATH menu takes over the screen, as shown to the right. MATH menu items are displayed on the left side of the screen.
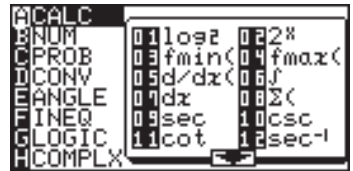
2. Use the [▲] and [▼] keys to move the cursor up and down the menu. As you scroll, you will see the corresponding sub-menu contents (shown on the right side of the screen) change.

3. Set the cursor at **B NUM**.

   Menu items can also be selected by using shortcut keys (**A** through **H**); in this example, simply press [B] to select **B NUM**. There is no need to use [ALPHA] for this operation.

4. Press a shortcut key [2] to select **2 round(**. The screen now goes back to the calculation screen, as follows:

   Another way of selecting the sub-menu item is to press [▶] (or [ENTER]) on the menu item **B NUM**. The cursor will be extended into the sub-menu on the right. Now, move the cursor on the sub-menu down to **2 round(**, then press [ENTER].

5. Type 3 4 [·] 5 6 7 [,] 0 [ )], and press [ENTER].
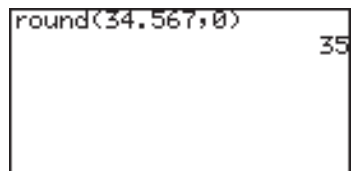
SETUP Menu

Use this menu to verify basic configurations, such as to define the calculator's editing preferences, and scientific and mathematical base units.

Checking the calculator's configuration

To check the current configuration of the calculator, press $\boxed{\text{2ndF}}$, then $\boxed{\text{SETUP}}$.

By entering menu items (**B DRG** through **H SIMPLE**), various setups can be changed. To exit the SETUP menu, press $\boxed{\text{CL}}$.

```
A┌──────
B│DRG   │Rad
C│FSE   │FloatPt
D│TAB   │9
E│COORD │Rect
F│ANSWER│Decimal(Real)
G│EDITOR│Equation
H│SIMPLE│Auto
```

Example

Display the calculation result of "1000^2" in scientific notation.

1. Press $\boxed{\text{2ndF}}$, then $\boxed{\text{SETUP}}$. Within the SETUP menu, press $\boxed{\text{C}}$, then $\boxed{3}$ to select **3 Sci** under the **C FSE** menu.

```
A┌──────
B│DRG   │1FloatPt
C│FSE   │2Fix
D│TAB   │3Sci
E│COORD │4Eng
F│ANSWER│
G│EDITOR│
H│SIMPLE│
```

Tips: Using the arrow keys, move the cursor down to the **C FSE** position, press $\boxed{\text{ENTER}}$, and then move the cursor down to the **3 Sci** position. Press $\boxed{\text{ENTER}}$ to select the sub-menu item.

2. The display goes back to the SETUP menu's initial screen.

3. Press $\boxed{\text{CL}}$ to exit the SETUP menu.

```
A┌──────
B│DRG   │Deg
C│FSE   │Sci
D│TAB   │9
E│COORD │Rect
F│ANSWER│Decimal(Real)
G│EDITOR│Equation
H│SIMPLE│Auto
```

4. Press $\boxed{\boxplus}$ $\boxed{\text{CL}}$ to clear the Calculation screen, type 1 0 0 0 $\boxed{x^2}$, then $\boxed{\text{ENTER}}$.

```
1000²
             1.000000000ᴇ6
```
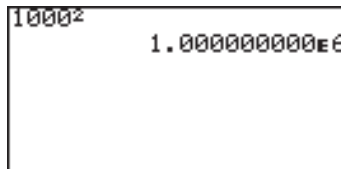
SETUP Menu Items

DRG: For trigonometric calculations and coordinate conversions, various angle units can be selected:

Deg Angle values to be set in degrees.

Rad Angle values to be set in radians (default).

Grad Angle values to be set in gradients

FSE: Various decimal formats can be set:

FloatPt Answers are given in decimal form with a floating decimal point (default).

Fix Answers are given in decimal form. The decimal point can be set in the TAB menu.

Sci Answers are given in "scientific" notation. For example, "3500" is displayed as "3.500000000E3". The decimal point can be set in the TAB menu.

Eng Answers are given in "engineering" notation with exponents set to be multiples of 3. "100000" will be displayed as "100.0000000E3", and "1000000" will be shown as "1.000000000E6". The decimal point can be set in the TAB menu.

Note: If the value of the mantissa does not fit within the range ±0.000000001 to ±9999999999, the display changes to scientific notation. The display mode can be changed according to the purpose of the calculation.

TAB: Sets the number of digits beyond the decimal point (0 through 9). The default is "9".

COORD: Sets the calculator to various graph coordinate systems.

Rect	Rectangular coordinates (default)
Param	Parametric equation coordinates
Polar	Polar coordinates
Seq	Sequential graph coordinates

ANSWER: Sets the answer preference to various number formats.

Decimal (Real)	Answers will be given in decimal form (default).
Mixed (Real)	Answers will be given in mixed fractions, whenever appropriate.
Improp (Real)	Answers will be given in improper fractions, whenever appropriate.
x±yi (Complex)	Answers will be given in complex rectangular form.
r∠θ (Complex)	Answers will be given in complex polar form.

EDITOR: Sets the editing style to one of two available formats.

Equation	Formulas can be entered in a "type it as you see it approach" (default setting).	5^3 $\qquad$ 125
One line	Formulas will be displayed on one line.	5^3 $\qquad$ 125

Notes: Immediately after changing the EDITOR, the calculator will return to the calculation screen and the following data will be cleared.
- ENTRY memory
- Equations stored in the graph equation window ($\boxed{\text{Y=}}$)
- Equations temporally stored in the SOLVER window ($\boxed{\text{2ndF}}$ $\boxed{\text{SOLVER}}$)

* Resetting to the default settings ($\boxed{\text{2ndF}}$ $\boxed{\text{OPTION}}$ $\boxed{\text{E}}$ $\boxed{\text{1}}$) will also clear the above data.

Expression of up to 114 bytes can be entered in the Equation edit mode. If the expression exceeds the screen width, it is horizontally extended.

Expression of up to 160 bytes can be entered in One-line edit mode. if the expression exceed the screen width, it goes to the next line.

SIMPLE: Sets the preference for handling reducible fractions.

Auto Fractions will automatically be reduced down (default).

Manual Fractions will not be reduced before simplifing (**Simp**).

Note: All the procedures in this manual are explained using the default settings unless otherwise specified.

Precedence of Calculations

When solving a mathematical expression, this calculator internally looks for the following figures and methods (sorted in the order of evaluation):

1) Fractions (1/4, a/b, ␣, etc.)
2) Complex angles ($\angle$)
3) Single calculation functions where the numerical value occurs before the function (X^2, X^{-1}, !, "°", "ʳ", and "ᵍ")
4) Exponential functions (a^b, $\sqrt[a]{}$, etc)
5) Multiplications between a value and a stored variable/constant, with "$\times$" abbreviated (2π, $2A$, etc.)
6) Single calculation functions where the numerical value occurs after the function (sin, cos, tan, $\sin^{-1}$, $\cos^{-1}$, $\tan^{-1}$, log, 10^x, ln, e^x, $\sqrt{}$, abs, int, ipart, fpart, (-), not, neg, etc.)

7) Multiplications between a number and a function in #6 (3cos20, etc. "cos20" is evaluated first)

8) Permutations and combinations (nPr, nCr)

9) ×, ÷

10) +, −

11) and

12) or, xor xnor

13) Equalities and nonequalities (<, ≤, >, ≥, ≠, =, →deg, →dms, etc.)

Example

The key operation and calculation precedence
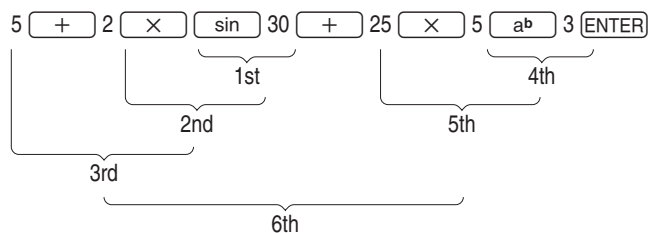
- If parentheses are used, parenthesized calculations have precedence over any other calculations.

- About the order of precedence of the multiplications, that the multiplication sign "×" before such as "(", π and a variable is abbreviated, are higher than that of the multiplications that the multiplication sign "×" is not abbreviated. Therefore, if there is a division before a multiplication, the order of calculations may be changed and then the calculation results may be changed.

Example

$48 \div 24 \times (6 + 2) =$

48 ÷ 24 × (6 + 2) ENTER

→ 16 〔(48 ÷ 24) × (6 + 2) =〕

48 ÷ 24 (6 + 2) ENTER

→ 0.25 〔48 ÷ (24 × (6 + 2)) =〕

Error Messages

The calculator will display an error message when a given command is handled incorrectly, or when instructions cannot be handled correctly such that the task cannot be processed further. Various types of error messages are given to inform users the types of situations to be remedied.

For example, performing the following key strokes:

    5   ×   ENTER

will result in an error, and the error message will be displayed.

```
       ERROR  01
[Syntax          ]

◀,▶:Goto error
CL :Quit
```
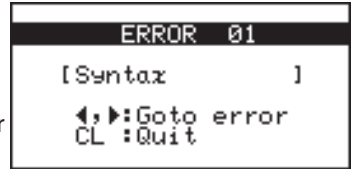
In such a situation, you can go back to the expression to correct its syntax by pressing ◀ or ▶, or you can erase the entire line to start over by pressing CL.

For a list of various error codes and messages, refer to the appendix.

Resetting the Calculator

Use the reset when a malfunction occurs, to delete all data, or to set all mode values to the default settings. The resetting can be done by either pressing the reset switch located in the battery compartment, or by selecting the reset in the OPTION menu.
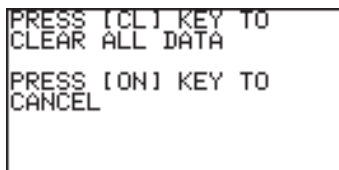
Resetting the calculator's memory will erase all data stored by the user; proceed with caution.

1. Using the reset switch

1. Pull down the notch to open the battery cover located on the back of the calculator.

2. Place the battery cover back until the notch is snapped on.

3. **Wait a few seconds** and press ⌈ ON ⌉.

   The verification window will appear on the screen.

   ```
   PRESS [CL] KEY TO
   CLEAR ALL DATA

   PRESS [ON] KEY TO
   CANCEL
   ```
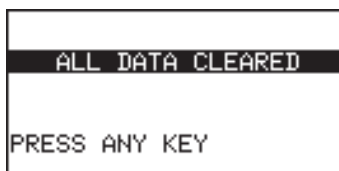
4. Press ⌈ CL ⌉ to clear all the stored data. Press ⌈ ON ⌉ to cancel resetting. After ⌈ CL ⌉ is pressed, the calculator's memory will be initialized. Press any key to display the calculation screen.

   ```
   ALL DATA CLEARED

   PRESS ANY KEY
   ```

Note: If the above verification window does not appear, remove the battery cover and gently push the **RESET** switch with the tip of a ball-point pen or a similar object while pressing ⌈ ON ⌉ simultaneously.

DO NOT use a tip of a pencil or mechanical pencil, a broken lead may cause a damage to the button mechanism.
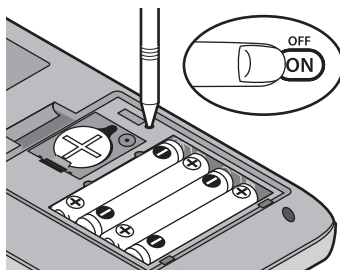
• The message on the right may occasionally appear. In this case, repeat the procedure from step 1 to prevent loss of data.

```
Calculator is not
initialized, or memory
has been impaired.

Press [CL] to
INITIALIZE and CLEAR
ALL DATA
```

2. Selecting the RESET within the OPTION menu

1. Press 2ndF, then OPTION. The OPTION menu appears.

```
ACTRST    LCD CONTRST
BMEMCHK
CDEL
DLINK
ERESET
          ┌──┬──────┬──┐
          │ + │▓▓▒▒ │ − │
          └──┴──────┴──┘
          DARK←───→LIGHT
```

2. While in the OPTION menu, press E to select **E RESET**; the RESET sub-menu items should appear on the right side of the screen.

```
ACTRST
BMEMCHK ┌─────────────┐
CDEL    │1default set │
DLINK   │2All memory  │
ERESET  │             │
        │             │
        └─────────────┘
```
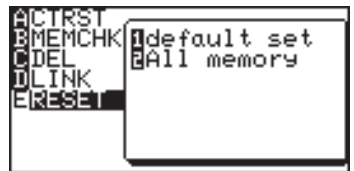
3. The first item **1 default set** will initialize only the SETUP and FORMAT settings, while the second item **2 All memory** will erase all memory contents and settings. To reset the memory, select **2 All memory** by pressing 2. The verification window will appear.

4. Press the CL key to clear all data stored on the calculator.
   Press any key to continue.

```
PRESS [CL] KEY TO
CLEAR ALL DATA

PRESS [ON] KEY TO
CANCEL
```

```
┌───────────────────────┐
│   ALL DATA CLEARED     │
└───────────────────────┘

PRESS ANY KEY
```

Chapter 3
Manual Calculations

1. Try it!

The speed of light is known to be 186,282 miles (approximately 300,000 kilometers) per second. That means light can go around the earth 7 and a half times within a second!

Suppose you are standing at the equator. While the earth rotates over the period of one day, you also rotate around the globe at a certain speed. Knowing the facts above, can you figure out how fast you are traveling, in miles per hour?

Since distance traveled = average speed × time taken, the following equation can be formed to find out the circumference of the earth (x miles):

$$x \times 7.5 = 186282$$

Then,

$$x = 186282 \div 7.5$$

Since you know the earth turns around once a day (which means, in 24 hours), divide the above "x" with 24 to get a value in miles per hour.

$$24 \times v = x$$

$$v = \frac{x}{24}$$

CONCEPT

1. Enter a math expression, then perform the calculation.

2. Save a number into a variable, then recall the value later.

PROCEDURE

1. First, press $\boxed{\begin{smallmatrix}▦▦\\▣▤\end{smallmatrix}}$, then $\boxed{\text{CL}}$ to clear any screen entries.

2. Type 186282 $\boxed{÷}$ 7.5, then press $\boxed{\text{ENTER}}$. The circumference of the earth is thus obtained.

```
186282÷7.5
                      24837.6
```

3. Store the answer in a variable. A variable is a symbol under which you can store a numerical value.

   We will use variable A to store the circumference of the earth. Press $\boxed{\text{STO}}$ to set the "store" mode. Press $\boxed{\text{ALPHA}}$ **A**, then $\boxed{\text{ENTER}}$ to store the answer. To call up the stored answer, press $\boxed{\text{ALPHA}}$ **A** $\boxed{\text{ENTER}}$ again.

```
186282÷7.5
                      24837.6
Ans⇒A
                      24837.6
```

Note: While checking the stored values, you may see "0"; this means that no value is stored in the variable.

4. Now, since the value you have stored under "A" is the distance you will be travelling in 24 hours, divide the number by 24. Press $\boxed{\text{ALPHA}}$ **A** $\boxed{÷}$ 24, then $\boxed{\text{ENTER}}$.

```
186282÷7.5
                      24837.6
Ans⇒A
                      24837.6
A÷24
                       1034.9
```

So, you are travelling at 1034.9 miles/hour. That is fast!

2. Try it!

The Mendocino Tree, a coast redwood growing in Montgomery Woods State Reserve in California, is known to be the tallest living tree in the world. You are to find out how tall the tree is by using the following factors:

- The distance from you to the bottom of the tree is exactly 505.8 feet, and the tree stands vertically.

- The angle of elevation between the top and the bottom of the tree is 36 degrees
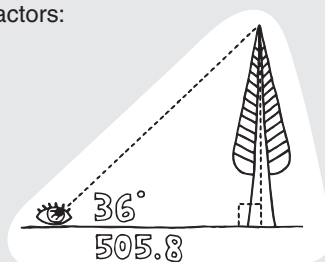
If the base length of the right triangle is 505.8 feet, and the angle of elevation is 36 degrees, then the following expression can be derived:

the height of the Mendocino tree (ft.) = 505.8 ft. × tan(36°)

CONCEPT

1. Verify/change the calculator's angle unit.

2. Use the calculator's trigonometric function key on the Advanced keyboard to enter/perform the calculation.

PROCEDURE

1. Since the angle of elevation is measured in degrees, the calculator's angle setting will need to be matched with that. Press $\boxed{2ndF}$ $\boxed{SETUP}$ to bring up the SETUP menu.

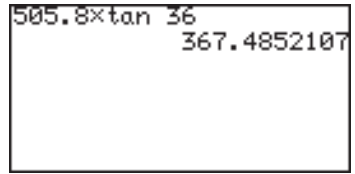2. On the right side of the SETUP menu, the current setup will be displayed. Make sure that the top line is indicated as **Deg** (i.e., degrees). If not, then the angle system will need to be changed. Press $\boxed{\text{B}}$ to select **B DRG**, then press $\boxed{1}$ to select **1 Deg.**

3. Now, let's work on the actual calculation part. Press the $\boxed{⊞}$ key to enter the Calculation screen, and press $\boxed{CL}$ to clear any screen entries.

4. Press 505.8 $\boxed{\times}$ $\boxed{\tan}$ 36. Press $\boxed{\text{ENTER}}$ to execute the calculation.

```
505.8×tan 36
              367.4852107
```

3. Arithmetic Keys

Performing addition, subtraction, multiplication and division

There are various keys for arithmetic calculations. Use the $\boxed{+}$ $\boxed{-}$ $\boxed{\times}$ $\boxed{\div}$, $\boxed{(-)}$, $\boxed{(}$ and $\boxed{)}$ keys to perform basic arithmetic calculations. Press $\boxed{\text{ENTER}}$ to solve an equation.

$\boxed{\text{ENTER}}$ Executes an expression.

Example

• Calculate 1 + 2.

$\boxed{\text{⊞⊟}}$ $\boxed{\text{CL}}$ 1 $\boxed{+}$ 2 $\boxed{\text{ENTER}}$

```
1+2
                        3
```

A Note about expressions

An expression is a mathematical statement that may use numbers and/or variables that represent numbers. This works just like a regular word sentence; one may ask "how are you?", and you may answer "okay." But what if an incomplete sentence is thrown, such as "how are"? You'll wonder, "how are... what?"; it just doesn't make sense. A math expression needs to be complete as well. *1 + 2*, *4x*, *2sinx + cosx* form valid expressions, while "1 +" and "cos" do not. If an expression is not complete, the calculator will display an error message upon pressing the $\boxed{\text{ENTER}}$ key.

$\boxed{+}$ Enters a "+" sign for addition.

Example

• Calculate 12 + 34.

$\boxed{\text{⊞⊟}}$ $\boxed{\text{CL}}$ 1 2 $\boxed{+}$ 3 4 $\boxed{\text{ENTER}}$

```
12+34
                       46
43-21
                       22
```

$\boxed{-}$ Enters a "–" sign for subtraction.

Example

• Subtract 21 from 43.

4 3 $\boxed{-}$ 2 1 $\boxed{\text{ENTER}}$

39

☒	Enters a "×" sign for multiplication.

Example

• Multiply 12 by 34.

1 2 ☒ 3 4 ENTER

```
12×34
            408
54÷32
         1.6875
```
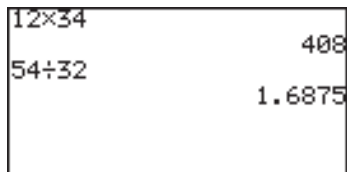
☐÷	Enters a "÷" sign for division.

Example

• Divide 54 by 32.

5 4 ☐÷ 3 2 ENTER

When to leave out the "×" sign

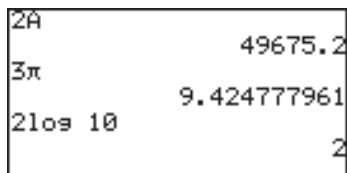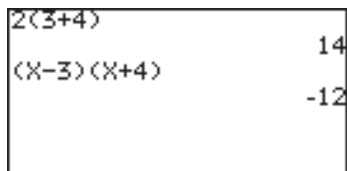The multiplication sign can be left out when:

a. It is placed in front of an open parenthesis.

b. It is followed by a variable or a mathematical constant (π, e, etc.):

c. It is followed by a scientific function, such as sin, log, etc.:

```
2(3+4)
             14
(X-3)(X+4)
            -12
```

```
2A
          49675.2
3π
       9.424777961
2log 10
              2
```

(−)	Sets a negative value.

Example

• Calculate -12 × 4.

(−) 1 2 ☒ 4 ENTER

```
-12×4
            -48
```

Note: Do not use the ☐− key to enter a negative value; use the (−) key instead.

(	Enters an open parenthesis. Use with ")" as a pair, or the calculation will result in an error.

)	Enters a closing parenthesis; a parenthesis left open will result in an error.

Example

• Calculate $(4 + 6) \div 5$.

$\boxed{(}$ 4 $\boxed{+}$ 6 $\boxed{)}$ $\boxed{\div}$
5 $\boxed{\text{ENTER}}$

Note: Functions, such as "round(",
automatically include an open
parentheses. Each of these functions needs to be closed with a
closing parenthesis.

```
(4+6)÷5
                    2
```

4. Calculations Using Various Function Keys

Use the calculator's function keys to simplify various calculation tasks.

$\boxed{\text{sin}}$ Enters a sine function to be used in a trigonometric calculation.

Example

• Calculate sine $\frac{\pi}{2}$.

$\boxed{\text{sin}}$ $\boxed{\text{2ndF}}$ $\boxed{\pi}$ $\boxed{a/_b}$ 2
$\boxed{\text{ENTER}}$

```
sin  π
     2
                    1
cos  π
     3
                  0.5
```

$\boxed{\text{cos}}$ Enters a cosine function to
be used in a trigonometric
calculation.

Example

• Calculate cosine $\frac{\pi}{3}$.

$\boxed{\text{cos}}$ $\boxed{\text{2ndF}}$ $\boxed{\pi}$ $\boxed{a/_b}$ 3 $\boxed{\text{ENTER}}$

$\boxed{\text{tan}}$ Enters a tangent function to be used in a trigonometric calculation.

Example

• Calculate tangent $\frac{\pi}{4}$.

$\boxed{\text{tan}}$ $\boxed{\text{2ndF}}$ $\boxed{\pi}$ $\boxed{a/_b}$ 4
$\boxed{\text{ENTER}}$

```
tan  π
     4
                    1
```

$\boxed{\text{sin}^{-1}}$ Enters an arcsine function to be used in a trigonometric expression.

Example

• Calculate arcsine 1.

$\boxed{\text{2ndF}}$ $\boxed{\text{sin}^{-1}}$ 1 $\boxed{\text{ENTER}}$

```
sin⁻¹ 1
            1.570796327
cos⁻¹ 0.5
            1.047197551
tan⁻¹ 1
            0.785398163
```

cos⁻¹   Enters an arccosine function to be used in a trigonometric expression.

Example

• Calculate arccosine 0.5.

2ndF cos⁻¹ 0.5 ENTER

tan⁻¹   Enters an arctangent function to be used in a trigonometric expression.

Example

• Calculate arctangent 1.

2ndF tan⁻¹ 1 ENTER

Note: Expressions with inverse trigonometric functions evaluate in the following ranges.

$\theta = \sin^{-1}x,\ \theta = \tan^{-1}x$ $\theta = \cos^{-1}x$

Deg: $0 \le |\theta| \le 90$ Deg: $0 \le |\theta| \le 180$

Rad: $0 \le |\theta| \le \frac{\pi}{2}$ Rad: $0 \le |\theta| \le \pi$

Grad: $0 \le |\theta| \le 100$ Grad: $0 \le |\theta| \le 200$

log   Enters a "log" function for a logarithmic calculation

Example

• Calculate log 100.
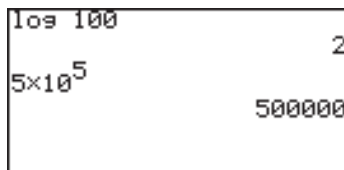
log 1 0 0 ENTER

10ˣ   Enters a base of 10, setting the cursor at the exponent.

Example

• Calculate 5×10^5.

5 × 2ndF 10ˣ 5
ENTER

```
los 100
                  2
5×10⁵
             500000
```

| In | Enters a natural logarithm function. |

Example

• Calculate In e^4.

In 2ndF e^x 4 ENTER.

| e^x | Enters the Euler Number e (2.71…) to a power. The cursor will then be placed at the exponent. |

Example

• Obtain a value of e^3.

2ndF e^x 3 ENTER.

| x^2 | Squares the preceding number. |

Example

• Obtain the answer to 12^2. (= 144)

12 x^2 ENTER

Note: When no base number is entered, the base number area will be left blank and just the exponent appear.

CL x^2 ◀ 1 2 ENTER

| x^{-1} | Enters "x^{-1}", and returns an inverse by raising a value to the -1 power. The inverse of "5", for example, is "$\frac{1}{5}$". |

Example

• Raise 12 to the -1 power. (= 0.083333333)

1 2 2ndF x^{-1} ENTER

Note: When no base number is entered, "x^{-1}" will be entered, with "x" left blank.

CL 2ndF x^{-1} ◀ 1 2 ENTER

| $a^b/_c$ | Enters a mixed number. |

Example

• Enter $4\frac{5}{6}$

4 $a^b/_c$ 5 ▶ 6

Note: When no value is entered prior to this key, the number areas will be left blank.

* If the calculator is set to one-line mode, $\boxed{ab\!/\!c}$ enters "⌴" (integer-fraction separator) only. Use $\boxed{ab\!/\!c}$ in combination with $\boxed{a\!/\!b}$ as follows.

• Enter $4\frac{5}{6}$ in one-line mode
4 $\boxed{ab\!/\!c}$ 5 $\boxed{a\!/\!b}$ 6

```
4⌴5⌐6
```

* Integer part of the mixed number must be a natural number. A variable can not be used. Equation or use of parenthesis, such as (1+2)⌴2⌐3 or (5)⌴2⌐3, causes syntax error.

* When a numerator or a denominator is negative, the calculator will cause error.

$\boxed{a\!/\!b}$ Enters a fraction, setting the preceding number as its numerator.

* If the calculator is set to one-line mode, then "⌐" will be entered instead. For example, "2⌐5" indicates "$\frac{2}{5}$".

Example

• Calculate $\frac{2}{5} + \frac{3}{4}$.

2 $\boxed{a\!/\!b}$ 5 $\boxed{\blacktriangleright}$ $\boxed{+}$ $\boxed{a\!/\!b}$
3 $\boxed{\blacktriangleright}$ 4 $\boxed{\blacktriangleright}$ $\boxed{\text{ENTER}}$

$$\frac{2}{5} + \frac{3}{4}$$

$$1.15$$
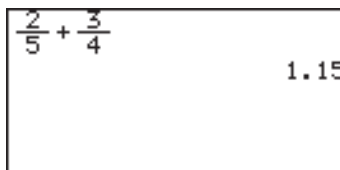
$\boxed{a^b}$ Enters an exponent, setting the preceding number as its base.

Example

• Raise 4 to the 5th power. (= 1024)

4 $\boxed{a^b}$ 5 $\boxed{\text{ENTER}}$

Note: When no base value is entered, "a^b" will be entered with both number areas left blank.

> ⌐CL⌐ ⌐ a^b ⌐ ⌐ ◀ ⌐ 4 ⌐ ▶ ⌐ 5 (ENTER)

When calculating x to the power of m-th power of n, enter as follows;

• Calculate 2^{3^2} (= 512)

> 2 ⌐ a^b ⌐ 3 ⌐ a^b ⌐ 2 (ENTER)

The above calculation is interpreted as $2^{3^2} = 2^9$.

If you wish to calculate $(2^3)^2 = 8^2$, press ⌐ (⌐ 2 ⌐ a^b ⌐ 3 ⌐ ▶ ⌐ ⌐) ⌐ ⌐ a^b ⌐ 2 (ENTER).

⌐ $a\sqrt{}$ ⌐   Enters "$\sqrt[a]{}$".

Example

• Bring 4 to the 5th root. (= 1.319507911)

> 5 (2ndF) ⌐ $a\sqrt{}$ ⌐ 4 (ENTER)

Note: When no depth of power is entered, "$\sqrt[a]{}$" is entered, with both number areas left blank.

> ⌐CL⌐ (2ndF) ⌐ $a\sqrt{}$ ⌐ 5 ⌐ ▶ ⌐ 4 (ENTER)

⌐ $\sqrt{}$ ⌐   Enters a square root symbol.

Example

• Obtain the square root of 64. (= 8)

> (2ndF) ⌐ $\sqrt{}$ ⌐ 6 4 (ENTER)

⌐ , ⌐   Enters a comma " , " at the cursor. A comma is required in some of the MATH functions. For more information, refer to the next section "Calculations Using MATH Menu Items" in this chapter.

STO   Stores a number in a variable.

Example

- Let A = 4, and B = 6.

  Calculate A + B.

  4 STO ALPHA A ENTER

  6 STO ALPHA B ENTER

  ALPHA A [+] ALPHA B ENTER

```
4⇒A
                4
6⇒B
                6
A+B
               10
```

RCL   Recalls a variable.

Example

- Set C = 8.

  8 STO ALPHA C ENTER

  Recall the value of C.

  2ndF RCL ALPHA C ENTER

```
8⇒C
                8


RCL C
```

x/θ/T/n   Enters a variable "x", "θ", "T", or "n". The variable is automatically determined according to the calculator's coordinate setup: "x" for rectangular, "θ" for polar, "T" for parametric, "n" for sequential.

VARS   Accesses the VARS menu. Refer to chapters 4 to learn how to use each item in this menu.

{ [}]   Enter braces to group numbers as a list.

ANS   Recalls the previous answer. Use this key to incorporate the answer to the previous calculation into an expression.

Example

- Perform 3×3.

  3 [×] 3 ENTER

  Subtract the value of the previous answer from "10".

  1 0 [−] 2ndF ANS ENTER

```
3×3
                9
10-Ans
                1
Ans+4
                5
```

Note: ANS can be considered as a variable; its value is automatically set when ENTER is pressed. If ANS is not empty, then pressing [+], [−], [×], or [÷] will recall "Ans" and places it at the beginning of an expression. If "1" was the previous answer, then pressing [+] 4 ENTER will result in "5".

ENTRY Recalls the previous entry. This is useful when you want to modify the previous entry, rather than reenter the whole expression over.

> **Example**
> • Calculate 4 × 6.
>
>   4 ⌐ × ┐ 6 ENTER
>
>   Next, calculate 4 × 8.
>
>   ⌐ 2ndF ┐ ENTRY ⌐ BS ┐ 8 ENTER

```
4×6
                              24
4×6

```

Note: Executed expressions are stored in a temporary memory in the executed order. If the temporary memory is full, the oldest data is automatically deleted. Be aware that ENTRY may not function on these occasions.

A maximum of 160 bytes can be stored in the temporary memory. The capacity may vary when there are division codes between expressions.

When switching from equation edit mode to one-line edit mode in the SETUP menu, all the numerical and graph equations stored in the temporary memory are cleared and cannot be recalled.

π Enters "pi". Pi is a mathematical constant, representing the ratio of the circumference of a circle to its diameter.

> **Example**
> • Enter "2π". (= 6.283185307)
>
>   2 ⌐ 2ndF ┐ ⌐ π ┐ ENTER

CATALOG Calls up the CATALOG menu. From the CATALOG menu, you can directly access various functions in the menus.

> • Functions are listed in alphabetic order.
> • Move the cursor using the ⌐ ▲ ┐/⌐ ▼ ┐ keys and press ENTER to access or enter the function.
> • Press ALPHA and an appropriate alphabetic key (A to Z) to navigate the catalog.
> • Press ALPHA ⌐ ▲ ┐ / ALPHA ⌐ ▼ ┐ to scroll the catalog page by page and press ⌐ 2ndF ┐ ⌐ ▲ ┐ / ⌐ 2ndF ┐ ⌐ ▼ ┐ to jump to the beginning or the end of the catalog.
> • The functions accessible only from the CATALOG menu are:
>
>   →a␣b/c, →A.*xxx*, →b/c, *e*, **int÷**, **remain**, **rndCoin**, **rndDice**, **Simp**, **%**.

Please refer to the following explanation.

→ **a␣b/c**   Converts an improper fraction to a mixed number.

Example

• Change $\frac{12}{5}$ to a mixed number.

12 `a/b` 5 `▶` → **a␣b/c**
`ENTER`

$$\frac{12}{5} \rightarrow a\llcorner b/c$$
$$2\frac{2}{5}$$

→**A.xxx**   Converts a fraction to a decimal number.

Example

• Change $\frac{12}{5}$ to a decimal number.

12 `a/b` 5 `▶` →**A.xxx** `ENTER`

$$\frac{12}{5} \rightarrow A.xxx$$
$$2.4$$
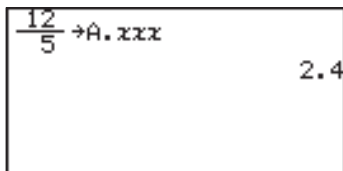
→**b/c**   Converts a mixed number to an improper fraction.

Example

• Change $2\frac{2}{5}$ to an improper fraction.

2 `ab/c` 2 `▶` 5 `▶`
→ **b/c** `ENTER`

$$2\frac{2}{5} \rightarrow b/c$$
$$\frac{12}{5}$$
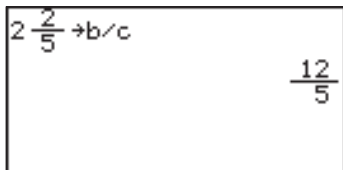
Note: Above three conversions will not affect the ANSWER settings in the SET UP menu.
If a decimal number is not rational, fraction conversion will not function and display the answer in decimal format.

About → **a␣b/c** and → **b/c**

• Only a value that can be converted to a fraction is displayed in a fraction form.

• Only a rational number within 10 digits can be simplified, if **Manual** is selected in the SETUP menu, item **H SIMPLE.** (Default setting is **Auto** for simplifying fractions.)

• A List or Matrix format can be used. (The elements of a list and matrix of the calculation results are in one line.)

e   **Enter the eular number.**

Example

e `ENTER`

e
2.718281828
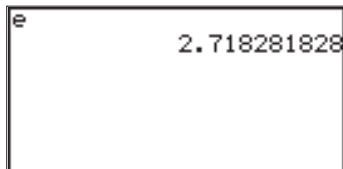
int÷ Ausfuhrung einer Ganzzahlen-Teilung und Ausgabe des Quotienten und des Rests.

Example

• Get a quotient and a remainder of 50 ÷ 3.

   50 **int÷** 3 ENTER

   * Quotient value is set to Ans memory and remainder is not stored.

```
50int÷3
  Quotient :        16
  Remainder:         2
```

remain Returns the remainder of a division.

Example

• Obtain the remainder when 123 is divided by 5.

   1 2 3 **remain** 5 ENTER

```
123remain5
                   3
```

rndCoin Returns a specified number of random integers to simulate a coin flip: 0 (head) or 1 (tail). The size of the list (i.e., how many times the virtual coin is thrown) can be specified. (The same as rndInt (0, 1, number of times))

Example

• Make the calculator flip a virtual coin 4 times.

   rndCoin (4)

   ENTER

```
rndCoin (4)
               {0 0 0 1}
rndDice (11)
{5 5 1 3 2 6 6 5 6 3 …
```

rndDice Returns specified number of random integers (1 to 6) to simulate rolling dice. The size of the list (i.e., how many times the die is thrown) can be specified. (The same as rndInt (1, 6, number of times))

Example

• Make the calculator roll a virtual die 11 times.

   rndDice (11) ENTER

Note: The random functions, (**rndCoin** and **rndDice**) will generate different numbers every time.

Simp   Simplifies a given fraction stored in the ANSWER memory.

> • Set the **ANSWER** mode to **Mixed**(**Real**) or **Improp (Real)**, and the **SIMPLE** mode to **Manual** in the SETUP menu to use this key.

Specifying no common factor

Simplify the fraction using the lowest common factor other than 1.

Example

1 $\boxed{a/b}$ 12 $\boxed{\blacktriangleright}$ $\boxed{+}$ 5
$\boxed{a/b}$ 12 $\boxed{\text{ENTER}}$

Simp $\boxed{\text{ENTER}}$ (Simplified by 2, the lowest common factor of 1 an 6.)

Simp $\boxed{\text{ENTER}}$ (Simplified by 3, the lowest common factor of 6 and 3.)

Specifying a common factor

Simplify the fraction using the zspecified common factor.

Example

1 $\boxed{a/b}$ 12 $\boxed{\blacktriangleright}$ $\boxed{+}$ 5
$\boxed{a/b}$ 12 $\boxed{\text{ENTER}}$

Simp 6 $\boxed{\text{ENTER}}$ (Manually specify 6, the Greatest Common Factor of 12 and 6, to simplify the fraction.)

Note: If the wrong number is specified for a common factor, an error will occur.
Simp is effective in a fraction calculation mode only (when the **ANSWER** mode is set to **Mixed(Real)** or **Improp(Real)** in the SETUP menu).

%   Set the preceding value as a percentage.

Example

• Get 25% of 1234.

  1 2 3 4 $\boxed{\times}$ 2 5 $\boxed{\text{2ndF}}$
  % $\boxed{\text{ENTER}}$

  * Percentage must be a
    positive value equal to or
    less than 100.

```
1234×25%
                 308.5
```

Note :   • The CATALOG commands and the equivalent keys:

CATAROG command	Equivalent key
$\llcorner$	$\boxed{a / b}$
$\wedge$	$\boxed{a^b}$
^{2}	$\boxed{x^2}$
$^{-1}$	$\boxed{x^{-1}}$
$\Rightarrow$	$\boxed{\text{STO}}$
C	$\boxed{\text{MATH}}$ $\boxed{\text{C}}$ nCr
P	$\boxed{\text{MATH}}$ $\boxed{\text{C}}$ nPr
$\sqcup$	$\boxed{ab/c}$

Note :   • **Sequen** and **Simul** features can also be accessible from the
    CATALOG menu.

5. Calculations Using MATH Menu Items
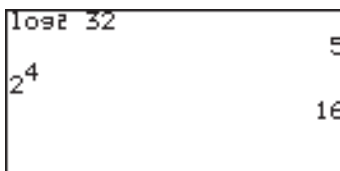
The MATH menu contains functions used for more elaborate math concepts such as trigonometry, logarithms, probability, and math unit/format conversions. The MATH menu items may be incorporated into your expressions.

A Note about Degrees and Radians

The degree and radian systems are two of the basic methods of measuring angles. There are 360 degrees in a circle, and "2-pi" radians. 1 degree is equal to pi/180 radians. "Then, what's this pi?", you may ask. Pi, or to use its symbol "π", is the ratio of the circumference of a circle to its diameter. The value of π is the same for any circle "3.14...", and it is believed to have an infinite number of digits beyond the decimal point.

A CALC Contains sub-menu tools for advanced calculations.

01 log₂   **log₂ *value***

Enters a base-2 logarithm ($\log_2$).

02 2ˣ   **2*value***
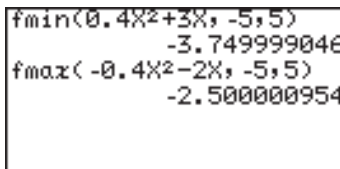
Raises 2 to a power. Sets the cursor to exponent.

```
log2 32
                    5
2^4
                   16
```

03 fmin(**fmin(*equation, lower limit of x, upper limit of x*)**

Returns the value of variable x when the equation Y has the minimum value within the specified range of x.
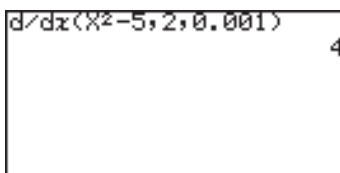
```
fmin(0.4X²+3X, -5,5)
            -3.749999046
fmax( -0.4X²-2X, -5,5)
            -2.500000954
```

04 fmax(**fmax(*equation, lower limit of x, upper limit of x*)**

Return the value of variable x when the equation Y has the maximum value within the specified range of x.

05 d/dx(**d/dx(*equation, value of x [, tolerance]*)**

Returns derivative of equation Y at the specified X value using the tolerance (if not specified, default value is 1E–5).

```
d/dx(X²-5,2,0.001)
                    4
```

06 ∫ **∫ *equation, lower limit, upper limit [, tolerance] dx***

Calculates an integral value
of equation Y from the lower
limit to the upper limit using
the specified tolerance (if not
specified, default value is 1E–5).
Use in conjunction with the **07
dx** sub-menu item.

```
x³-0.5x²+6),0.001dx
                              972
```

• Press the keys as follows in the Equation edit mode.
  [MATH] [A] [0] [6] 2 [▲] 8 [▶] [( ] [x/θ/T/n]
  [aᵇ] 3 [▶] [−] 0.5 [x/θ/T/n] [x²] [+] 6 [ )] [,]
  0.001 [MATH] [A] [0] [7] [ENTER]

07 dx   Enters a differential "***dx***" in an integration expression.

08 ∑(**∑(*expression, initial value, end value [, increment]*)**

Returns the cumulative sum of a
given expression from an initial
value to an end value in the
specified increment value (if not
specified, default increment is 1).

```
Σ(X+2,1,5)
                               25
```

09 sec **sec *value***

Enters a secant function to
be used in a trigonometric
expression.

```
sec 10
            -1.191793507
csc 10
            -1.838163961
cot 10
             1.542351045
```

10 csc **csc *value***

Enters a cosecant (cosec) function to be used in a trigonometric
expression.

11 cot **cot *value***

Enters a cotangent (cotan) function to be used in a trigonometric
expression.

12 sec⁻¹ **sec⁻¹ *value***

Enters an inverse secant.

```
sec⁻¹ 10
             1.470628906
csc⁻¹ 10
             0.100167421
cot⁻¹ 10
             0.099668652
```

13 csc⁻¹   **csc⁻¹ *value***

Enters an inverse cosecant.

14 cot⁻¹   **cot⁻¹ *value***

Enters an inverse cotangent.

15 sinh   **sinh *value***

Enters a hyperbolic sine.

16 cosh   **cosh *value***

Enters a hyperbolic cosine.

```
sinh 10
              11013.23287
cosh 10
              11013.23292
tanh 10
              0.999999995
```

17 tanh   **tanh *value***

Enters a hyperbolic tangent.

18 sinh⁻¹   **sinh⁻¹ *value***

Enters an inverse hyperbolic sine.

19 cosh⁻¹   **cosh⁻¹ *value***

Enters an inverse hyperbolic cosine.

```
sinh 10
              11013.23287
cosh 10
              11013.23292
tanh 10
              0.999999995
```

20 tanh⁻¹   **tanh⁻¹ *value***

Enters an inverse hyperbolic tangent.

B NUM   Use the sub-menu items below to convert a value.

1 abs(**abs(*value*)**

Returns an absolute value.

*   A real number, a list, matrix, variable, or equation can be used as values.

Example

• Find an absolute value of "-40.5".

[MATH] [B] [1] [(−)] 4 0
. 5 [ENTER]

```
|-40.5|
              40.5
```

2 round(**round(*value [, digit number of decimals]*)**

Returns the rounded value of the term in parentheses. A rounding point can be specified.

*   A real number, a list, matrix, variable, or equation can be used as values.

Example

• Round off 1.2459 to the nearest hundredth. (= 1.25)

[MATH] [B] [2] 1 . 2 4 5 9 [,] 2 [ )] [ENTER]

3 ipart   **ipart** *value*

Returns only the integer part of a decimal number.

*   A real number, a list, matrix, variable, or equation can be used as values.

Example

• Discard the fraction part of 42.195. (=42)

  MATH   B   3 4 2 . 1 9 5 ENTER

4 fpart   **fpart** *value*

Returns only the fraction part of a decimal number.

*   A real number, a list, matrix, variable, or equation can be used as values.

Example

• Discard the integer part of 32.01. (=0.01)

  MATH   B   4 3 2 . 0 1 ENTER

5 int   **int** *value*

Rounds down a decimal number to the closest integer.

Example

• Round down 34.56 to the nearest whole number. (= 34)

  MATH   B   5 3 4 . 5 6 ENTER

6 min(**min(** *list* **)**

Finds and returns the minimum value within a list of numbers. To define a list of more than two numbers, group the numbers with brackets (2ndF { and 2ndF }), with each element separated by a comma.

Example

• Find the smallest value among 4, 5, and -9.

  MATH   B   6 2ndF
  { 4 , 5 , (–)
  9 2ndF }) ENTER

```
min({4,5, -9})
                    -9
max({4,5, -9})
                     5
```

7 max(**max(** *list* **)**

Finds and returns the maximum value within a list of numbers.

Example

• Find the smallest value among 4, 5, and -9.

  MATH   B   7 2ndF { 4 , 5 , (–) 9
  2ndF }) ENTER

8 lcm(**lcm(*natural number, natural number*)**

Returns the least common multiple of two integers.

Example

- Find the least common multiple of 12 and 18.

  [MATH] [B] [8] 1 2 [,] 1 8 [ )] [ENTER]

9 gcd(**gcd*(natural number, natural number)***

Returns the greatest common divisor of two integers.

Example

- Find the greatest common divisor of 16 and 36.

  [MATH] [B] [9] 1 6 [,] 3 6 [ )] [ENTER]

```
lcm(12,18)
                          36
gcd(16,36)
                           4
```
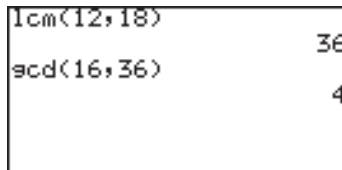
C PROB   These sub-menu items are useful for probability calculations.

1random   **random *[(number of trial)]***

Returns a random decimal number between 0 and 1.

Example

- Make a list with three random numbers.

Note: Set the "FSE" to "Fix" and "TAB" to "0".

[2ndF] [{] [MATH] [C]
[1] [×] 100 [,] [MATH]
[C] [1] [×] 100 [,]
[MATH] [C] [1] [×] 100 [2ndF] [}] [ENTER]

```
m ×100,random ×100}
              {17 63 48}
rndInt(1,6,3)
               {4 3 2}
```
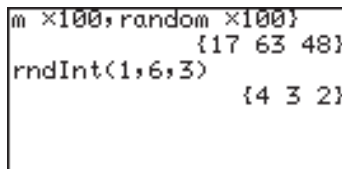
2 rndInt(**rndInt(*minimum value, maximum value [, number of trial]*)**

Returns a specified number of random integers, between a minimum and a maximum value.

Example

- Produce eight random integers, ranging between values of 1 and 6.

  [MATH] [C] [2] 1 [,] 6 [,] 3 [ )] [ENTER]

  * Minimum value: $0 \le x_{min} \le 10^{10}$

  Maximum value: $0 \le x_{max} \le 10^{10}$

  Number of trial: $1 \le n \le 999$

3 rndNorm(**mdNorm (*mean, standard deviation [,number of trial]*)**

Returns a random real number from a specified normal distribution.

* Number of trial :
1 ≤ *n* ≤ 999(*n* is an integer.)

```
rndNorm(0,1)
                 0.319223002
```

4 rndBin(**rndBin (*number of trial,*) *probability of success [, number of simulations]*)**

Returns a random real number from a specified normal distribution.

* Number of trial : 1 ≤ *n* ≤ 9999
Probability of success : 0 ≤ p ≤ 1
Number of simulations :
1 ≤ *n* ≤ 999(*n* is an integer.)

```
rndBin(5,0.2)
                           1
```

Note: The random functions will generate different numbers every time. Therefore, the table values of the random functions will be different every time. When in case of random-based graphing calculations, the tracing values and other parameters of the graph will not match the graph's visual representation.

5 nPr Returns the total number of different arrangements (permutations) for selecting "r" items out of "n" items.

$$_nP_r = \frac{n!}{(n - r)!}$$

Example

• How many different ways can 4 people out of 6 be seated in a car with four seats?

6 MATH C 5 4 ENTER

```
6P4
                         360
```

6 nCr Returns the total number of combinations for selecting "r" item out of "n" items.

$$_nC_r = \frac{n!}{r!(n - r)!}$$

Example

• How many different groups of 7 students can be formed with 15 students?

1 5 MATH C 6 7 ENTER

```
6P4
                         360
15C7
                        6435
6!
                         720
```

7 !   Returns a factorial.

Example

- Calculate $6 \times 5 \times 4 \times 3 \times 2 \times 1$.

  6 [MATH] [C] [7] [ENTER]

D CONV

These tools deal with conversions between different angle units and between rectangular and polar coordinates.

Sexagesimal and Degree System

The "base 60" sexagesimal system, as well as the minutes-second measurement system, was invented by the Sumerians, who lived in the Mesopotamia area around the fourth millennium B.C.(!) The notion of a 360 degrees system to measure angles was introduced to the world by Hipparchus (555-514 B.C.) and Ptolemy (2nd cent. A.D.), about 5000 years later. We still use these ancient systems today, and this calculator supports both formats.

1 →deg   Takes a number in sexagesimal form, and converts it into a decimal number. To enter a number in sexagesimal form, use items in the "ANGLE" sub-menu, described in the next subsection of this Chapter.

Example

- Convert 34° 56' 78" to degrees.

  3 4 [MATH] [E] [1] 5

  6 [MATH] [2] 7 8 [MATH]

  [3] [MATH] [D] [1]

  [ENTER]

```
34°56'78"→deg
                34.955
```
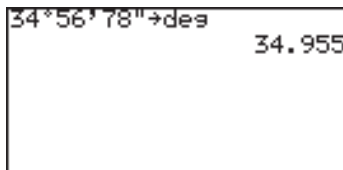
2 →dms   Takes a number in decimal form (in degrees), and converts it into a sexagesimal number.

Example

- Show 40.0268 degrees in degrees, minutes, and seconds.

  40.268 [MATH] [D] [2]

  [ENTER]

```
40.0268→dms
              40°1'36.48"
```
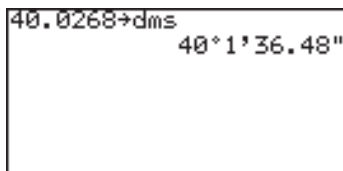
Rectangular/polar coordinate conversion
This calculator is equipped with rectangular coordinates and polar coordinates conversion capabilities.
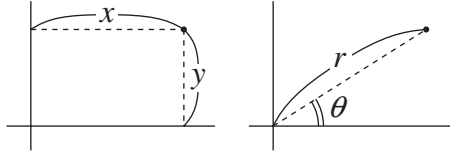
Rectangular to polar coordinate conversion functions
Conversion formulas: $r = (x^2 + y^2)^{1/2}$, $\theta = tan^{-1}(y/x)$

Polar to rectangular coordinate conversion functions
Conversion formulas: $x = rcos\theta$, $y = rsin\theta$

3 xy→r(**xy→r(*x coordinate, y coordinate*)**
Returns polar coordinate radius value from X-Y rectangular coordinates.

```
xy→r(1,1)
            1.414213562
```

4 xy→θ(**xy→θ(*x coordinate, y coordinate*)**
Returns polar coordinate θ value from X-Y rectangular coordinates.
The following ranges are used to find θ.

```
xy→θ(1,1)
            0.785398163
```

   Degree mode: $0 \le |\theta| \le 180$
   Radian mode: $0 \le |\theta| \le \pi$
   Gradient mode: $0 \le |\theta| \le 200$

5 rθ→x(**rθ→x(*r coordinate*, *θ coordinate*)**
Returns rectangular coordinate X value from r-θ polar coordinates.

```
rθ→x(1.414213562, π/4)
            0.999999999
```

6 rθ→y(**rθ→y(*r coordinate, θ coordinate*)**
Returns rectangular coordinate Y value from r-θ polar coordinates.

```
rθ→y(1.414213562, π/4)
            0.999999999
```

E ANGLE   Use these tools to enter the symbols to specify angle units.

    1 °   Inserts a degree, and sets the preceding value in degrees.

    2 '   Inserts a minute, and sets the preceding value in minutes.

    3 "   Inserts a second, and sets the preceding value in seconds.

    Example
- Enter 34° 56' 78".
  3 4 [MATH] [E] [1]
  5 6 [MATH] [2] ← "E ANGLE" remains selected;
  7 8 [MATH] [3]   type the number to enter the symbols.
  [ENTER]

```
34°56'78"
                    34.955
2ʳ
              114.591559
```
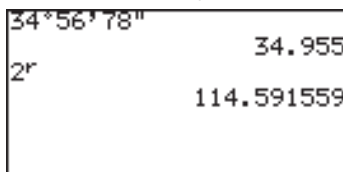
    4 r   Enters an "r", to enter a number in radians.

    Example
- Type 2 radian.
  2 [MATH] [E] [4] [ENTER]

    5 g   Enters an "g" symbol, to enter a number in gradients.

F INEQ   Use the equality/inequality figures to compare two values. These sub-item tools return 1 (true) or 0 (false).

    1 =   Tests whether a preceding value and a following value are equal.

    2 ≠   Tests whether a preceding value and a following value are not equal.

```
1=2
                         0
1≠2
                         1
1>2
                         0
```

    3 >   Tests whether a preceding value is larger than a following value.

    4 ≥   Tests whether a preceding value is larger than OR equal to a following value.

    5 <   Tests whether a preceding value is smaller than a following value.

```
1≥2
                         0
1<2
                         1
1≤2
                         1
```

    6 ≤   Tests whether a preceding value is smaller than OR equal to a following value.

G LOGIC   Use the **LOGIC** sub-menu items to perform boolean operations. In the
N-base calculation mode (binary, octal, decimal and hexadecimal),
A LOGIC will directly appear when $\boxed{\text{MATH}}$ is pressed.
The following is the truth table of the combination of input A and B:

A	B		A and B	A or B	A xor B	A xnor B		A	notA
1	1		1	1	0	1		1	0
1	0		0	1	1	0		0	1
0	1		0	1	1	0			
0	0		0	0	0	1			

The following examples show the answer screen when
executing a boolean operation for AND, OR, XOR,
XNOR between "1100" and "1010" in binary mode.
Compare the results (binary) to the above table.

1. Press $\boxed{\text{▦▤}}$ $\boxed{\text{2ndF}}$ $\boxed{\text{TOOL}}$ $\boxed{\text{ A }}$ $\boxed{\text{ENTER}}$ to enter the binary,
   octal, and hexadecimal calculation mode.

2. Press $\boxed{\blacktriangledown}$ $\boxed{\blacktriangledown}$ $\boxed{\blacktriangledown}$ to select the binary mode.

1 and   ***value A* and *value B***
Enters an "AND" logic figure.
1100 $\boxed{\text{MATH}}$ $\boxed{\text{ 1 }}$ 1010 $\boxed{\text{ENTER}}$

```
HEX:
                    0
DEC:
                   08
OCT:
                   08
BIN:
1100and 1010_       0
   BIN:
                 1000
```

2 or   ***value A* or *value B***
Enters an "OR" logic figure.
1100 $\boxed{\text{MATH}}$ $\boxed{\text{ 2 }}$ 1010 $\boxed{\text{ENTER}}$

```
HEX:
                    E
DEC:
                   14
OCT:
                   16
BIN:
                 1110
```

3 not   **not *value***
Enters a "NOT" logic figure.
$\boxed{\text{MATH}}$ $\boxed{\text{ 3 }}$ 10 $\boxed{\text{ENTER}}$

```
HEX:
           FFFFFFFFFD
DEC:
                   -3
OCT:
           7777777775
BIN:
    1111111111111101
```

4 neg   **neg value**
Enters a "neg" logic figure.
[MATH] [4] 1 [ENTER]

```
HEX:
              FFFFFFFFFF
DEC:
                      -1
OCT:
               7777777777
BIN:
       1111111111111111
```

Note: "4 neg" menu appears only in
the N-base calculation (binary,
octal, decimal and hexadecimal)
mode.

5 xor   *value A* **xor** *value B*
Enters an Exclusive-OR (xor)
logic figure.
1100 [MATH] [5] 1010 [ENTER]

```
HEX:
                       6
DEC:
                       6
OCT:
                       6
BIN:
                     110
```

6 xnor   *value A* **xnor** *value B*
Enters an Exclusive-NOR (xnor)
logic figure.
1100 [MATH] [6] 1010 [ENTER]

```
HEX:
              FFFFFFFFF9
DEC:
                      -7
OCT:
               7777777771
BIN:
       1111111111111001
```

H COMPLX In order to use the sub-menu items within the COMPLX menu, the
calculator must be set up to handle complex numbers. Otherwise the
result will be a data type error.
Refer to the section "SETUP Menu Items" in chapter 2 for changing/
verifying the calculator's **setup to enable complex number answers**, in
either rectangular or polar coordinates.

1 conj(**conj(***complex number***)**
Returns the complex conjugate
of the specified complex number
(or list of complex numbers).

```
conj(5+2i)
                   5-2i
```

2 real(**real(***complex number***)**
Returns the real part of a
complex number (or list of
complex numbers).

```
real(5+2i)
                      5
```

3 image(**image(*complex number*)**

Returns the imaginary part of a complex number (or list of complex numbers).

```
image(5+2i)
                    2
```

4 abs(**abs(*complex number*)**

Returns the absolute value of a complex number (or list of complex numbers).

```
|5+2i|
          5.385164807
```

5 arg(**arg(*complex number*)**

Takes the coordinates (x + yi), and returns the θ.

```
arg(5+2i)
          0.380506377
```

Calculations using complex numbers

To calculate using complex numbers, select the sub-menu item **4 *x* ± *yi*** or **5 *r* ∠θ** in the **F ANSWER** of the **SETUP** menu items.

The initial screen for the complex number calculation mode is the same as for the real number mode.

Complex numbers can be noted using either **4 *x* ± *yi*** (rectangular coordinates) or **5 *r* ∠θ** (polar coordinates).

```
A--------
BDRG     1Decimal(Real)
CFSE     2Mixed(Real)
DTAB     3Improp(Real)
ECOORD   4x±yi(Complex)
FANSWER  5r∠θ(Complex)
GEDITOR
HSIMPLE
```

Example

- Calculate (3 + 4*i*) × (4 − 6*i*)

Note : It is possible to input complex numbers (*i*) in the real number mode, however an error message will return.

```
(3+4i)×(4-6i)
              36-2i
```

Functions available for complex number calculations

The following function keys are available for complex number calculations without the limits existing in the real number calculations.

$\boxed{x^2}$, $\boxed{x^{-1}}$, $\boxed{\log}$, $\boxed{\ln}$, $\boxed{10^x}$, $\boxed{e^x}$, $\boxed{a^b}$, $\boxed{\sqrt{}}$, $\boxed{a\sqrt{}}$

The following MATH menu functions are also available for complex number calculations.

abs(, round(, ipart, fpart, int

6. More Variables: Single Value Variables and LIST Variables

Additional single value variables (from **A** to **Z**, and θ) may be accessed. In addition, six LIST variables (from **L1** to **L6**) are readily accessible through the second function.

To save a list of numbers, follow the procedure below:

1. On the Calculation screen ($\boxed{\begin{smallmatrix}\blacksquare\square\\\square\blacksquare\end{smallmatrix}}$), create a list of numbers ("1, 2, 3", in this example). Separate numbers with a comma ($\boxed{,}$), and group the numbers with braces ($\boxed{\{}$ and $\boxed{\}}$).

2. Press $\boxed{\text{STO}}$, then select one of the six LIST variables. To store the list in "L1", press $\boxed{\text{2ndF}}$ $\boxed{\text{L1}}$ to call up the LIST variable.

{1,2,3}⇒L1

3. Pressing $\boxed{\text{ENTER}}$ will store the list in the LIST variable. Note that this procedure will overwrite the list previously stored in the LIST variable.

{1,2,3}⇒L1
{1 2 3}

Refer to Chapter 7 "LIST Features" to learn more about how LIST variables can be utilized.

7. TOOL Menu

The **TOOL** menu contains items to help calculating in different number systems, as well as to help solve both linear and polynomial equation. Press $\boxed{\text{2ndF}}$ $\boxed{\text{TOOL}}$ to access the **TOOL** menu. Press the $\boxed{\begin{smallmatrix}\blacksquare\square\\\square\blacksquare\end{smallmatrix}}$ key (or $\boxed{\text{2ndF}}$ $\boxed{\text{QUIT}}$) to escape from the menu.

A NBASE   Calculations can be performed in different number base systems, while simultaneously converting the calculation result into hexadecimal, decimal, octal, and binary systems.

1. While this menu item **A NBASE** is selected, press the ENTER key. The NBASE tool opens, with the cursor set at **HEX:** (hexadecimal).

```
HEX:                    0
DEC:                    0
OCT:                    0
BIN:                    0
```

2. Type 1B × 9, for example. When entering the hexadecimal **B**, simply press the B key; using the ALPHA key will call up the variable **B** instead.

3. When done entering the hexadecimal expression, press ENTER. The calculation result will be displayed in three other number base systems, as well as in hexadecimal format.

```
HEX:                   F3
DEC:                  243
OCT:                  363
BIN:            11110011
```

Note : Numerical values in binary, octal, and hexadecimal modes can be expressed in the following number of digits:

> Binary: 16 digits
> Octal: 10 digits
> Hexadecimal: 10 digits

If you enter a number exceeding the range specified above for calculations or conversions, the calculator will return an error.

If the answer exceeds the above range, the calculator will also return an error.

Decimals can be used for DEC mode only (· cannot be used in the other modes). If you convert decimal values to binary, octal, or hexadecimal number, the decimal part is discarded and only the integer part is converted.

When numerical values of binary, octal, and hexadecimal modes are negative, the display is switched to complements of 2.

B SYSTEM With this tool, linear equations containing up to 6 unknown values (i.e., $ax + by + cz + du + ev + fw = g$) can be solved.

1. Press ☐ B ☐ to select **B SYSTEM**, and select the number of unknown values. For example, press ☐ 2 ☐ if values x and y are unknown.

2. In the next screen, an equation $ax + by = c$ is displayed, with an entry table for the known values — a, b, and c.

3. Enter 2 sets of the known values, as shown in the figure. Pressing ☐ENTER☐ at each entry will store the value, and sets the cursor at the next entry area.

4. When done entering the known values, press ☐2ndF☐ ☐EXE☐. The calculation result will be displayed on the next screen.

   Pressing ☐CL☐ will bring back the previous entry screen.

5. To go back to the TOOL menu to perform another calculation, press ☐2ndF☐ ☐TOOL☐.

C POLY This tool is designed so that quadratic ($ax^2 + bx + c = 0$) or cubic ($ax^3 + bx^2 + cx + d = 0$) equation may be solved.

1. Press ☐ C ☐ to select **C POLY**, and select the degree. For example, press ☐ 2 ☐ if a quadratic equation is desired.
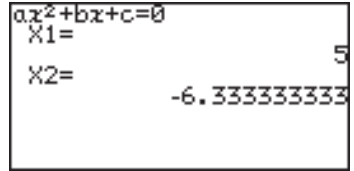
2. In the next screen, an equation $ax^2 + bx + c = 0$ is displayed, with an entry area for the known values — a, b, and c.

3. Enter the values, as shown in the screen to the right. Pressing ☐ENTER☐ at each entry will store the value, and sets the cursor at the next entry area.

4. When done, press $\boxed{\text{2ndF}}$ $\boxed{\text{EXE}}$ to execute the calculation. The results (i.e. the x-intersects) will be displayed.

5. To enter a different set of numbers for a, b, and c, press $\boxed{\text{CL}}$ to go back to the previous screen. To select a different degree of polynomial, press $\boxed{\text{2ndF}}$ $\boxed{\text{TOOL}}$ to go back to the TOOL menu.

```
ax²+bx+c=0
 X1=
                           5
 X2=
                -6.333333333
```

• If the solution cannot be displayed on the screen, a symbol will appear at the bottom left corner of the screen. Press $\boxed{\blacktriangledown}$ to scroll the screen.

Chapter 4
Graphing Features

1. Try it!

There are two taxi cab companies in your city, Tomato Cab and Orange Cab, with different fare systems. The Tomato Cab charges 2.00 Euro upon entering the taxi cab, and 1.80 Euro for each mile the taxi travels. The Orange Cab, on the other hand, charges 3.50 Euro plus 1.20 Euro per mile. This means that taking the Tomato Cab will initially cost less than going with the Orange Cab, but will be more expensive as you travel longer distances.

Suppose you need to go to a place 3 miles away from where you are now. Which cab company should you take to save money?
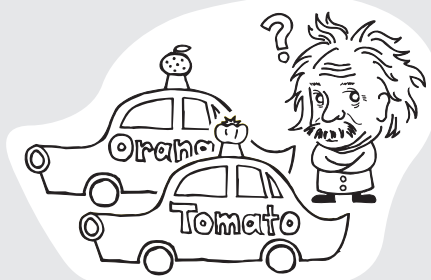
Two math expressions can be derived from the above fare systems. If "y" represents the cost, while "x" represents the mileage, then:

$y = 2 + 1.8x$ .... Tomato Cab's fare system

$y = 3.5 + 1.2x$ .... Orange Cab's fare system

Use the calculator's graphing capabilities to figure out the approximate point where the Orange Cab gets ahead of the Tomato Cab, in terms of cost performance.

CONCEPT

1. By using two linear graphs, the approximate crossing point can be found.
2. The exact crossing point can be found with the TABLE function.
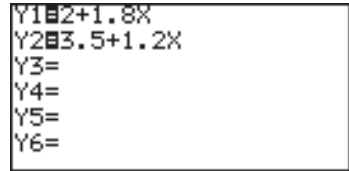
PROCEDURE

1. Press $\boxed{\text{Y=}}$ to enter the Graph Equation window. Six equation entry areas appear, from "Y1=" to "Y6=". Since we need only two equations in this exercise, let's use "Y1=" and "Y2=".

2. By default, the cursor should be placed on the right side of the "Y1=" equation, next to the equal sign. If this is not so, use the cursor keys to bring the cursor to the "Y1=" line, then press the $\boxed{\text{CL}}$ key to clear any entries. The cursor will automatically be placed to the right of the equal sign.

3. Enter the first equation, "2 + 1.8X", to represent the Tomato Cab's fare system.

   2 $\boxed{+}$ 1 . 8 $\boxed{x/\theta/T/n}$

   Use the $\boxed{x/\theta/T/n}$ key to enter the "x", representing the distance in miles.

4. When the equation line is complete, press $\boxed{\text{ENTER}}$. The first equation is now stored, and the cursor automatically jumps to the second line, where the second equation can be entered.

5. At the second line, press $\boxed{\text{CL}}$ to clear any entries, then enter "3.5 + 1.2X" to represent the Orange Cab's fare system. When done entering the equation, press

   ```
   Y1∎2+1.8X
   Y2∎3.5+1.2X
   Y3=
   Y4=
   Y5=
   Y6=
   ```

   $\boxed{\text{ENTER}}$. The two equations are now ready to graph.

6. Press $\boxed{\text{GRAPH}}$ to draw the graphs.
   To draw a graph, "=" must be highlighted. If not, move the cursor to "=" of the targeted equation and press $\boxed{\text{ENTER}}$ to draw a graph, and press $\boxed{\text{ENTER}}$ again not to draw a graph.

   Graph Basics

   The graph examples in this exercise are called X-Y graphs. An X-Y graph is quite useful for clearly displaying the relationship between two variables.

7. Let's take a look at the graph. The vertical axis represents the Y value, while X is represented by the horizontal axis. It appears that the two diagonal lines cross at the point where the X value is somewhere between 2 and 3, indicating that Orange Cab costs less than the other, after 3 miles of traveling.
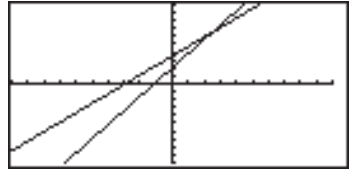
8. Next, press [TABLE] to find the values per graph increment. When the traveling distance is 2 miles, the Tomato Cab charges 30 cents less overall than the Orange Cab, but it costs 30 cents more at 3 miles. To make the X increment smaller, press [2ndF] [TBLSET].

9. When the Table setting window appears, move the cursor down to "TBLStep", type [·] [5], and press [ENTER]. Now the Y values will be sampled at every 0.5 mile.

10. Press [TABLE] to show the table again. It indicates that when the X value is 2.5, both Y1 and Y2 values are 6.5. It is now clear that if you are traveling 2.5 miles or more, the Orange Cab costs less.

2. Try it!

You have just opened your own bank account, with an initial deposit amount of 2000 Euro. Suppose your monthly income is 3000 Euro, and you will spend 60 percent of what you have in the account every month, how much will your balance be after one year? How much will you have in the account, 6 months from now?
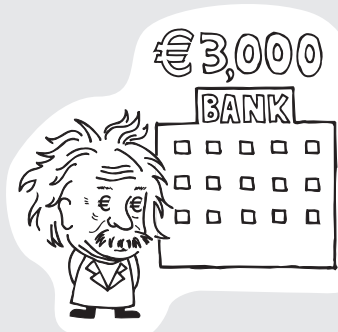
The example can be expressed as a sequential equation, as follows:

$$u_n = u_{n-1} \times (1 - 0.6) + 3000$$

where u_n is the balance of the current month and u_{n-1} is the balance of the previous month, and n is the month.

CONCEPT

1. Grasp the idea of sequential equations.
2. Use the graph tracing function to obtain approximate values.

PROCEDURE

1. First, let us set the calculator to the appropriate graphing coordinate mode. Press [2ndF] [SETUP] to enter the **SETUP** menu, press [E] to select **E COORD**, then press [4] to select **4 Seq**, and press [CL].

2. We will use the "Time" sequential graph type within the **FORMAT** menu. Press [2ndF] [FORMAT], press [G] to select **G TYPE**, and [2] to select **2 TIME**.

3. Then press [Y=]. The Graph Equation Entry window will open.

4. Enter a new equation set $u(n-1) \times (1 - 0.6) + 3000$ for $u(n)=$. Press [2ndF] [u] ([7]) to enter u and press [x/θ/T/n] for n. Press [ENTER] when done entering.
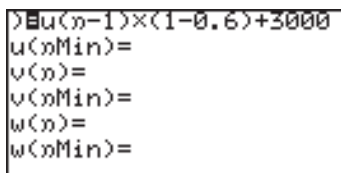
Note: Press [CL] to clear the previous entry. Using a capitalized "U" or "N" here will result in an error upon pressing the [GRAPH] key.

5. On the second entry row ($u(nMin) =$), enter 2000, then press [ENTER]. The figure is automatically enclosed by braces.

6. The v and the w entry sets will not be necessary in this case, so press [CL] to clear, then press [ENTER] to move one row down. Repeat until the four unnecessary entry rows are cleared.

7. Press [GRAPH] to draw the graph.
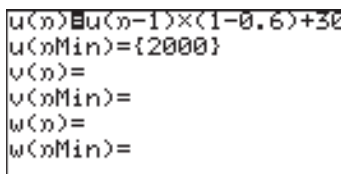
8. If the line is outside of the graph's range, press [ZOOM] then [1] to select automatic zoom. This will only display a small portion of the graph, so the graph's range will need to be changed.
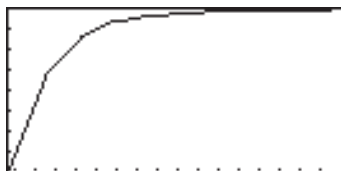
9. Press WINDOW. Find **n**Max= and change the value to 15 (default: 10). Next, find **Xmax**= and change the value to 15 too (default: 10).

```
Window (Seq)
 nMin=1
 nMax=15
 PlotStart=1
 PlotStep=1
 Xmin=1
 Xmax=15
↓Xscl=5.714285714ᴇ-1
```

10. Press the GRAPH key again.

11. Use the graph trace function by pressing TRACE. As ▶ is pressed several times, the n value (=X value, since the graph is set to "Time" format) increases, and the Y value (the balance of your account) will change. Find the Y value when the n value is 6 (after 6 months) as well as the value when n=12 (after 12 months = 1 year).

```
n=12
X=12        ...Y=4999.874171..
```

You can obtain the value directly from the CALC menu.

1. Press 2ndF CALC and select **1 VALUE**.
    n= will appear on the bottom line of the screen.

```
n=6
```

2. Enter the **n** value of 6, and press ENTER.

3. Follow the procedure 1 to 2 to obtain the Y value for 12.

3. Explanations of Various Graphing Keys

The explanations in this section are based on the rectangular coordinates.

$\boxed{\text{Y=}}$ **:** Displays the Graph Equation window. Up to 10 different equations can be entered.
After the graph expression is entered, press $\boxed{\text{ENTER}}$ to store the equation.

$\blacksquare$ **:** The expression can be represented as a graph.

= **:** The expression cannot be drawn as a graph.

   • Move the cursor pointer to the "=" sign and press $\boxed{\text{ENTER}}$ to change between to-draw and not-to-draw.

Note: To switch the window back to the calculation screen, simply press the $\boxed{\text{⊞⊟}}$ key.

$\boxed{\text{GRAPH}}$ **:** Draws a full-screen graph based on the equation(s) entered in the Graph Equation window. To cancel the graph drawing, press $\boxed{\text{ON}}$.

Note: If no equations are entered in the Graph equation window, only the vertical (Y) and horizontal (X) axis will be displayed upon pressing the $\boxed{\text{GRAPH}}$ key.

$\boxed{\text{TABLE}}$ **:** Displays the graph values in a table. The default sample increment value of the graph's X axis is "1". See "11. Tables."

$\boxed{\text{WINDOW}}$ **:** Displays the graph window setup. The setup values — the minimum/maximum X/Y values, and X/Y-axis scale — can be changed manually:

   1. While the graph is displayed on the screen, press the $\boxed{\text{WINDOW}}$ key. The following window appears, with the cursor set at "Xmin=".


```
Window (Rect)
 Xmin=0
 Xmax=3
 Xscl=0.5
 Ymin=0
 Ymax=4
 Yscl=0.5
```

   2. The required X-minimum value can be entered here. This limits the left boundary of the graph window. For example, if "Xmin=" is set to "0", then the portion of the graph's Y-axis to the left will not be displayed.

   3. Once the "Xmin=" value is entered ("0", for example), press $\boxed{\text{ENTER}}$. The left limit of the graph is now set, and the cursor moves to "Xmax=".

   4. Now the right boundary of the graph can be set. Enter the required value here ("3", for example), and press $\boxed{\text{ENTER}}$.

Note: The "Xmax=" value cannot be set equal to or smaller than the value of "Xmin". If so done, the calculator will display an error message upon attempting to redraw the graph, and the graph will not be displayed.

5. The next item "Xscl=" sets the frequency of the X-axis indices. The default value is "1". If, for example, the value is set to "0.5", then indices will be displayed on the X-axis at increments of 0.5. Enter the required "Xscl=" value ("0.5", for example), and press ENTER.

6. The "Ymin=", "Ymax=", and "Yscl=" can be set, as was described for "Xmin=", "Xmax=", and "Xscl=" above.

7. When done, press the GRAPH key to draw the graph with the newly configured window setup.

See "10. Setting a Window".

ZOOM**:** Displays the ZOOM menu. Within the ZOOM menu, various preferences can be set for the graph appearance on zooming in/ out. The menu items with each function and the sub-menu items are described below:

A ZOOM

1 Auto According to the WINDOW setup, the graph will be zoomed in by adjusting the "Ymin" (the minimum Y value) and "Ymax" (the maximum Y value) according to the "Xmin" (the minimum X value) and "Xmax" (the maximum X value). When this item is selected, the graph will automatically be redrawn.

Note: The "Auto" sub-menu item is directly affected by how the WINDOW items are set up. Refer to the WINDOW key section in this chapter to learn how to set up the Xmin and Xmax items.

2 Box A box area can be specified with this sub-menu tool so that the area within the box will be displayed full screen.

To select a box area to zoom:

1. While the ZOOM menu item is selected within the ZOOM window, press 2 to select **2 Box**.

2. The graph appears on the screen. Use the cursor keys to position the cursor at a corner of the required box area. Press ENTER to mark the point as an anchor.

3. Once the initial anchor is set, move the cursor to a diagonal corner to define the box area. When the required area is squared off, press ENTER.
   If a mistake is made, the anchor can be removed by pressing the ⌈ CL ⌋ key.

4. The graph will automatically be redrawn.

3 In A zoomed-in view of the graph will be displayed, sized according to the **B FACTOR** set up under the ZOOM menu. For example, if the vertical and horizontal zoom factors are set to "2", then the graph will be magnified two times. Refer to the **B FACTOR** segment of this section for more information.

4 Out The graph image will be zoomed out according to the **B FACTOR** setup under the ZOOM menu.

5 Default The graph will be displayed with default graph setting (Xmin = -10, Xmax = 10, Xscl = 1, Ymin = -10, Ymax = 10, Yscl = 1)

6 Square Set the same scale for X and Y axes. The Y-axis scale is adjusted to the current X-axis scale. The graph will be redrawn automatically.

7 Dec Sets the screen dot as 0.1 for both axes. The graph will then be redrawn automatically.

8 Int Sets the screen dot as 1.0 for both axes. The graph will then be redrawn automatically.

9 Stat Displays all points of statistical data set.

B FACTOR

Use this menu to set the vertical and horizontal zooming factor. The factor set under this menu directly affects the zoom rate of the **3 In** and **4 Out** sub-menu tools under the ZOOM menu, as described above.

To set the zooming factor, do the following:

1. Within the **B FACTOR** menu, press [ENTER] to activate the setup tool.

```
Zoom factor
X_Fact=
                        4
Y_Fact=
                        4
```

2. When the "Zoom factor" window appears, the cursor is automatically placed at "X_ Fact=". The default zoom factor is 4; enter the required value here.

3. Pressing [ENTER] after entering a value will switch the cursor position to "Y_Fact=". Enter the required zooming factor, and press [ENTER].

4. To go back to the ZOOM menu, press the [ZOOM] key.

C POWER

1 x^2   Use this zooming tool when the equation contains a form of "x^2".

2 x^{-1}   Use this zooming tool when the equation contains a form of "x^{-1}".

3 $\sqrt{x}$ Use this tool to zoom correctly when the equation contains a form of "$\sqrt{x}$".

D EXP

1 10^X   Use this tool when the equation contains a form of "10^x".

2 e^x   Use this tool when the equation contains a form of "e^x".

3 log X   Use this tool when the equation contains a form of "$log\ x$".

4 In X   Use this tool when the equation contains a form of "$In\ x$".

E TRIG

1 sin X   Use this when the equation contains a sine function.

2 cos X Use this when the equation contains a cosine function.

3 tan X Use this when the equation contains a tangent function.

4 sin⁻¹ X Use this when the equation contains an arc sine function.

5 cos⁻¹ X Use this when the equation contains an arc cosine function.

6 tan⁻¹ X Use this when the equation contains an arc tangent function.

F HYP

1 sinh X Use this when the equation contains a hyperbolic sine function.

2 cosh X Use this when the equation contains a hyperbolic cosine function.

3 tanh X Use this when the equation contains a hyperbolic tangent function.

4 sinh⁻¹ X Use this when the equation contains an inverse hyperbolic sine function.

5 cosh⁻¹ X Use this when the equation contains an inverse hyperbolic cosine function.

6 tanh⁻¹ X Use this when the equation contains an inverse hyperbolic tangent function.

G STO

Under this menu item there is one tool that enables the storing of graph window settings.

1 StoWin By selecting this sub-menu item, the current graph window setup will be stored.

Note: The actual graph image will not be stored with this tool.

H RCL

Under this menu item there are two tools that enable the recalling of the previous graph window setup:

1 RclWin On selecting this sub-menu item, the previously stored window setup will be recalled, and the graph will be redrawn accordingly. If no window setup has been stored previously, the default graph window setup will be used.

2 PreWin On selecting this sub-menu item, the window setup prior to the current zoom setup will be recalled, and the graph will be redrawn accordingly.

[TRACE]**:** Press this button to trace the graph drawn on the screen, to obtain the X-Y coordinates:

1. While the graph is displayed, press the [TRACE] key. The cursor appears, flashing on the graph line, with the present X-Y coordinates.

2. Trace the graph using the [◄] or [►] keys. The [◄] key decreases the value of x, while the [►] key increases it.

3. Pressing the [TRACE] key again will redraw the graph, with the cursor at the center of the screen. If the cursor is moved beyond the range of the screen, pressing the [TRACE] key will redraw the screen centered around the cursor.

4. When done, press the [CL] key to escape the tracing function.
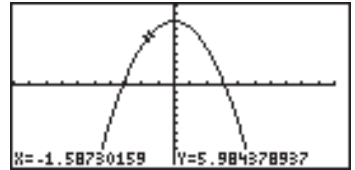
If more than one graph is displayed on the screen, use the [▲] or [▼] keys to switch the cursor from one graph to the other.

Note: If the [TRACE] key is not activated, the cursor will not be bound to the graph. Pressing the [◄], [►], [▲], or [▼] keys will position the free-moving flashing cursor on the graph display.

4. Graph Modes

• This calculator has four graph modes (rectangular coordinate graph, parametric coordinate graph, polar coordinate graph, and sequence graph).

• To select a mode, use the SETUP menu (**E COORD**).

Rectangular (X-Y) coordinates

Parametric coordinates

Polar coordinates

Sequence coordinates

5. Graphing Parametric Equations

A two-dimensional parametric equation assumes that both X and Y are represented by functions in a third variable T. When set in parametric graphing mode, the calculator automatically sets up the Graph Equation Entry screen to take one set of X and Y per each graph, with the equation's right side variable to be set as "T".

Example

• Draw a graph: $x(t) = 16cos(t), y(t) = 9sin(t)$.

1. Press ⟨2ndF⟩ ⟨SETUP⟩ to enter the SETUP menu.

2. Press ⟨ E ⟩ to select **E COORD**, then ⟨ 2 ⟩ to select **2 Param**.

   Be sure that the other settings are as shown on the right.

   To exit the SETUP menu, press ⟨ CL ⟩.

   ```
   A───────
   BDRG     Rad
   CFSE     FloatPt
   DTAB     9
   ECOORD   Param
   FANSWER  Decimal(Real)
   GEDITOR  Equation
   HSIMPLE  Auto
   ```

3. Press ⟨ Y= ⟩ to go to the Graph Equation Entry window.

4. Enter *16cos(t)* for **X1T=**. Press ⟨ENTER⟩ when done entering.

5. Enter *9sin(t)* for **Y1T=**. Press ⟨ENTER⟩ when done entering.

   ```
   X1T■16cos T
   Y1T■9sin T
   X2T=
   Y2T=
   X3T=
   Y3T=
   ```
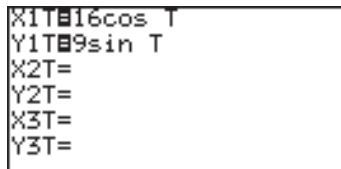
Note: The right side variable is automatically set to "T". When the ⟨x/θ/T/n⟩ key is pressed within the Graph Equation Entry window, it will enter the variable "T".

6. Press ⟨GRAPH⟩ to draw the graph.

7. If the graph line extends beyond the screen, press ⟨ZOOM⟩ and select **A ZOOM** then **1 AUTO**.
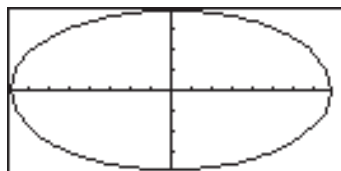
   Use **3 IN** or **4 OUT** of the **A ZOOM** to adjust the drawing size.

   You can also set the drawing size in the WINDOW menu by determining the maximum and minimum values of T, X and Y.

6. Polar Graphing

Polar coordinates are a different method of specifying a point in two dimensions; the location of the point is described by the distance from the X-Y intersect "r", and its elevation angle "θ".
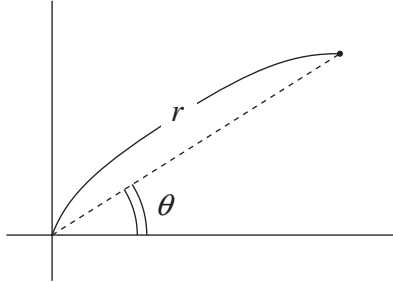
Example

• Draw a graph: *r = 16cos(θ)sin(θ)*.

1. Press 2ndF SETUP.
   The SETUP menu appears.

2. Press E to select **E COORD**, then press 3 to select **3 Polar**. Be sure that the other settings are as shown on the right.
   To exit the SETUP menu, press CL.

3. Press Y=.
   The Graph Equation Entry window will appear.

4. At the first entry row **R1=**, enter *16cos(θ) × sin(θ)*.
   Press ENTER.

5. Press GRAPH to draw the graph.
   Press ZOOM, then press 6 to select **6 Square**.
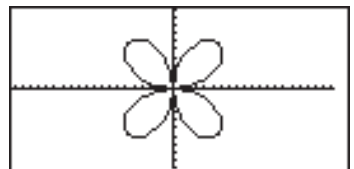
7. Der Folgenmodus

Mit der Setup-Einstellung COORD Seq können Sie bis zu drei explizite oder rekursive Folgengleichungen u(n), v(n), w(n) eingeben und zeichnen.

Die Variablen u, v, w werden als Zweitbelegungen ($\boxed{\text{2ndF}}$) der Tasten $\boxed{\quad 7 \quad}$ bis $\boxed{\quad 9 \quad}$ eingegeben, die Variable n mit der Taste $\boxed{x/\theta/T/n}$.

Eine Folge ist eine geordnete, nummerierte Abfolge von Zahlen. Man unterscheidet rekursive und explizite Folgengleichungen. Bei einer expliziten Gleichung wird für die Berechnung des n-ten Folgenglieds ausschließlich die Variable n benutzt, bei einer rekursiven Gleichung ausschließlich der Wert von $u_{(n-1)}$.

Am Beispiel der Folge {1, 2, 4, 8, 16, 32, …} bedeutet dies:

$u(n) = 2^n$ (explizite Darstellung)

$u(n) = 2\, u_{(n-1)}$ (rekursive Darstellung)

Unter $\boxed{\text{2ndF}}$ $\boxed{\text{FORMAT}}$ $\boxed{\quad \text{G} \quad}$ (TYPE) sind fünf verschiedene Einstellungen für das Zeichnen von Folgen möglich. Die Standardeinstellung ist *Time*.

Wird nicht das erwartete Schaubild gezeichnet oder erscheint die Fehlermeldung "Invalid", so kann dies an einer falschen Einstellung von *TYPE* liegen.

Zur Basis n (Time)

An der x-Achse werden die Werte von n abgetragen, an der y-Achse die Werte der Folgenglieder.

Einstellung uv

u(n) wird an der x-Achse abgetragen, *v(n)* an der y-Achse. Die Einstellungen **uw** und **vw** sind analog.

Einstellung Web

Hier steht die x-Achse für $u_{(n-1)}$ und die y-Achse für *u(n)*. In dieser Einstellung ist eine rekursive Folgendarstellung zwingend.

Beispiel 1: Folgendarstellung in der Standardeinstellung Time

Zeichnen Sie die Folge $u(n) = 2^n$

Stellen Sie zuerst sicher, dass die Grafikkoordinaten auf sequentiell eingestellt sind (siehe S. 85).

1. Betätigen Sie ⎡2ndF⎤ ⎡FORMAT⎤, um in das Format-Menü zu gelangen.

2. Wählen Sie ⎡ G ⎤ (TYPE) ⎡ 2 ⎤ (Time).

3. Durch Drücken von Y gehen Sie jetzt in das Eingabefenster für Folgengleichungen.
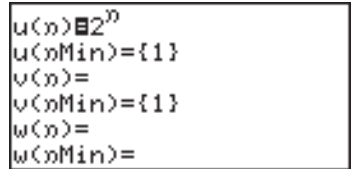
   Der Cursor ist auf der ersten Zeile $u(n)$; durch Drücken von ⎡CL⎤ werden bestehende Einträge gelöscht und der Cursor auf die rechte Seite der Gleichung bewegt.

4. Geben Sie 2^n ein. Verwenden Sie die Taste ⎡x/θ/T/n⎤ zur Eingabe von n.
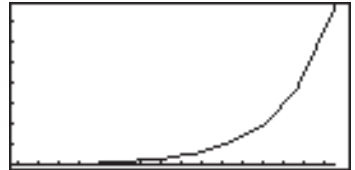
5. Wählen Sie ⎡ZOOM⎤ ⎡ A ⎤ ⎡ 1 ⎤ für die automatische Zoomfunktion, um automatisch geeignete Fenstereinstellungen zu bestimmen.

6. Mithilfe von ⎡TRACE⎤ können Sie nun konkrete Werte der Folge ablesen.

Beispiel 2: Darstellung mit der Einstellung uv

Vergleiche die Folge $2 \times 0.9^{(n-1)}$ mit der vorher eingegebenen Folge.

Die Folge 2^n ist noch vom vorhergehenden Beispiel unter *u(n)* gespeichert. Nun soll die Folge *v(n)* definiert werden und der Darstellungstyp geändert werden.

1. Drücken Sie ⌈2ndF⌉ ⌈FORMAT⌉ ⌈ G ⌉ ⌈ 3 ⌉, um *uv* zu wählen.
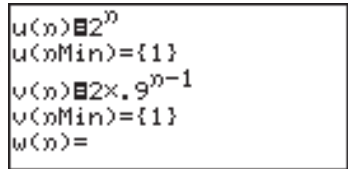
2. Drücken Sie ⌈ Y= ⌉ und geben Sie in der Zeile *v(n)* die Gleichung
   $2 \times 0.9^{(n-1)}$ ein.

3. Wählen Sie ⌈ZOOM⌉ ⌈ A ⌉ ⌈ 1 ⌉ für die automatische Zoomfunktion, um automatisch geeignete Fenstereinstellungen zu bestimmen. Mithilfe von ⌈TRACE⌉ können Sie nun konkrete Werte der beiden Folgen ablesen.
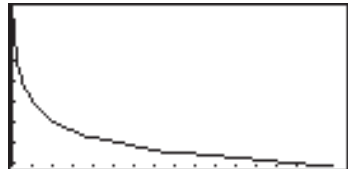
Wenn unter *w* eine dritte Folgengleichung eingegeben wird, kann diese mit der TYPE-Einstellung **4 uw** mit der ersten Folge und der Einstellung **5 vw** mit der zweiten Folge verglichen werden.

Hinweis: Der Versuch, eine Folge mit einem nicht ausgefüllten Eintrag zu vergleichen, führt zu einem Fehler.

Beispiel 3: Eine Darstellung mit der TYPE-Einstellung Web

Betrachten Sie die Folge
$u(n) = u(n-1) + 100$, indem Sie
die Folgenglieder *u(n)* mit ihren
Vorgängergliedern *u(n-1)* vergle-
ichen.

1. Drücken Sie ⎡2ndF⎤ ⎡FORMAT⎤ ⎡ G ⎤ ⎡ 1 ⎤, um **Web** zu wählen.

2. Drücken Sie ⎡ Y= ⎤ und
   geben Sie in der Zeile *u(n)*
   die Gleichung ein. Da dies
   eine rekursive Darstellung ist,
   muss ein Wert für *u(nMin)*
   eingegeben werden.
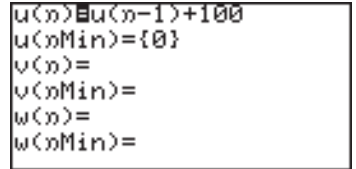
3. Sollten in den unteren
   vier Zeilen noch Einträge
   vorhanden sein, bewegen Sie
   den Cursor nach unten und
   löschen Sie diese mit ⎡ CL ⎤.
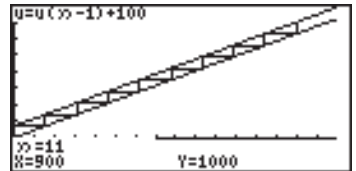
4. Wählen Sie ⎡ZOOM⎤ ⎡ A ⎤ ⎡ 1 ⎤ für die automatische
   Zoomfunktion, um automatisch geeignete Fenstereinstellungen
   zu bestimmen. Mithilfe von ⎡TRACE⎤ können Sie nun konkrete
   Werte der Folge ablesen.

8. The CALC Function

The **CALC** function utilizes the entered graph equation to calculate values. In conjunction with the 4 graph coordinates, it can be called up anywhere. Note however that the **CALC** function will not do anything if no graph equation has been entered or specified.

The following is an example that uses the previously entered polar graph equations above.

1. First, verify the graph coordinate mode by pressing 2ndF SETUP; check to see if **E COORD** is set to **Polar**. If not, this will need to be changed accordingly. Also, make sure the angle unit **B DRG** is set to **Rad**. Otherwise the graph will not be drawn correctly.

2. Press Y= to verify the previously entered polar graph equation, then press GRAPH to draw the graph. Adjust the view by using ZOOM menu items.
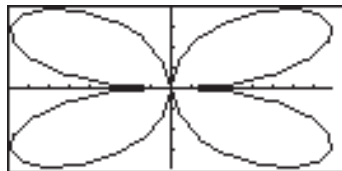
3. Press 2ndF CALC.

4. Press 1 to select **1 Value**. The graph is drawn back on the screen again, with the θ= prompt visible at the bottom left side of the screen.
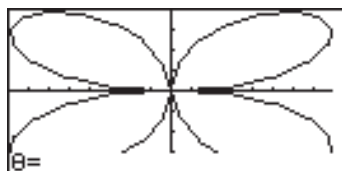
5. Enter the θ value at the prompt. Enter π, for example.

   Be aware that θ cannot be more than 2π (2π radians = 360 degrees).
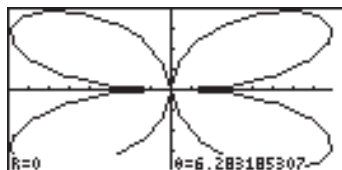
6. Upon pressing ENTER, the radian *r* coordinate will be calculated.

**Specific sub-
menus**

Note: When coordinate system is Polar, Param or Seq, only **1 Value** is selectable in the CALC menu.

1 Value With this sub-menu tool, the Y value can be obtained by entering an X value. The flashing graph cursor will then be placed in that position on the graph. If more than one graph equation is set, use the [▲] or [▼] keys to switch to the equation you wish to work with.

Note: If the entered X value is incalculable, an error message will be displayed. Also, if the Y value exceeds the calculation range, then "----" will be displayed instead.
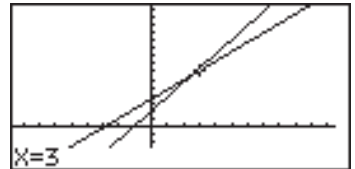
2 Intsct With this tool, the intersection(s) of two or more graphs can be found, where the flashing cursor will be placed. When the intersection is found, then the X-Y coordinates of the intersection will be displayed at the bottom of the screen. If there is more than one intersection, the next intersection(s) can be found by selecting the tool again.

Note: If there is only one graph equation entered there will be no other graph(s) to form an intersection, so selecting this tool will result in an error.
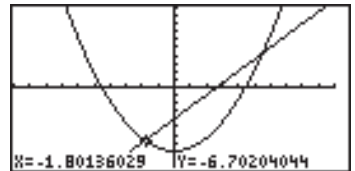
3 Minimum Finds the minimum of the given graph, and places the flashing cursor at that position.

Note: If the given graph has no minimum value, an error message will be displayed.
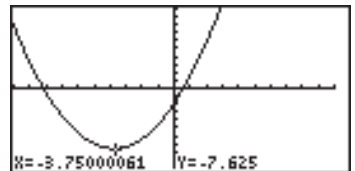
4 Maximum   Finds the maximum of the given graph, and places the flashing cursor at that position.

Note: If the given graph has no maximum value, an error message will be displayed.

X=2.44321610B   Y=7.524473852
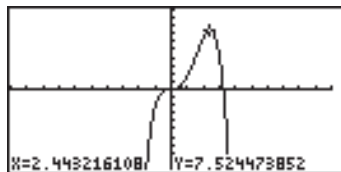
5 Y_zero   Finds an Y_zero (a contact point of the graph on the X-axis) of the given graph, and places the flashing cursor at that position. If there is more than one Y_zero, the next Y_zero can be found by selecting the tool again.

Note: If the graph has no Y_zero, an error message will be displayed.

X=-0.44966029   Y=0
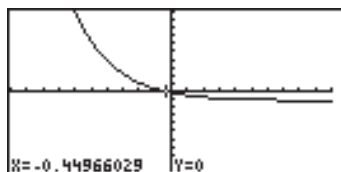
6 Y_Incpt   Finds an Y-intercept of the given graph, and places the flashing cursor at that position.

Note: If the graph has no Y-intercept, an error message will be displayed.

Note: The result may be different when the ZOOM function is used.

X=0   Y=0
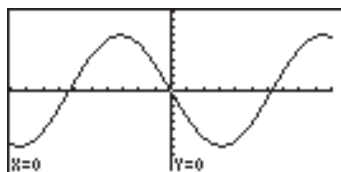
7 Inflec   Calculates the inflection point of the given graph and moves the cursor to that point.

Example

1. Enter the graph equation
   $Y1 = x^3 - 3x^2 + 2$.

2. Press ⎡2ndF⎤ ⎡CALC⎤ ⎡ 7 ⎤.

X=0.9999992731   Y=0.00000218
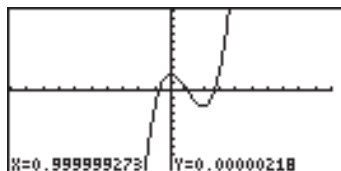
8 $\int dx$ Calculates an integral equation and display it on a graph.

Example

1. Enter the graph equation.

   Y1 = $- x^2$+ 5.

2. Press $\boxed{\text{2ndF}}$ $\boxed{\text{CALC}}$ $\boxed{\quad 8 \quad}$.

3. Move the cursor to the point of lower and press $\boxed{\text{ENTER}}$.

   • The line is drawn between the point of lower and X axis.

4. Move the cursor to the point of upper and press $\boxed{\text{ENTER}}$.

   • The calculation result is displayed and highlighted on the graph.

Note: In the step 3 and 4, it is also possible to input the X value and press $\boxed{\text{ENTER}}$.

9. Format Setting

You can set up the Graph screen format from the FORMAT menu.

Press ⌜2ndF⌟ ⌜FORMAT⌟ to display the Graph format menu.

Specific sub-menus

Note:	**G TYPE** appears only when the sequence coordinate graph mode is selected.

A −−−−−−   Displays the current FORMAT settings. The default setting is:

ON	(for the graph equation to be displayed on the graph)
OFF	(for displaying numeric derivatives on the graph)
ON	(for displaying the X/Y axis on the graph)
OFF	(for displaying a grid on the graph)
RectCoord	(for displaying the cursor location)

B EXPRES   This sets whether or not graph equations are displayed on the graph screen (in the trace mode, etc.). To not display the equations on the graph, select **2 OFF** by pressing ⌜ 2 ⌟ at this menu item.

C Y'   The numeric derivative (dx/dy) can be displayed on the graph screen (in the trace mode, etc.). To activate this function, select **1 ON** by pressing ⌜ 1 ⌟ at this menu item.

D AXIS   The graph axis can be set invisible with this menu item. To hide the X/Y axis of the graph, select **2 OFF** by pressing ⌜ 2 ⌟ at this menu item.

E GRID   The graph display can be backed with an X-Y grid. To show the grid on the graph, select **1 ON** by pressing ⌜ 1 ⌟ at this menu item.

F CURSOR   The coordinate system that indicates the location selected by the trace or other function can be selected from **1 RectCoord** (Rectangular coordinates) or **2 PolarCoord** (Polar coordinates) (In the parametric system, the T indication is added.)

G TYPE This menu is only active when the sequence coordinate graph mode is selected in the SETUP menu. The **G TYPE** menu will not appear in the other modes.

    1 Web A web graph plot mode where $x = u(n-1)$ and $y = u(n)$.

    2 Time Time graph plot mode where $x = n$ and $y = u(n)$, $v(n)$, $w(n)$. (default)

    3 uv A uv mode where $x = u(n)$ and $y = v(n)$.

    4 uw A uw mode where $x = u(n)$ and $y = w(n)$.

    5 vw A vw mode where $x = v(n)$ and $y = w(n)$.

    Note: $u(n)$, $v(n)$ and $w(n)$ indicate the n-th term of the sequences.

10. Setting a Window

The [WINDOW] key displays the graph window setup. The display will differ according to the selected coordinate system.

Rectangular coordinate system

Xmin/Xmax	Minimum and maximum values of x-axis, respectively
Xscale	Scale of x-axis
Ymin/Ymax	Minimum and maximum values of y-axis, respectively
Yscale	Scale of y-axis

```
Window (Rect)
 Xmin=-10
 Xmax=10
 Xscl=1
 Ymin=-10
 Ymax=10
 Yscl=1
```

Parametric coordinate system

Tmin/Tmax	Minimum and maximum values for T, respectively
Tscale	Cursor pointer step value for tracing
Others	Same as rectangular coordinate system

```
Window (Param)
 Tmin=0
 Tmax=360
 Tstep=7.5
 Xmin=-10
 Xmax=10
 Xscl=1
↓Ymin=-10
```

Polar coordinate system

θ**min**/θ**max**	Minimum and maximum angle for θ, respectively
θ**step**	Cursor pointer step value for tracing
Others	Same as rectangular coordinate system

```
Window (Polar)
 θmin=0
 θmax=360
 θstep=7.5
 Xmin=-10
 Xmax=10
 Xscl=1
↓Ymin=-10
```

Sequential coordinate system

*n***Min**/*n***Max**	Minimum and maximum value for *n*, respectively
PlotStart	Starting value of sequential variable *n*
PlotStep	Increments of sequential variable *n*
Others	Same as rectangular coordinate system

```
Window (Seq)
 nMin=1
 nMax=10
 PlotStart=1
 PlotStep=1
 Xmin=-10
 Xmax=10
↓Xscl=1
```

11. Tables

The calculator enables you to illustrate the changes using the equation and graph you have input. It also has tables for showing a list of X and Y values. Each column item can display up to 7 digits, including a sign and/or a decimal point.

There are four kinds of tables available corresponding to the coordinate system.

Rectangular coordinate system

- The variable X is displayed in the left end column.

- The columns Y1 to Y3 are displayed on the first screen.

X	Y1	Y2	Y3
0	6	-2	10
1	0	-1	6
2	-4	0	4
3	0	1	4
4	18	2	6
5	56	3	10

X=0

- Press ◄ ► to horizontally scroll the table. (The variable X is always displayed in the left end column.)

- The 10-digit value in the column where the cursor is currently located is displayed on the bottom line of the screen.

- Move the cursor using ◄ ► ▲ ▼ .

- Non-input equation numbers and equations invalid for graphing will not be displayed in the above table.

Parametric coordinate system

- The variable T is displayed in the left end column.

- The columns X1T, Y1T, and X2T are displayed on the first screen.

T	X1T	Y1T	X2T
0	1	0	-------
1	0.5403	0.84147	0
2	-0.4161	0.9093	0.69315
3	-0.99	0.14112	1.09861
4	-0.6536	-0.7568	1.38629
5	0.28366	-0.9589	1.60944

T=0

- Press ◄ ► to horizontally scroll the table.

- The 10-digit value in the column where the cursor is currently located is displayed on the bottom line of the screen.

- Move the cursor using ◄ ► ▲ ▼ .

- Non-input equation numbers and equations invalid for graphing will not be displayed in the above table.

Polar coordinate system

- The variable θ is displayed in the left end column.
- The columns θ, R1 to R3 are displayed on the first screen.

θ	R1	R2	R3
0	1	0	0
1	0.5403	0.84147	0.45465
2	-0.4161	0.9093	-0.3784
3	-0.99	0.14112	-0.1397
4	-0.6536	-0.7568	0.49468
5	0.28366	-0.9589	-0.272

θ=0

- Press ◀ ▶ to horizontally scroll the table.
- The 10-digit value in the column where the cursor is currently located is displayed on the bottom line of the screen.
- The cursor can be moved using ◀ ▶ ▲ ▼.
- Non-input equation numbers and equations invalid for graphing will not be displayed in the above table.

Sequential coordinate system

- The variable *n* is displayed in the left end column.
- Tables values u(*n*), v(*n*), and w (*n*) are simultaneously displayed.

n	u(n)	v(n)	w(n)
0	------	------	------
1	2	3	2
2	5	1	3
3	4.5	5	7
4	4.33333	11	13
5	4.25	19	21

n=0

- The 10-digit value in the column where the cursor is currently located is displayed on the bottom line of the screen.
- The cursor can be moved using ◀ ▶ ▲ ▼.
- Non-input equation numbers and equations invalid for graphing will not be displayed in the above table.

Setting a table

- To display the table, press ⬜.
- Table setting allows you set how to input data for a table.
- Press 2ndF TBLSET to enter the table setting screen.
- The cursor is initially located at **Auto**, showing the variable input method.

Table setting
Input : **Auto** User

TBLStrt=   0

TBLStep=   1

Auto: Automatically creates a table based on the graph equations and given TableStart and TableStep values.

User: Displays a blank table. As you input values for variable columns, table values are automatically calculated by the equation. Thus, although TableStart and TableStep inputs can be made when selecting User, set values will be ignored.

- Press ⯇ or ⯈ to switch between **Auto** and **User**.
- TableStart is a start value of the variable in the table, and TableStep is a step value of the variable. Both are numeric values.

Example

Automatically create a table starting from -5 with a step of 1 in the X-Y coordinate after equations, based on "Y1 = X", "Y2 = X^2", and "Y3 = $-X^2 + 3$".

1. Press 2ndF TBLSET and ▼ (–) 5 ENTER 1 ENTER.

2. Press TABLE.

* If the cursor is on the top or bottom line of the table, ▲ or ▼ can still be used. The table contents will move to become visible in the display area.

X	Y1	Y2	Y3
-5	-5	25	-22
-4	-4	16	-13
-3	-3	9	-6
-2	-2	4	-1
-1	-1	1	2
0	0	0	3

X= -5

Example

Create a table in the User mode under the above conditions.

1. Press 2ndF TBLSET and ⯈ ENTER ▼ 0 ENTER 1 ENTER.

```
Table setting
 Input : Auto User

TBLStrt=
                    0
TBLStep=
                    1
```

2. Press TABLE.

   Blank table will appear.

X	Y1	Y2	Y3

X=

3. Press 2 ENTER (–) 3 ENTER to enter X values.

X	Y1	Y2	Y3
2	2	4	-1
-3	-3	9	-6

X=

* An automatically created table in the User mode cannot be scrolled vertically.

Note: While the table is in the User mode, a selected row can be deleted by pressing DEL.

12. The DRAW Function

With the DRAW function, lines, circles, graphs, and pixel points can be added to the graph window. The DRAW menu also contains configuration tools for the ordinary graphs entered in the Graph Equation Entry window: line types, shading, and visibility status of each graph.

Press ⌈2ndF⌉ ⌈DRAW⌉ to enter the **DRAW** menu.

Note: When entering coordinates, the **DRAW** function assumes that rectangular coordinates will be entered. The exception to this is for **PxlON(**, **PxlOFF(**, **PxlCHG(**, and **PxlTST(**, all within the **B POINT** menu item.

A DRAW The tools in this menu add lines, circles, additional graphs and text on the graph screen.
The tools below can be accessed from the GRAPH window, or any other windows such as the Graph Equation Entry window and Calculation screen. Most of these tools, such as **Line(**, can be entered directly onto a graph from the cursor point.

01 ClrDraw Clears all items on the graph window EXCEPT for the graphs entered via the Graph Equation Entry window.

1. From the GRAPH window, press ⌈2ndF⌉ ⌈DRAW⌉ to enter the **DRAW** menu.

2. Press ⌈ A ⌉ to select **A DRAW**, then press ⌈ 1 ⌉ to select **1 ClrDraw.**

or

1. From the Calculation screen, press ⌈2ndF⌉ ⌈DRAW⌉ ⌈ A ⌉ ⌈ 1 ⌉.

   "ClrDraw" will appear.

2. Press ⌈ENTER⌉.

   All the items on the graph will be deleted and the message "Done" will appear.

02 Line(Draws a line according to the given X-Y coordinates of a start/end point.

Note: This tool can be used with any type of graph.

From the Calculation screen

Line(x-coordinate of start point, y-coordinate of start point, x-coordinate of end point, y-coordinate of end point [,0])

Example

1. Select the DRAW menu. Select **A DRAW** in the menu, then select **2 Line(**.

   "Line(" will appear.

   Suppose you wish to draw a line, starting from an X-Y coordinate (1,2) to end at (8,8).

2. Enter "1,2,8,8" right after the "Line(" object, then close the expression with $\boxed{\quad)\quad}$.
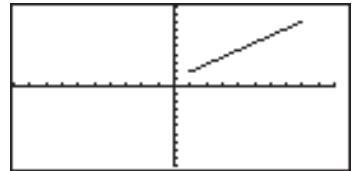
3. Press $\boxed{\text{ENTER}}$.

   The GRAPH window will appear with the specified line drawn on the graph.

Note: If you enter 0 for the 5th element of Line(function, (e.g. Line(1,2,8,8,0)) and press $\boxed{\text{ENTER}}$, you can clear the specified line.

From the GRAPH window

Line(

1. Press $\boxed{\text{2ndF}}$ $\boxed{\text{DRAW}}$ to enter the **DRAW** menu.

2. Press [A] to select **A DRAW**, then press [2] to select **2 Line(**.

The GRAPH window reappears, with the coordinate of the cursor showing at the bottom of the screen.
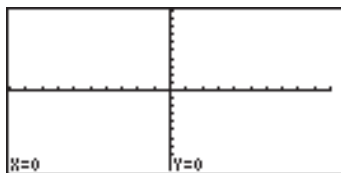
Note: To change the cursor coordinate system, use the **FORMAT** menu. Select **F CURSOR**, then select the required coordinate system for the cursor.

3. Move the flashing cursor on the screen to set the starting point of the line.

Note: The pixel increment can be set within the ZOOM menu. While **A ZOOM** is selected, choose **7 Dec** to set each pixel size to "0.1 $\times$ 0.1", or **8 Int** to set to "1 $\times$ 1".

4. When the starting point is set, press [ENTER] to anchor the location.
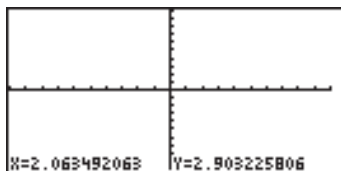
5. Move the cursor to indicate the end point of the line. When set, press [ENTER] to finalize the line drawing.
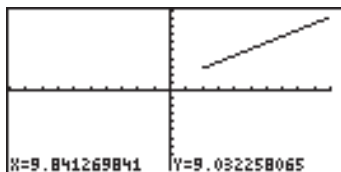
6. You may draw as many lines as you wish, by repeating the procedure from 4 to 5. When done drawing, press [CL] to exit the entry mode.

03 H_line   Draws a horizontal line on the graph window.

From the Calculation   **H_Line *y-value***
screen
Draws a horizontal line (*y = value*) on the graph window.

Example

• Draw a horizontal line of *y = 5*.

1. Press [2ndF]
   [DRAW] [A]
   [3] and enter
   the value 5.

```
H_line 5
```
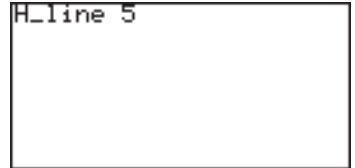
From the GRAPH   **H_Line**
window
Example

• Draw a horizontal line manually.

1. Press [2ndF]
   [DRAW] [A]
   [3].

2. Use the cursor
   navigation keys

   X=0   Y=5.483870968

   ([▲] [▼] [◀] [▶]) to move the flashing
   cursor to the appropriate position.

3. Press [ENTER] to draw the line.

04 V_line	Draws a vertical line on the graph window

From the Calculation screen

V_Line *x-value*

Draws a vertical line ($x = value$) on the graph window.

Example

• Draw a horizontal line of $x = 3$.

1. Press `2ndF` `DRAW` `A` `4` and enter the value 3.

From the GRAPH window

V_Line

Example

• Draw a vertical line manually.

1. Press `2ndF` `DRAW` `A` `4`.

2. Use the cursor navigation keys (`▲` `▼` `◄` `►`) to move the flashing cursor to the appropriate position.

3. Press `ENTER` to draw the line.

05 T_line(	Draws a tangental line at the specified point of a graph curve.

From the Calculation screen

T_line(*equation, x-value*)

Example

• Draw the tangental line of $y = x^2$ at $x = 1$.

1. Select **T_Line(**.

2. Enter "x^2, 1)" on the line.

3. Press `ENTER`.
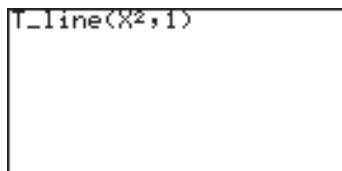
Note: It is also possible to specify a function equation from Y0 to Y9 if stored. (T_line(Y1, 1))
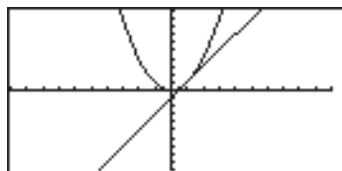
From the GRAPH window

T_line(

Example

• Draw a tangental line by manually specifying the point.

1. Select **T_Line(**.

2. Use ◄ ► to move the flashing cursor on the targeted graph line.

   Use ▲ ▼ to select a graph to draw the tangental line.

3. When the point is set at the tangent point, press ENTER.

   • It is also possible to input the x-value and press ENTER.

Note: The equation of the tangent line is displayed temporally. (The equation may include a margin of error.)

06 N_line(

Draws the orthogonal line of a tangent at the specified point of a graph curve.

From the Calculation screen

N_line(*equation, x-value*)

Example

• Draw the orthogonal line of $y = x^2$ at $x = 1$.

1. Select **N_Line(**.

2. Enter "x^2, 1)" on the line.

3. Press ENTER.

```
u(n)=
u(nMin)=
v(n)=
v(nMin)=
w(n)=
w(nMin)=
```

Note: It is also possible to specify a function equation from Y0 to Y9 if stored. (N_line(Y1, 1))

```
N_line(Y1,Y)
```

From the GRAPH window

N_line(

Example

• Draw a orthogonal line by manually specifying the point.

1. Select **N_Line(**.

2. Use ◀ ▶ to move the flashing cursor on the targeted graph line.

   Use ▲ ▼ to select a graph to draw the orthogonal line.

3. When the point is set at the point, press ENTER.

   • It is also possible to input the x-value and press ENTER.

Note: The equation of the line is displayed temporally. (The equation may include a margin of error.)

07 Draw

Draw *equation*

Draws an additional graph based on a given expression.

Example

• Draw the graph of $y = 3x^2 - 4x + 2$.

1. Select **Draw**.

2. Enter "3x²–4x+2" on the line.

3. Press ENTER.
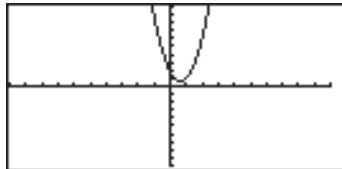
Note: This tool can be used with rectangular coordinate graphs only.

08 Shade(

Shade(*equation1, equation2 [, lower value, upper value]*)

Draws two graphs, and shades the area between the two. If the x range is specified, it shades the area within the specified range.

Example

• Shade the area enclosed by $y = \frac{1}{4}x^2 - 8$ and $y = x$.

1. Select **Shade(**.

2. Enter "$\frac{1}{4}$x² – 8, x)" on the line.

3. Press ENTER.
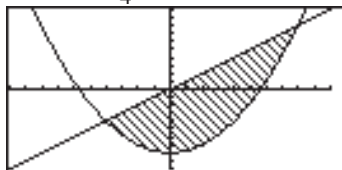
Example

• Shade the area enclosed by $y = \frac{1}{4}x^2 - 8$ and $y = x$ within the range of $-2 \leq x \leq 3$.

Before starting operation, Select **ClrDraw** to clear the graphs previously drawn.

1. Select **Shade(**.
2. Enter "$\frac{1}{4}x^2 - 8$, x, -2, 3)" on the line.
3. Press (ENTER).
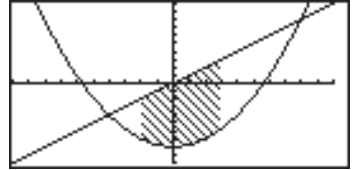
Note: It is also possible to specify a function equation from Y0 to Y9 if stored.

09 DrawInv   **DrawInv** *equation*

Draws an inverse of a given graph expression.

Example

• Draw the inverse graph of $y = \frac{1}{4}x^2 - 8$.

1. Select **DrawInv**.
2. Enter "$\frac{1}{4}x^2 - 8$" on the line.
3. Press (ENTER).
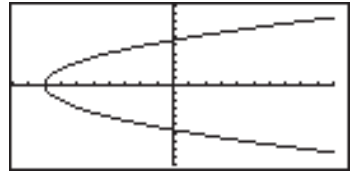
Note: It is also possible to specify a function equation from Y0 to Y9 if stored.

10 Circle(Draw a circle on the graph screen.

From the Calculation screen   **Circle(***x-coordinate of center, y-coordinate of center, radius***)**

Example

• Draw a circle with center at (2,3) and of radius 7.

1. Select **Circle(**.
2. Enter "2,3,7)" on the line.
3. Press (ENTER).
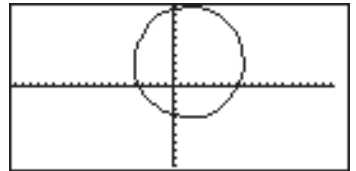
Note: Before drawing a circle, press (ZOOM) [A] [6] to set the X-Y coordinates to square.

From the GRAPH window

Circle(

Example

• Draw a circle manually.

1. Select **Circle(**.

2. Move the cursor to set the center point of the circle. Press ENTER to set the anchor.

3. Move the cursor to determine the radius length of the circle.
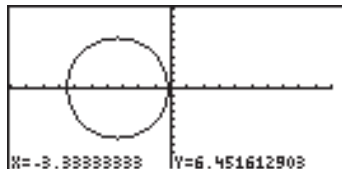
4. When done, press ENTER.

   The circle is drawn at the location.

11 Text(

Text(*column, row,* **"***strings***")**

Enters a text string at a given coordinate.

Text(*column, row, variable***)**

Draw the value of A-Z, θ.

Example

• Draw "HELLO" on the graph at column 2, row 1.

Text(2, 1, "HELLO")
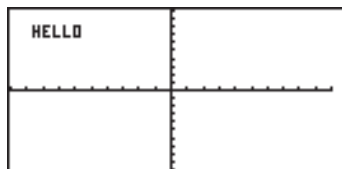
Note: Use MATH ▶ E

3 to enter " **"** " (double quotes).

Column and row definitions for text input

*   Refer to the following diagram to specify the coordinates where you wish to start writing the text.

column

row

(0,0)	(30,0)
(0,9)	(30,9)
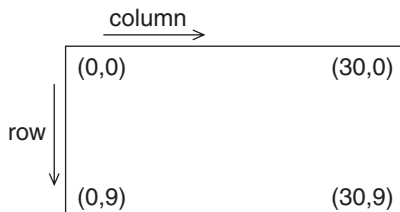
Note: Lines, points, and curves drawn by the Draw menu are handled as pictures. Therefore, they cannot be traced.

Graphs drawn by the Draw menu are automatically cleared if any screen settings are changed. To save the graph, use the **StoPict** menu.

B POINT Utilize these tools to manage point drawing and deletion on the graph.
There are two operation methods. One is to directly move the cursor pointer to the location on the graph screen where you wish to insert the point. The other is to call a relevant command on the Calculation screen and to directly input the coordinates to draw or delete the point. (X and Y coordinates should be separated by a comma.)

1 PntON(**PntON(*x-coordinate, y-coordinate*)**
Draws a point at a given coordinate. It takes the X-Y coordinate as an argument.

This tool can either be accessed from the GRAPH window or other windows. Entering from the GRAPH window enables a graphic entry, while entering from other windows enables text-based entry.

2 PntOFF(**PntOFF(*x-coordinate, y-coordinate*)**
Erases a pixel point. It takes the X-Y coordinate as an argument.

3 PntCHG(**PntCHG(*x-coordinate, y-coordinate*)**
Changes the status (i.e., visible/invisible) of a pixel at a given coordinate. Deletes the point when it is displayed and draws the point when it is not displayed.

4 PxlON(**PxlON(*column, row*)**

Draws a pixel point at a given screen location indicated by column and row.

The column and row definitions are as follows:

Column: 0 to 132,
Row: 0 to 64.
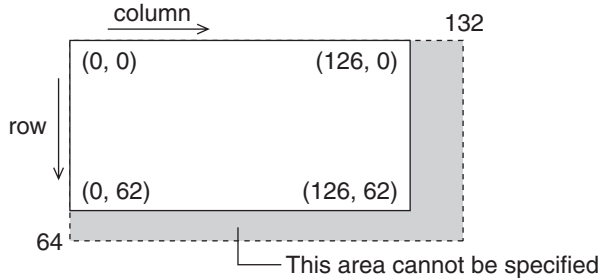
5 PxlOFF(**PxlOFF(*column, row*)**

Erases a pixel point at a given screen location indicated by column and row.

6 PxlCHG(**PxlCHG(*column, row*)**

Changes the status (i.e., visible/invisible) of a pixel at a given screen location indicated by column and row.

7 PxlTST(**PxlTST(*column, row*)**

Returns "1" if a pixel point is present at a given screen location indicated by column and row.
Returns "0" if no pixel point exists.
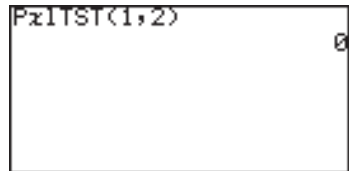
C ON/OFF   Sets the visibility status of a given graph number (0-9).

1 DrawON   **DrawON [*equation number 1, ...*]** or **DrawON**
Sets the specified graphs visible. If no argument is
given, then all graphs will be set visible.

2 DrawOFF   **DrawOFF [*equation number 1, ...*]** or **DrawOFF**
Sets the specified graphs invisible. If no argument is
given, then all graphs will be set invisible.

Example
• Set Y1 and Y2 to visible and Y3 to invisible.

1. Press [2ndF] [DRAW]   C   1 .

2. Enter "1, 2" for equation numbers.

3. Press [ENTER].

4. Press [2ndF] [DRAW]   C   2 .

5. Enter 3 for
   equation number.

6. Press [ENTER].

```
DrawON 1,2
                          Done
DrawOFF 3
                          Done
```

D LINE   Sets the line appearance of each graph. Each graph coordinate
mode (i.e., rectangular, polar, etc.) can retain a set of line
appearance preferences. Solid line, dotted line, bold line, locus and
dots can be selected.

1. Press [2ndF] [DRAW]   D   to select **D LINE**, then press [ENTER].

2. The next window enables
   you to select the line types
   of each graph in the set
   coordinate mode. (The
   rectangular coordinate mode
   is selected in this example.)

   Use the cursor keys to select
   the required line type, and
   press [ENTER].

```
ADRAW
BPOINT   select
CON/OFF     line type
DLINE
EG_DATA
FPICT
GSHADE   Press[ENTER]
```

```
Select Line Type
Y1 : —  .....  —  -o   o
Y2 : ▬  .....  —  -o   o
Y3 : —  .....  ▬  -o   o
Y4 : —  .....  —  -o   o
Y5 : —  .....  —  -o   o
Y6 : —  .....  ▬  -o   o
↓Y7: —  .....  —  -o   o
```

E G_DATA All graph data, including the graph equations and window settings, can be stored in 10 graph storage areas (1-9, and 0), which can be called up later.

1 StoGD **StoGD** *number (0-9)*
Saves the graph data.

Example
• Store the current graph data in location #1.

Note: The lines, graphs and pixels drawn with the **A DRAW** tools will not be saved here; use **StoPict** under **F PICT** instead.

```
StoGD 1
                    Done
```
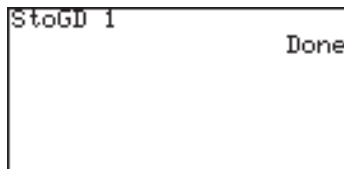
2 RclGD **RclGD** *number (0-9)*
Recalls the saved graph data.

Example
• Call back the previously stored graph data from location #1.

Note: Attempting to call back graph data from an empty location will result in an error.

```
RclGD 1
                    Done
```
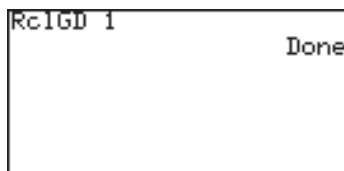
F PICT   Stores and recalls the displayed pixel data for the graph window. The graph equations will not be saved or recalled with these tools.

1 StoPict   **StoPict** *number* *(0-9)*
Saves the pixel data.

Example
• Store the current graph, including the drawings, in location #1.
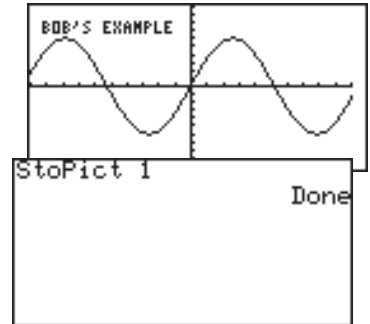
2 RclPict   **RclPict** *number* *(0-9)*
Recalls the saved pixel data.

Example
• Call back the previously stored graph data from location #1.
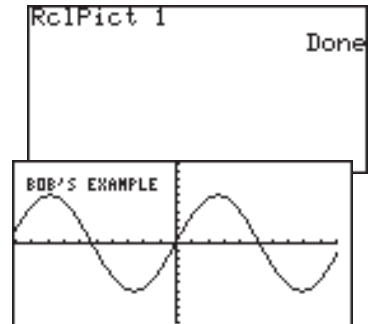
G SHADE   With these sub-menu tools, inequalities, intersections and compliments of multiple graphs can be visualized.

1 SET   Sets up the shading area for each graph.

Example

1. Set up a simple graph within the Graph Equation window. Enter "X^2" for Y1, for example.

2. Press ⌷2ndF⌷, and ⌷DRAW⌷ to enter the DRAW menu, then press ⌷ G ⌷ to select **G SHADE**. The SHADE sub-menu appears.

3. Press ⌷ 1 ⌷ to select **1 SET**. The "Set shade" window appears.

```
Set shade
    Y1 < Y <
       < Y <
       < Y <
       < Y <
```
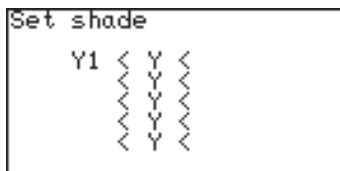
4. Using the cursor keys, move the cursor pointer to the appropriate position.

5. Press ⌷2ndF⌷ ⌷VARS⌷ ⌷ENTER⌷.

6. Press ⌷ 1 ⌷ to select Y1.

7. When the value is set, press the ⌷GRAPH⌷ key. The graph will be redrawn.
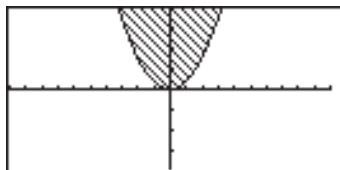
8. Let's add another inequation, so that the area where the two inequality overlap can be shaded. Press the ⌷ Y= ⌷ key, and enter another simple graph equation such as "X + 4" for "Y2".

9. Now, return to the SHADE menu by pressing ⌷2ndF⌷ ⌷DRAW⌷, and ⌷ G ⌷. Press ⌷ 1 ⌷ to select **"1 SET"**.

10. Within the "Set shade" window, add the second equation at the right of the topmost inequation. Use the ⌷ ▶ ⌷ or ⌷ ◀ ⌷ key to position the underscore cursor, then select "Y2" using the VARS menu.

11. Press the ⌷GRAPH⌷ to redraw the graph with the new shading appearance.

2 INITIAL   Initializes the shading setup, and brings up the shading setup window.

13. Other Useful Graphing Features

Split screen

It splits the display vertically, to show the graph on the left side of the screen while showing the X-Y values in a table on the right.

The cursor is positioned on the table, and can be scrolled up/down using the ⬆️ or ⬇️ keys.
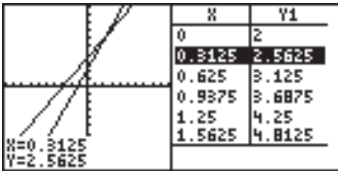
Graph and table   Graph and equation
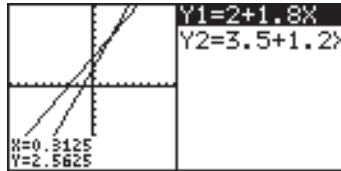
- When $\boxed{\text{2ndF}}$ $\boxed{\text{SPLIT}}$ are pressed on the graph screen, the graph and table are displayed on the same screen.

- When $\boxed{\text{2ndF}}$ $\boxed{\text{SPLIT}}$ are pressed on the equation input screen, the graph and equation are displayed on the same screen.

The following illustration shows these relationships.
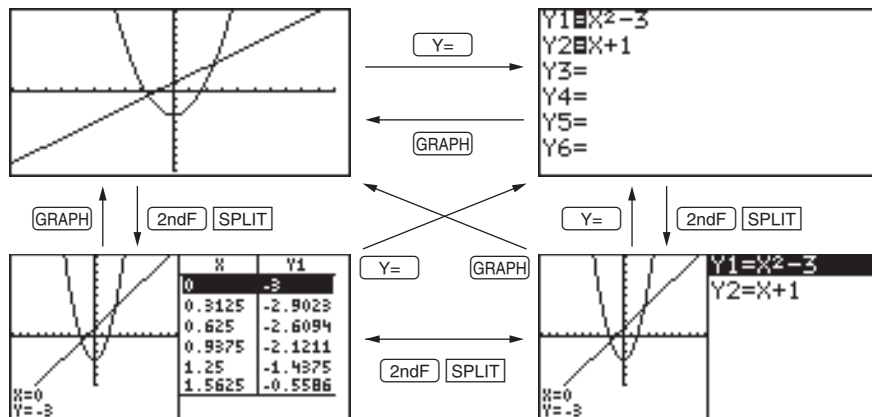
- The split screen is always in the trace mode. Therefore, the cursor pointer appears on the graph. Accordingly, the coordinate values are displayed reverse in the table and in the equation at which the cursor pointer is located is also displayed reversely.

- Using ◄ or ►, move the cursor along the graph. (Values displayed reverse in the table are also changed accordingly.)

- When two or more graphs are displayed on the screen, the desired graph is selected using ▲ or ▼. (The table or equation on the right of the screen is also changed accordingly.)

- The table on the split screen does not relate to the table settings on the full-screen table.

- The table on the split screen is displayed in units of trace movement amount based on the cursor pointer position on the graph screen. When the full-screen table is displayed by pressing TABLE, a different table may appear on the screen.

- When the EXPRES or Y' is set to ON on the FORMAT menu, the equation or coordinates are displayed on the graph screen.

- Only equations to be graphed are displayed on the split screen.

- Press GRAPH or TABLE on the split screen to display the full-screen of the graph or table. To exit the split screen, press any of other function keys.

Substitution feature

- The substitution feature allows you to input an equation using characters and variables, and then substitute numeric values for the characters to draw the graph.

- The substitution feature is valid only in the rectangular coordinate system.
Using this feature, any number of numeric value sets can be substituted while referring to the graph drawing screen. This clearly shows the changes in the graph depending on numeric values.
For example, the graph for "Y1 = AX^3 + BX^2 + CX^2 − D" is drawn by substituting numeric values for variables A, B, C, and D of the equation.

- 22 kinds of variables (characters), A to Z except for R, T, X, and Y can be used for the substitution feature.

- Up to seven variables (characters) can be used for one equation. (If the equation contains more than seven variables (characters), up to seven characters from the top of the equation are determined as variables and subsequent characters are ignored.)

- If you attempt to execute an equation containing no variables, the substitution feature becomes invalid and the error message, "NO VARIABLE", appears on the screen.

- To input the equation, there are the following two methods after $\boxed{\text{Y=}}$ has been pressed. After the equation has been input, the same operations apply to subsequent steps.

Example

Substitute numeric values under the conditions that "Y1 = AX^2 + BX + C" and "Y2 = AX" have been input.

Equation Entry screen

```
Y2▋AX
Y3=
Y4=
Y5=
Y6=
```

The cursor pointer is located at Y1. Drawing of both graphs Y1 and Y2 is valid.

1.   Press $\boxed{\text{2ndF}}$ $\boxed{\text{SUB}}$.

The substitution feature screen will appear. The equation on which the cursor pointer is located and its variables are displayed on the right of the screen.
If variables (characters) contain no values, the graph is not drawn.

```
                    B=0
                    C=0
```

If independent memories A to C contain any numeric values, the graph is drawn based on these values.

* If the equation (in this example, Y1) on which the cursor is located contains no variables, the substitution feature screen will not appear.

2. Press 2 [ENTER].
   (2 is input to A.)
   The graph for "Y1 = 2X^2" is drawn. (Since B and C have no values, they are ignored.)
   At this time, the graph for
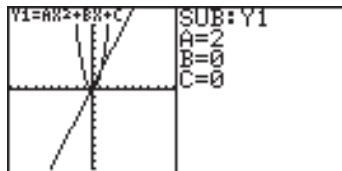
   Y2 is also drawn. Y2 also uses variable A which is used in Y1. Therefore, the drawing of the graph for Y2 is also valid.

   * If you need to draw only the graph for Y2, it is necessary to change variables (characters) or make the graph drawing for Y1 invalid.

3. Press 1 [ENTER].
   (1 is input to B.)
   The graph is changed from "Y1 = 2X^2" to "Y1 = 2X^2 + 1X".
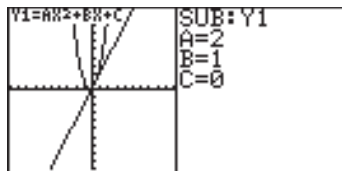
4. Press [(−)] 3 [ENTER].
   (-3 is input to C.)
   Now, the graph for "Y1 = 2X^2 + 1X − 3" is drawn on the screen.
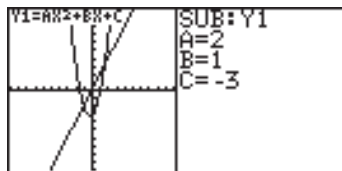
Next, change variable A from 2 to 5 and see how the graph changes.

Rewrite the equation based on the numeric values input on the substitution feature screen.

1. Press ▲ ▲ 5 ENTER.
   (The cursor is moved from C
   to A and 5 is input.)
   The slope of the graph
   becomes sharp.
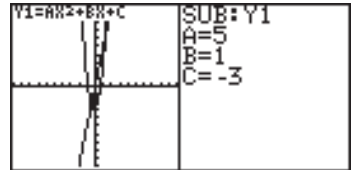
   * Move the cursor accordingly and substitute other numeric
     values for variables to view how the graph changes.

   * The trace function cannot be used in the substitution feature.
     (When TRACE is pressed, the full-screen graph will appear.)

2. Press 2ndF EXE to return
   to the equation display
   screen.
   The equation is written based
   on the last numeric values
   input on the substitution
   feature screen.
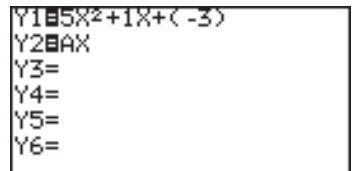
   * Once 2ndF EXE have been pressed, the screen cannot be
     returned to the previous substitution feature screen.

Chapter 5
SLIDE SHOW Feature

The SLIDE SHOW feature is especially incorporated to help students understand math concepts utilizing the calculator's graphing capabilities. With this feature, the calculator's screen images can be captured, organized, and stored.

To enter the SLIDE SHOW, press ⌊SLIDE SHOW⌋. To exit the SLIDE SHOW feature, press ⌊⊞⊟ ⊠⊞⌋.

1. Try it!

Make a SLIDE SHOW named "CUBIC" to explain how to draw the graph of a factor-base cubic function and explain how to solve cubic equations using factors. Use the following cubic function as a sample.

$$y = (x - 3)(x - 1)(x + 2)$$
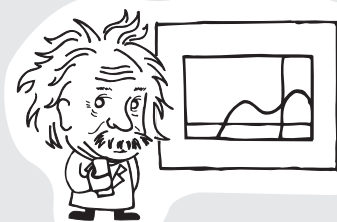
Create a new SLIDE SHOW

1. Set up a SLIDE SHOW file.
   Press ⌊SLIDE SHOW⌋ to enter the SLIDE SHOW menu.

2. Press ⌊ C ⌋ ⌊ENTER⌋ to select **C NEW**.

3. Name your project (type "CUBIC," for example), and press ⌊ENTER⌋.

```
    Slide show title
        [CUBIC    ]
[2ndF][CLIP] to save
screen.
```

Capture images   4. Press $\boxed{\text{Y=}}$ to enter the graph equation mode.

5. Enter $(x - 3)(x - 1)(x + 2)$ at the first equation.

```
Y1目(X-3)(X-1)(X+2)
Y2=
Y3=
Y4=
Y5=
Y6=
```

6. Press $\boxed{\text{2ndF}}$ $\boxed{\text{CLIP}}$.

   The message "STORE SCREEN: 01" will appear. The image will be stored on page 1 of the SLIDE SHOW

```
STORE SCREEN:01
```

   "CUBIC," and the screen will automatically return to the previous screen.

   Each time you press $\boxed{\text{2ndF}}$ $\boxed{\text{CLIP}}$, the screen image will be captured and stored in the SLIDE SHOW.

7. Press $\boxed{\text{GRAPH}}$.

Note: • You cannot capture an image while drawing.

   • If the cursor flashes at the upper right corner of the screen, the calculator is busy processing tasks. The SLIDE SHOW feature cannot capture images during this period.

   • A captured image cannot be recaptured.
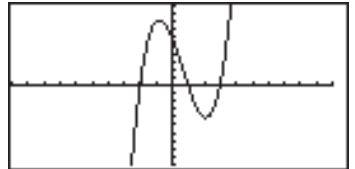
8. After the graph is drawn, press $\boxed{\text{2ndF}}$ $\boxed{\text{CLIP}}$.

   The image will be stored on page 2 of the SLIDE SHOW "CUBIC".

9. Press $\boxed{\text{2ndF}}$ $\boxed{\text{SPLIT}}$ to split the screen between the graph and the table.
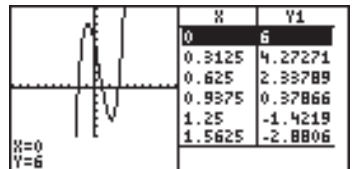
10. After drawing is done, press $\boxed{\text{2ndF}}$ $\boxed{\text{CLIP}}$.

X	Y1
0	6
0.3125	4.27271
0.625	2.33789
0.9375	0.37866
1.25	-1.4219
1.5625	-2.8806

X=0
Y=6

   The screen image is stored on page 3.

11. Press $\boxed{\blacktriangleright}$ once, and press $\boxed{\text{2ndF}}$ $\boxed{\text{CLIP}}$. Continue this operation.

117

Playing back the newly created SLIDE SHOW

1. Press $\boxed{\substack{\text{SLIDE}\\\text{SHOW}}}$ to go to the SLIDE SHOW menu.

   Press $\boxed{\quad\text{B}\quad}$ to select **B PLAY**.

   A list of saved SLIDE SHOW projects will be shown.

   ```
   ACURR
   BPLAY     01INTRO
   CNEW      02CLASS6
   DSELECT
   EEDIT
   ```

2. Select the one you want to play back, either by using the shortcut key strokes, or by moving the cursor. (Select the item and press $\boxed{\text{ENTER}}$.)

   The first page of the SLIDE SHOW will appear.

   The number appearing at the upper right of the screen is the slide number.

   ```
   Y1=(X-3)(X-1)(X+2)    01
   Y2=
   Y3=
   Y4=
   Y5=
   Y6=
   ```
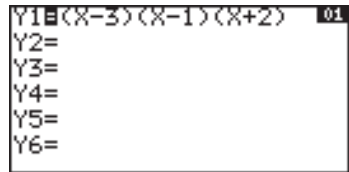
3. Use the $\boxed{\blacktriangledown}$ key or $\boxed{\text{ENTER}}$ to display the next image; press the $\boxed{\blacktriangle}$ key to show the previous image.

Rearranging the captured images

Let's change the last image of the SLIDE SHOW feature to before the third.

1. Press $\boxed{\substack{\text{SLIDE}\\\text{SHOW}}}$ to bring up the SLIDE SHOW menu.

Select a file

2. Press $\boxed{\quad\text{D}\quad}$ to select **D SELECT**.

3. Choose the project you want to edit from the sub-menu list.

4. Press $\boxed{\text{ENTER}}$ to select.

   The target SLIDE SHOW will be selected.

   ```
   ACURR
   BPLAY     01INTRO
   CNEW      02CLASS6
   DSELECT
   EEDIT
   ```

Select an image

5. Press $\boxed{\substack{\text{SLIDE}\\\text{SHOW}}}$ $\boxed{\quad\text{E}\quad}$ to select **E EDIT**, then press $\boxed{\quad1\quad}$ to select **1 MOVE**.

   The first image of the selected SLIDE SHOW file appears.

   ```
   ACURR
   BPLAY     1MOVE
   CNEW      2DEL
   DSELECT   3RENAME
   EEDIT
   ```

6. Go down to the last captured image using the ▼ key.

7. Press ENTER to mark the image.

Specify the insertion point

8. Go up to the page 3 using the ▲ key.

9. Press ENTER.

   The marked image will be inserted at page 3.

2. The SLIDE SHOW menu

This section of the chapter summarizes each item in the SLIDE SHOW feature menu.

A CURR Displays the name of the currently selected or working SLIDE SHOW. Press 2ndF CLIP to capture an image.

B PLAY Enables you to select a SLIDE SHOW file for playback.

C NEW Creates a new SLIDE SHOW file to store screen images.

D SELECT Enables you to select a SLIDE SHOW file to be edited and display its name in the **A CURR** window.

E EDIT Enables you to move/delete captured images, or change the file name of the current SLIDE SHOW.

Note: If no SLIDE SHOW file is stored, selecting any of the following sub-menu items will result in an error.

1 MOVE

With this sub-menu tool, a selected screen image can be moved, so that the playback order will change. To escape from this mode and go back to the SLIDE SHOW menu, press the SLIDE SHOW key.

1. While in the SLIDE SHOW menu, press ⬚ E ⬚ to select **E EDIT**, then press ⬚ 1 ⬚ to select the **1 MOVE** sub-menu item.

2. With the ⬚ ▲ ⬚ and ⬚ ▼ ⬚ cursor keys, select the captured image you wish to move, then press ⟨ENTER⟩.

3. Select the position to which you wish to move the previously selected image using the ⬚ ▲ ⬚ and ⬚ ▼ ⬚ cursor keys.

4. Pressing ⟨ENTER⟩ will place the selected image at the new location. The selected image will be placed immediately before the current screen.

2 DEL

This sub-menu tool deletes the selected image captured in the SLIDE SHOW.

1. While in the SLIDE SHOW menu, press ⬚ E ⬚ to select **E EDIT**, then press ⬚ 2 ⬚ to select the **2 DEL** sub-menu item.

2. With the ⬚ ▲ ⬚ and ⬚ ▼ ⬚ cursor keys, select the image you wish to delete.

3. Press ⟨ENTER⟩ to remove the selected image from the SLIDE SHOW file.

3 RENAME

Use this sub-menu tool to rename the SLIDE SHOW.

1. In the SLIDE SHOW menu, press ⬚ E ⬚ to select **E EDIT**, then press ⬚ 3 ⬚ to select the **3 RENAME** sub-menu item.

2. The following screen enables you to change the SLIDE SHOW name.

3. Type the new name.

   The default input mode is A-LOCK.

   If you wish to incorporate numbers, press the ⟨ALPHA⟩ key to enter numbers.

   To switch back into the ALPHA mode, press ⟨ALPHA⟩ again.

4. Pressing ⟨ENTER⟩ will store the new SLIDE SHOW name.

Chapter 6
Matrix Features

Within the Matrix features, up to ten different matrices can be entered.

To get to the Matrix features, press ⸤2ndF⸥ ⸤MATRIX⸥. Define and edit the matrices within this mode too.

1. Try it!

Three sheaves of the first class crop, two of the second, and one of the third are sold for 39 dollars. Two of the first, three of the second and, one of the third for 34 dollars. And one of the first, two of the second and three of the third for 26 dollars. How much did you receive from each sheaf of the first, second and third class crops?

(Chapter VIII of Chiu Chang Suan Shu - Nine Chapters of Arithmetic Arts, 200 B.C., China)

Three equations can be derived as follows, containing three unknown quantities:

$$3x + 2y + z = 39$$
$$2x + 3y + z = 34$$
$$x + 2y + 3z = 26$$

x, y and z represent the price for each sheaf of the first, second and third class crops, respectively.

You can solve the above system of linear equations by using a matrix.

CONCEPT

1. Enter the coefficients as elements in a matrix.

2. Use the **rrowEF** function to obtain the reduced row echelon form.

PROCEDURE

Select a matrix to edit

1. Press $\boxed{\text{2ndF}}$ $\boxed{\text{MATRIX}}$ to enter the **MATRIX** menu.

2. Press $\boxed{\text{B}}$ to select **EDIT** and then $\boxed{\text{1}}$ to select **1 mat A**.

ANAME
BEDIT   1mat A 2mat B
COPE   3mat C 4mat D
DMATH   5mat E 6mat F
E[ ]   7mat G 8mat H
            9mat I 0mat J

Define dimensions

3. Press 3 $\boxed{\text{ENTER}}$ 4 $\boxed{\text{ENTER}}$ to define the dimensions of the matrix (3 rows $\times$ 4 columns).

mat A :   3×4
        1   2   3
1 ⌈ 0   0   0
2 | 0   0   0
3 ⌊ 0   0   0

0
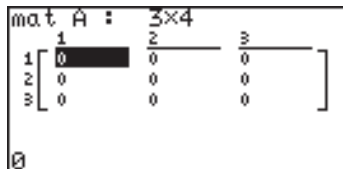
Enter the values

4. Press 3 $\boxed{\text{ENTER}}$ 2 $\boxed{\text{ENTER}}$ 1 $\boxed{\text{ENTER}}$ 3 9 $\boxed{\text{ENTER}}$ to enter the first row of $3x + 2y + z = 39$. The cursor will automatically position itself at the beginning of the second row.

mat A :   3×4
        2   3   4
1 ⌈ 1   1   39
2 | 0   0   0
3 ⌊ 0   0   0

39
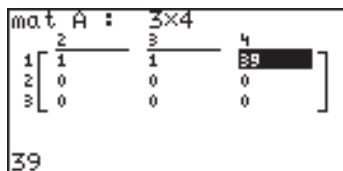
5. Press 2 $\boxed{\text{ENTER}}$ 3 $\boxed{\text{ENTER}}$ 1 $\boxed{\text{ENTER}}$ 3 4 $\boxed{\text{ENTER}}$ to enter the second row of $2x + 3y + z = 34$.

6. Press 1 $\boxed{\text{ENTER}}$ 2 $\boxed{\text{ENTER}}$ 3 $\boxed{\text{ENTER}}$ 2 6 $\boxed{\text{ENTER}}$ to enter the third row of $x + 2y + 3z = 26$.

mat A :   3×4
        2   3   4
1 ⌈ 2   1   39
2 | 3   1   34
3 ⌊ 2   3   26

26
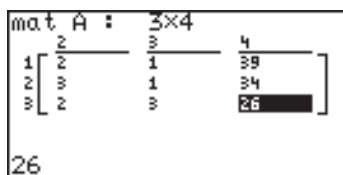
7. Press $\boxed{\text{⊞⊟}}$ to return to the calculation screen. Matrix A is now set.

Solve the problem

8. Press $\boxed{\text{2ndF}}$ $\boxed{\text{MATRIX}}$ to display the MATRIX MENU, and press $\boxed{\text{D}}$ to select **D MATH** and then press $\boxed{\text{4}}$ to select **4 rrowEF**. The reduced row echelon form is now set, as shown:
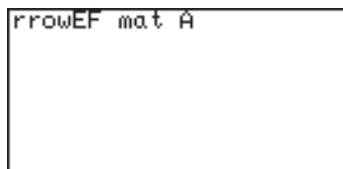
rrowEF mat A

9. Press $\boxed{\text{2ndF}}$ $\boxed{\text{MATRIX}}$, then press $\boxed{\text{A}}$ to select **NAME** and press $\boxed{\text{1}}$ to select **1 mat A**. The Matrix A is now set and ready to be calculated.

10. Press ENTER.

The reduced row echelon form of the matrix is displayed.

Display   Solution

```
rrowEF mat A
        [[1 0 0 9.25]
         [0 1 0 4.25]
         [0 0 1 2.75]]
```

1x + 0y + 0z = x = 9.25
0x + 1y + 0z = y = 4.25
0x + 0y + 1z = z = 2.75

2. Entering and Viewing a Matrix

Select a matrix 1. Press 2ndF MATRIX, then press B (select **EDIT**) and select the matrix you want to define.

Note: Up to 10 matrices from **1 matA** to **0 matJ** can be defined.

Define dimensions 2. Enter the row dimension number and press ENTER.
Cursor moves to the column dimension.

3. Enter the column dimension number and press ENTER.
The matrix will be displayed with null values. (See below.)

* It is not required to press ENTER when the dimension number is 2 digits.

Matrix name

```
mat A :   3×4
      1   2   3
   1[ 3   2   1 ]
   2[ 2   3   1 ]
   3[ 1   2   3 ]
```

Matrix dimensions (row × column)

Element entry field

Input field (bottom line)

Up to 5 rows by 3 columns of elements can be displayed on the screen.

Press ◄ ► ▲ ▼ to scroll the matrix. Use row and column numbers on the left and upper side of the matrix to check the display location.

• If the dimensions of the matrix have previously been defined, the values will be displayed. You can retain or alter the dimensions accordingly.

123

Enter elements in the matrix

1. Press appropriate number keys to enter numbers at the 1st row and 1st column.

   The number is displayed at the bottom of the screen.

2. Press ENTER.

   The cursor moves to the 1st row, 2nd column.

3. Sequentially input the element data.

4. Press 〔田日〕 after completion of data input.

Note: Elements in Matrix can be specified using the NAME menu of the MATRIX menu such as "mat A (1, 1)."

Editing keys and functions

〔◀〕〔▶〕 Move the cursor within the current row or scroll horizontally.

〔▲〕〔▼〕 Move the cursor within the current column or scroll vertically. On the top row, 〔▲〕 moves the cursor to the dimensions field.

ENTER ENTER the number in the cursor position and move the cursor to the next position.

〔CL〕 Clear the value of bottom line (input field).

〔田日〕 Store all the elements of the matrix and returns to the calculation screen.

3. Normal Matrix Operations

Many calculations can be made between a matrix and a real number or between matrices.

Examples of each calculation are as follows:

```
mat A :   3×3            mat B :   3×3
      1      2     3           1      2     3
 1 [  3      2     1 ]    1 [  1      2     3 ]
 2 [  2      3     1 ]    2 [  4      5     6 ]
 3 [  1      2     3 ]    3 [  7      8     9 ]
```

Matrix + Matrix
Matrix – Matrix

To add or subtract matrices, the dimensions must be the same.

Example

1. Press [田田] [CL].
2. Press [2ndF] [MATRIX] [A]
   [1] [+] [2ndF] [MATRIX]
   [A] [2]
3. Press [ENTER].

```
mat A+mat B
              [[4  4    4 ]
               [6  8    7 ]
               [8 10  12]]
```

Matrix × Matrix

To multiply two matrices, the column dimension of the first matrix must match the row dimension of the second matrix.

Example

1. Press [田田] [CL].
2. Press [2ndF] [MATRIX] [A]
   [1] [×] [2ndF] [MATRIX]
   [A] [2]
3. Press [ENTER].

```
mat A×mat B
              [[18 24 30]
               [21 27 33]
               [30 36 42]]
```

Square of Matrix

To obtain the square of a matirx:

Example

1. Press [田田] [CL].
2. Press [2ndF] [MATRIX] [A]
   [1] [x^2]
3. Press [ENTER].

```
mat A²
              [[14 14 8 ]
               [13 15 8 ]
               [10 14 12]]
```

Inverse of Matrix   For the calculation of the inverse of a matrix, please proceed as for the reciprocal of a real number.

Example

1. Press $\boxed{\begin{smallmatrix}田日\\図日\end{smallmatrix}}$ $\boxed{\text{CL}}$.

2. Press $\boxed{\text{2ndF}}$ $\boxed{\text{MATRIX}}$ $\boxed{\text{A}}$ $\boxed{1}$ $\boxed{\text{2ndF}}$ $\boxed{x\text{-}1}$ $\boxed{\text{ENTER}}$.

```
mat A⁻¹
[[0.583333333   -0.333...
 [-0.416666666 0.6666...
 [0.083333333   -0.333...
```
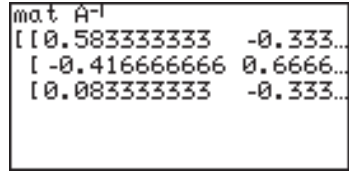
4. Special Matrix Operations

This calculator has three Matrix calculation menus: **OPE**, **MATH** and **[ ]**.
Examples of each calculation are as follows:

```
mat A :   2×2
      1       2
  1[ 5       4
  2[ 4       5  ]
5
```

```
mat B :   2×2
      1       2
  1[ 3       1
  2[ 2       6  ]
6
```

```
mat E :   3×3
      1       2       3
  1[ 5       2       3
  2[ 4       9       2
  3[ 1       5       6  ]
6
```
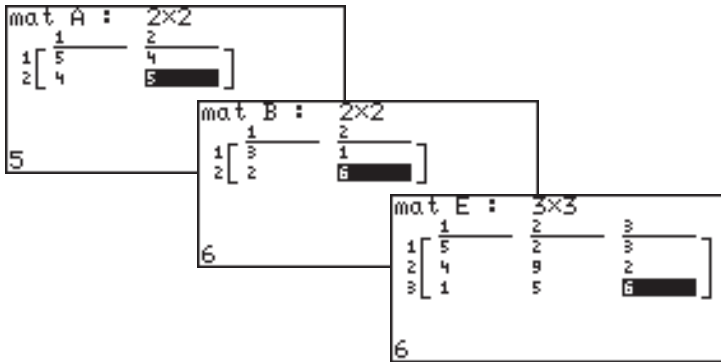
Calculations using OPE menus

01 dim(**dim(*matrix name*)**
Returns the dimensions of the specified matrix.

Example
- Check the dimensions of mat A.
- Newly define or change the dimensions to 2×3 for Mat C.

```
dim(mat A)
                    {2 2}
{2,3}⇒dim(mat C)
                    {2 3}
fill(5,mat C)
                    Done
```
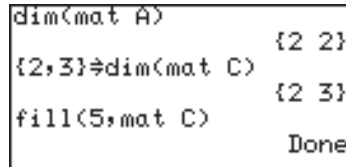
02 fill(**fill(*value, matrix name*)**
Fills each element with a specified value.

Example
- Enter the value 5 into all the empty elements of matrix C.

```
mat C :   2×3
      1       2       3
  1[ 5       5       5
  2[ 5       5       5  ]
```

126
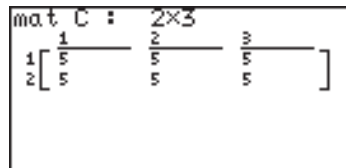
03 cumul   **cumul *matrix name***

Returns the cumulative matrix.

Example

• Obtain the cumulative sum of
  mat A.

  cumulative sum of a_{ij} =

  $a_{i1} + a_{i2} + ... + a_{ij}$

```
cumul mat A
                    [[5 4]
                     [9 9]]
augment(mat A,mat B)
                [[5 4 3 1]
                 [4 5 2 6]]
```

04 augment(**augment(*matrix name*, *matrix name*)**

Appends the second matrix to the first matrix as new columns. The
first and second matrices must have the same number of rows.

Example

• Create a new matrix with matrix A augmented by matrix B.

05 identity   **identity *dimension value***

Returns the identity matrix with specified value of rows and
columns.

Example

• Create the identity matrix of
  3 rows × 3 columns.

```
identity 3
                [[1 0 0]
                 [0 1 0]
                 [0 0 1]]
```

06 rnd_mat(**rnd_mat(*number of row*, *number of column*)**

Returns a random matrix with specified values of rows and
columns.

Example

• Create a matrix of 2 rows ×
  3 columns with generated
  random values.
  (when TAB = 2 and FSE = "FIX"
  at SETUP menu)

```
rnd_mat(2,3)
    [[0.66 0.63 0.49]
     [0.36 0.33 0.56]]
```

07 row_swap(**row_swap(*matrix name*, *row number*, *row number*)**

Returns the matrix with specified rows swapped.

Example

- Swap the 2nd and 3rd rows in the matrix E.

$e_{2j} = e_{3j}$, $e_{3j} = e_{2j}$

```
                   [4 9 2]
                   [1 5 6]]
row_swap(mat E,2,3)
                  [[5 2 3]
                   [1 5 6]
                   [4 9 2]]
```

08 row_plus(**row_plus(*matrix name*, *row number*, *row number*)**

Adds the first specified row data to the second specified row data.

Example

- Add the 2nd row data to the first row of matrix E.

$e_{1j} = e_{1j} + e_{2j}$

```
row_plus(mat E,2,1)
                  [[9 11 5]
                   [4 9  2]
                   [1 5  6]]
```

09 row_mult(**row_mult(*multiplied number*, *matrix name*, *row number*)**

Returns the scalar multiplication of elements in a specified row.

Example

- 3 × each element of 1st row of mat E

$e_{1j} = 3 \times e_{1j}$

```
row_mult(3,mat E,1)
                  [[15 6 9]
                   [4  9 2]
                   [1  5 6]]
```

10 row_m.p.(**row_m.p.(*multiplied number, matrix name, row number, row number*)**

Returns the scalar multiplication of elements in a specified row and adds result to elements in another specified row.

Example

- 2 × each element of 3rd row and add the result to each element of the 1st row.

$e_{1j} = e_{1j} + 2 \times e_{2j}$

```
row_m.p.(2,mat E,3,1)
                  [[7 12 15]
                   [4 9  2 ]
                   [1 5  6 ]]
```

11 mat→list(Creates lists with elements from each column in the matrix.

If dimensions of columns is greater than the number of lists specified, extra columns are ignored. Also, if it is less than the number of lists specified, extra lists are ignored.

mat→list(*matrix name, list name 1, ..., list name n***)**
Example
• Make List 1 and List 2 by using the 1st and 2nd columns of matrix E, respectively.

```
mat→list(mat E,L1,L2)
                  Done
```

mat→list(*matrix name, column number, list name***)**
Example
• Make List 3 by using the 3rd column of matrix E.

```
mat→list(mat E,3,L3)
                  Done
```

```
L1
               {5 4 1}
L2
               {2 9 5}
L3
               {3 2 6}
```

12 list→mat(**list→mat(***list 1, ... list n, matrix name***)**
Creates a matrix using specified lists. This function is the same as **list→mat(** in the List OPE menu.

Note: The list items must be prepared prior to executing this function.

Example
• Create columns of matrix D by using list items in L1 and L2.

```
list→mat(L1,L2,mat D)
                  Done
mat D
               [[5 2]
                [4 9]
                [1 5]]
```

Calculations using MATH menus

1 det   **det** *matrix name*

Returns the determinant of a square matrix.

The determinant can only be applied to a matrix which has the same row and column dimensions.

Example

• Give the determinant of matrix A.

```
det mat A
                           9
```

2 trans   **trans** *matrix name*

Returns the matrix with the columns transposed to rows and the rows transposed to columns.

Example

• Transpose rows and columns of matrix B.

```
det mat A
                           9
trans mat B
                     [[3 2]
                      [1 6]]
```

3 rowEF   **rowEF** *matrix name*

Returns the row Echelon Form of the specified matrix. The number of columns must be greater than or equal to the number of rows.

Example

• Give the row-echelon form of matrix B.

```
rowEF mat B
    [[1 0.333333333]
     [0 1          ]]
```

4 rrowEF   **rrowEF** *matrix name*

Returns the reduced row Echelon Form of the specified matrix. The number of columns must be greater than or equal to the number of rows.

Example

• Give the reduced row-echelon form of matrix B.

```
rrowEF mat B
                     [[1 0]
                      [0 1]]
```

Use of [ ] menus

Using **[ ]** menus, you can manually enter a matrix on the calculation screen.

1. Press `2ndF` `MATRIX` `E` `1` (**[**) at the beginning of the matrix.

2. Press `2ndF` `MATRIX` `1` (**[**) to indicate the beginning of the first row.

   Once you enter the manual matrix entry mode, you can directly enter "or" by selecting `1` or `2`.

3. Enter a number or expression for each element. Separate each element with commas.

4. Press `2ndF` `MATRIX` `2` (**]**) to indicate the end of the first row.

```
[[5,2,3][4,9
```
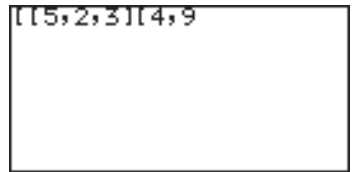
5. Repeat above steps 2 to 4 to enter all the rows.

6. Press `2ndF` `MATRIX` `2` (**]**) to indicate the end of the matrix.

7. Press `ENTER`.

The matrix will be displayed.

```
,2,3][4,9,2][1,5,6]]
             [[5 2 3]
              [4 9 2]
              [1 5 6]]
```
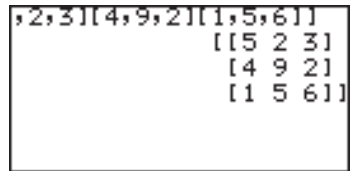
Using a Matrix in an expression To use a matrix in an expression, you can do any of the followings:

- Select a matrix from the `MATRIX` **NAME** menu.

- Enter the matrix directly using the **[ ]** function menus.

Chapter 7
List Features
1. Try it!

By analyzing years of data, we found that it takes the driver of a car approximately 0.75 seconds to react to a situation before actually applying the brakes. Once the brake pedal is depressed, it takes additional time for the car to come to a complete stop. Here is the equation used to compute total stopping distance on dry, level concrete:

The reaction time distance (in feet) = 1.1 times the speed (in miles per hour);
The braking distance = 0.06 times the speed squared;

$y = (1.1 \times v) + (0.06 \times v^2),$

where y represents the total stopping distance (in feet), and v represents the speed (miles/hour)

Calculate the total stopping distances at the speeds of 30, 40, 50, 60, 70, 80 miles per hour.

CONCEPT

1. You can calculate all answers individually, but if you use list, you can obtain the results with one calculation.

PROCEDURE

Enter each speed value in the list

2. Press [⊞⊟/⊠⊞] [CL] to enter the calculation screen.

3. Press [2ndF] [{] 30 [,] 40 [,] 50 [,] 60 [,] 70 [,] 80 [2ndF] [}]
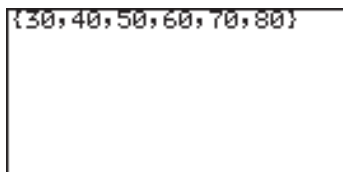
`{30,40,50,60,70,80}`

The calculator displays the set of data.

Store the list in L1

4. Press $\boxed{\text{STO}}$ $\boxed{\text{2ndF}}$ $\boxed{\text{L1}}$.

5. Press $\boxed{\text{ENTER}}$ to store the list in L1.

```
,40,50,60,70,80}⇒L1
    {30 40 50 60 70 80}
```

Enter the equation using L1

6. Press 1.1 $\boxed{\times}$ $\boxed{\text{2ndF}}$ $\boxed{\text{L1}}$ $\boxed{+}$ 0.06 $\boxed{\times}$ $\boxed{\text{2ndF}}$ $\boxed{\text{L1}}$ $\boxed{x^2}$

7. Press $\boxed{\text{ENTER}}$.

```
,40,50,60,70,80}⇒L1
    {30 40 50 60 70 80}
1.1×L1+0.06×L1²
```

8. List {87, 140, 205, 282, 371, 472} will appear.
   So the solutions are:

```
,40,50,60,70,80}⇒L1
    {30 40 50 60 70 80}
1.1×L1+0.06×L1²
{87 140 205 282 371 4...
```

Car speed	Stopping distance
30 miles/hour	87 feet
40 miles/hour	140 feet
50 miles/hour	205 feet
60 miles/hour	282 feet
70 miles/hour	371 feet
80 miles/hour	472 feet

Note:
• You can also perform the above calculation using the direct list input method (using braces).

```
30,40,50,60,70,80}²_
```

1.1 $\boxed{\times}$ {30, 40, 50, 60, 70, 80} $\boxed{+}$ 0.06 $\boxed{\times}$ {30, 40, 50, 60, 70, 80} $\boxed{x^2}$ and press $\boxed{\text{ENTER}}$.

2. Creating a list

A list is a series of values enclosed by braces, and is treated as a single value in calculations or an equations.

The calculator has 6 storage areas for lists from L1 to L6.

You can edit or access lists by pressing [2ndF] [L1] to [L6] (numeric keys from 1 to 6).

Using [2ndF] [LIST] **(L_DATA)** menus, you can store up to 10 sets (L_DATA 0 to L_DATA 9) of lists (L1 to L6) in a memory and recall any of the stored sets as required.

Store a series of data 1, 3, 2, and 9 in the list L1, and 5, 4, 6, 3 in L2

1. Press [▦] [CL] to enter the calculation screen.
2. Press [2ndF] [{] 1 [,] 3 [,] 2 [,] 9 [2ndF] [}]
3. Press [STO] [2ndF] [L1].
4. Press [ENTER] to store the list in L1.

```
{1,3,2,9}⇒L1
                {1 3 2 9}
```

5. Press [2ndF] [{] 5 [,] 4 [,] 6 [,] 3 [2ndF] [}] [STO] [2ndF] [L2] [ENTER] for L2.

```
{1,3,2,9}⇒L1
                {1 3 2 9}
{5,4,6,3}⇒L2
                {5 4 6 3}
```

Tips: To view a specific list, press [2ndF] [L1] to [L6], then [ENTER] at the calculation screen.

3. Normal List Operations

• Lists can contain real and complex numbers.

• Lists can be used as values (or variables) in calculations or equations.

• Calculations between lists are also possible. (Both lists must contain the same number of elements.)

• The following examples use the L1 and L2 values stored in the previous section.

Calculate 10 ×
L1 and store the
results in L3

1. Press 10 [×] [2ndF] [L1]
[STO] [2ndF] [L3] [ENTER].

```
{1;3;2;9}⇒L1
              {1 3 2 9}
{5;4;6;3}⇒L2
              {5 4 6 3}
10×L1⇒L3
          {10 30 20 90}
```

Calculate the
sine of L3

2. Press [sin] [2ndF] [L3]
[ENTER]. "..." shows that results
extend beyond the display
to the right. Use [◄],
[►] to scroll left or right,
respectively.

```
{5;4;6;3}⇒L2
              {5 4 6 3}
10×L1⇒L3
          {10 30 20 90}
sin L3
{ -0.54402111 -0.98803…
```

Calculate
L1 + L2

3. Press [2ndF] [L1] [+]
[2ndF] [L2] [ENTER].

```
L1+L2
              {6 7 8 12}
```

Change the 3rd
element of L1
to –3

4. Press [(–)] 3 [STO] [2ndF]
[L1] [( ] 3 [ )] [ALPHA]
[:] [2ndF] [L1] [ENTER].

```
-3⇒L1(3):L1
              {1 3 -3 9}
```

Append the new
value 7 to L1 as
the 5th element

5. Press 7 [STO] [2ndF] [L1]
[( ] 5 [ )] [ALPHA] [:]
[2ndF] [L1] [ENTER].

Note: Separated by a colon (:), two or
more commands can be entered
in one line.

```
7⇒L1(5):L1
              {1 3 -3 9 7}
```

Calculate the
root of L2

6. Press [2ndF] [√] [2ndF]
[L2] [ENTER].

```
√L2
{2.236067977 2 2.4494…
```

4. Special List Operations

This calculator has four list calculation menus: OPE, MATH, L_DATA and VECTOR.

Calculations using the OPE menu functions

1 sortA(**sortA(*list name*)**
Sorts lists in ascending order.

Example
- Store list {2, 7, 4} in L1, and sort L1 in ascending order.

```
{2,7,4}⇒L1
                    {2  7  4}
sortA(L1)
                        Done
L1
                    {2  4  7}
```

2 sortD(**sortD(*list name*)**
Sorts lists in descending order.

Example
- Sort the above list L1 in descending order.

```
L1
                    {2  4  7}
sortD(L1)
                        Done
L1
                    {7  4  2}
```

Note: **sortA(*list name 1, subordinate list name 1*,...)**
If two or more lists are entered separated by commas, a sort is performed on the first list as a key, and the following lists are sorted in the order corresponding to the elements in first list (key list).

Example
- Store lists {2, 7, 4} and {-3, -4, -1} in L1 and L2 respectively, and sort L1 and L2 in ascending order using list L1 as a key list.

```
{2,7,4}⇒L1
                    {2  7  4}
{-3, -4, -1}⇒L2
                {-3  -4  -1}
```

```
sortA(L1,L2)
                        Done
L1
                    {2  4  7}
L2
                {-3  -1  -4}
```

```
sortD(L2,L1)
                    Done
L1
              {4  2  7}
L2
          {-1  -3  -4}
```

3 dim(**dim(*list*)**

Returns the number of items
(dimension) in the list.

Example

• Display the dimension of list
  L1.

```
dim(L1)
                    3
dim({7,3,2,1})
                    4
```

natural number ⇒ **dim(*list name*)**

Set the number of items (dimension) of specified list to the
specified number.

Example

• Set the dimension of list L6 to 4.

```
4⇒dim(L6)
                    4
L6
          {0  0  0  0}
```

  All the elements are initially 0.
  This operation overwrites the
  existing list dimensions.

  The existing values within the new dimensions remain as they
  are.

4 fill(**fill(*value*, *list*)**

Enter the specified value for all the items in the specified list.

* The dimension of the list must be set beforehand.

Example

• Set the dimension of list L6 to
  4 and substitute 5 for all the
  items of list L6.

```
4⇒dim(L6)
                    4
fill(5,L6)
                 Done
L6
          {5  5  5  5}
```

137

5 seq(seq(*equation*, *start value*, *end value[*, *increments]*) $\Rightarrow$ target list name

Makes a list using the specified equation, range (start value and end value) and increments.

Example

- Fill the list using the equation $y = x^2 - 8$, where x increases from -4 to 4 by increments of 2.

- * If increment is omitted, the default value 1 is used.

```
seq(X²-8, -4,4,2)⇒L4
          {8 -4 -8 -4 8}
```

6 cumul cumul *list*

Sequentially cumulates each item in the list.

$l_i = l_1 + l_2 + \ldots + l_i$, where l_i is the i-th item of the list.

Example

- Set the list L1 to {4, 2, 7}, and obtain the cumulated list L1.

- Cumulate the above result.

```
cumul L1
               {4 6 13}
cumul Ans
               {4 10 23}
```

7 df_list df_list *list*

Returns a new list using the difference between adjacent items in the list.

$l_i = l_{i+1} - l_i$, where l_i is the i-th item of the list.

Example

- Set the list L1 to {4, 2, 7}, and calculate the difference between adjacent items.

```
df_list L1
                {-2 5}
df_list {4,2,7}
                {-2 5}
```

8 augment(**augment(*list 1*, *list 2*)**

Returns a list appending the specified lists.

Example

• Obtain the list appending L1
  ({4, 2, 7}) and L2 ({-1, -3, -4}).

```
augment(L1,L2)
        {4 2 7 -1 -3 -4}
augment({1,2},{3,4})
              {1 2 3 4}
```

9 list→mat(**list→mat(*list 1, ..., list n, matrix name*)**

Makes a matrix using the specified list as column data, stored
under the specified matrix name.

Example

• Make a matrix mat A using list
  L1 as the first column and list
  L2 as the second column.

* The dimensions of the two lists
  must be the same.

```
list→mat(L1,L2,mat A)
                  Done
mat A
              [[4  -1]
               [2  -3]
               [7  -4]]
```

* Complex numbers cannot be used with this function.

* This function is the same as **list→mat** of the OPE menu in the
  MATRIX function.

0 mat→list(**mat→list(*matrix name*, *list name 1*, ..., *list name n*)**
                   mat→list(*matrix name*, *column number*, *list name*)
                   Makes lists from the matrix.

This function is the same as "mat→list" of the OPE menu in the
MATRIX function. See page ??? for details.

Calculations using MATH Menus

During the following explanations, the values of lists, L1 and L2 will be assumed to be:

L1 = {2, 8, -4}

L2 = {-3, -4, -1}

1 min(**min(*list*)**
Returns the minimum value in the list.

Example
- Calculate the minimum value of the list L1.

```
min(L1)
                    -4
max(L2)
                    -1
max({-3, -4, -1})
                    -1
```

2 max(**max(*list*)**
Returns the maximum value in the list.

Example
- Calculate the maximum value of the specified list L2.

Note: **min(*list 1, list 2*)**
max(*list 1, list 2*)

If two lists are specified in parenthesis separated by a comma, then a list consisting of minimum (or maximum) values is returned.

```
min(L1,L2)
              {-3  -4  -4}
max(L1,L2)
              {2  8  -1}
```

3 mean(**mean(*list [, frequency list]*)**
Returns the mean value of items in the specified list.

Example
- Calculate the mean value of list L1.

```
mean(L1)
                    2
mean({2,8,-4})
                    2
```

4 median(**median(*list [, frequency list]*)**

Returns the median value of items in the specified list.

Example

- Calculate the median value of
  the list L2.

```
median(L2)
                        -3
median({-3, -4, -1})
                        -3
```

5 sum(**sum(*list [, start number, end number]*)**

Returns the sum of items in the specified list.

Example

- Calculated the sum of the list
  items of L1.

```
sum(L1)
                        6
sum(L1,1,2)
                       10
sum(L1,2)
                        4
```

* You can specify the range of
  items in the list to sum.

`sum(L1,1,2)` means sum
the 1st to 2nd items of the list L1.

`sum(L1,2)` means sum all items from the second to the last of
the list L1.

6 prod(**prod(*list [, start number, end number]*)**

Returns the multiplication of items in the specified list.

Example

- Calculate the multiplication of
  items in the list L1.

```
prod(L1)
                       -64
prod(L1,1,2)
                        16
prod(L1,2)
                       -32
```

* You can specify the range of
  items in the list to multiply.

`prod(L1,1,2)` means
multiply the 1st to 2nd items of the list L1.

`prod(L1,2)` means multiplication of all items from the second
to the last of the list L1.

7 stdDv(**stdDv(*list [, frequency list]*)**

Returns the standard deviation of the specified list items.

Example

• Calculate the standard
  deviation using the list items of
  list L2.

```
stdDv(L2)
              1.527525232
stdDv({-3, -4, -1})
              1.527525232
```

8 varian(**varian(*list [, frequency list]*)**

Returns the variance of the specified list items.

Example

• Calculate the variance using
  the list items of list L2.

```
varian(L2)
              2.333333333
varian({-3, -4, -1})
              2.333333333
```

9 P_stdDv(**P_stdDv(*list [, frequency list]*)**

Returns the population standard deviation of the specified list
items.

Example

• Calculate the population
  standard deviation using the
  list items of list L2.

```
P_stdDv(L2)
              1.247219129
```

Standard deviation and variance

Standard deviation: $s = \sqrt{\text{Variance}}$

Variance $= \sqrt{\dfrac{\sum\limits_{k=1}^{n} (l_k - m)^2}{n - 1}}$

Population standard deviation: $\sigma = \sqrt{\dfrac{\sum\limits_{k=1}^{n} (l_k - m)^2}{n}}$

where n = number of list items
         l_k = list item value
         m = mean value of the list

Calculations using VECTOR Menus

During the following explanations, the values of lists, L1 and L2 will be assumed to be:

L1 = {2, 8, -4}

L2 = {-3, -4, -1}

These functions use lists as vectors.

1 CrossPro(**CrossPro(*list name1, list name2*)**

Calculate the cross product (vector product) of two lists.

Example

• Calculate the cross product of L1 and L2.

CrossPro(L1,L2)

Note: Calculation range: up to 3-dimentional vector

2 DotPro(**DotPro(*list name1, list name2*)**

Calculate the dot product.

Example

• Calculate the dot product of L1 and L2.

DotPro(L1,L2)

Note: Calculation range: up to 9-dimentional vector

5. Drawing multiple graphs using the list function

Using list items as coordinates, you can simultaneously draw multiple graphs.

1. Press [Y=].

2. Enter the equation;

    Y1 = {3, -2}x^2 + {5, 3}x + {2, 4}

3. Press [GRAPH].

    Two graphs are drawn as shown on the right.

    In this case, the first one represents the equation y = 3x^2 + 5x + 2 and the second y = -2x^2 + 3x + 4.
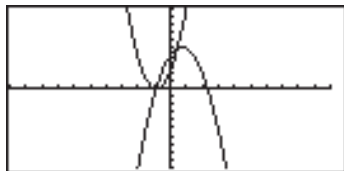
You can also use L1 to L6 to enter the equation;

1. Set the lists L1 to L3 as follows;

    {3, -2} ⇒ L1,

    {5, 3} ⇒ L2,

    {2, 4} ⇒ L3, and then

2. Enter the equation as follows.

    Y1 = L1x^2 + L2x + L3

6. Using L_DATA functions

The calculator can store up to 10 list groups in memory (L_DATA 0 to L_DATA 9). You may store or recall any one of these list groups. Each list group can contain up to 6 lists.

1 StoLD   **StoLD** *natural number* (0-9)

Stores the current group of lists (L1 to L6) in L_DATA 0 to 9.

Example

1. Press [2ndF][LIST] and select [C][1].

2. Enter the preferred number from 0 to 9 and press [ENTER].

    "Done" will appear and the current lists will be stored in L_DATA #.

2 RclLD   **RclLD *natural number*** *(0-9)*

Recall the stored group of lists for use.

Any current list data (not stored in L_DATA) is overwritten.

Example

1. Press `2ndF` `LIST` and
   select `C` `2`.

2. Enter the number to recall
   and press `ENTER`.

   "Done" will appear and the

   current lists will be overwritten by the recalled list group.
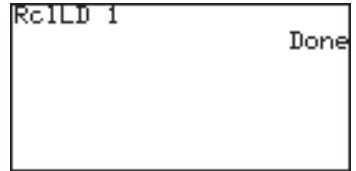
7. Using List Table to Enter or Edit Lists

You can use List Table in the STAT menu to easily access the contents of the lists.

Though the STAT menu was originally designed for Statistics function calculations, the List Table is very useful for entering or editing list items.

How to enter the list

1. Press `STAT` `A` `ENTER`.

   The list table will appear.

   The first column indicates
   the order number of each
   list, and the 2nd column

   corresponds to the list L1, the 3rd to the L2, and so on.

2. Move the cursor to the target cell and enter the appropriate
   value.

   The value will appear on the bottom line.

3. Press `ENTER`.

   The value will enter the cell and the cursor move down to the
   next cell.

* "--------" indicates the end of the list. When you enter the value,
  "--------" goes down to the next cell.

How to edit the list

1. Press ⌈ STAT ⌉ and select **A EDIT**, then press ⌈ENTER⌉.

2. Use the cursor keys to move the cursor to the target cell.

3. Enter the new value and press ⌈ENTER⌉.
   The new value will be stored in the target cell.

* The display on the bottom line relates to the cell where the cursor pointer is located.

Though any number can be entered in a cell, the bottom line of the screen can display up to a maximum of 10 digits excluding exponents, and the cell can display up to a maximum of 8 digits including exponents.

Chapter 8
Statistics & Regression Calculations

The following statistical and regression features are available:

- Statistical calculations such as means and standard deviations
- Graphing statistical data
- Plotting regression curves
- Statistical tests
- Estimation
- Obtaining coefficients from regressions
- Distribution functions

1. Try it!

The following table shows the access counts (per hour) of a certain web site from Sunday midnight to Monday midnight.

Hours	01	02	03	04	05	06	07	08	09	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
Sunday	98	72	55	3	6	24	15	30	59	72	55	43	21	10	150	151	135	108	204	253	232	251	75	30
Monday	32	8	12	2	4	19	32	72	95	91	123	201	184	108	95	72	45	38	75	111	153	90	84	35

Let's input these data into the calculator (List function) and plot a histogram.
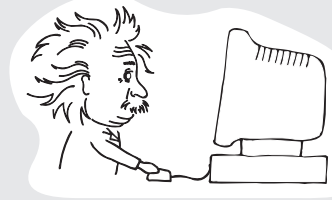
Opening the list table to enter data

1. Press [STAT].
   The Stat menu will appear.

2. Select **A EDIT** and press ENTER.
   The List table will appear. Initially, all elements are blank and
   the cursor pointer is located at L1-1 (top left).

Entering hours (index value)

3. Input 1 for hour.

4. 1 will be displayed at the bottom line of the display.

5. Press ENTER to input the index value.

N o	1: L1	2: L2	3: L3
1	--------	--------	--------
2			
3			
4			
5			
6			
1			

6. Continue the procedure to input 2 to 24.

Entering the data for Sunday

7. Press ▶ to move the cursor to the top line of L2.

8. Input 98 for hour 01.
   98 will be displayed at the bottom line of the display.

N o	1: L1	2: L2	3: L3
1	1	98	--------
2	2	--------	
3	3		
4	4		
5	5		
6	6		

9. Press ENTER to input the data.
   98 will appear in position L2-1 and the cursor will move to the
   second row.

10. Input 72 for hour 02 and press ENTER. Continue the procedure
    to the end of the data.

Entering the data for Monday

11. Press ▶ to move the cursor to the top line of L3.

12. Input 32 for hour 01 and press ENTER.

13. Continue the procedure to the end of the data.

N o	1: L1	2: L2	3: L3
19	19	204	75
20	20	253	111
21	21	232	153
22	22	251	90
23	23	75	84
24	24	30	--------
35			

If you enter the wrong data

1. Press ◀, ▶, ▲, or ▼ to move the cursor
   pointer to the target cell.

2. Input the correct number and press ENTER.

Graphing the statistical data (Histogram)

Now we can plot the data to make histograms, broken line graphs
and other statistical graphs.

1. Press STAT PLOT.

2. Select **A PLOT1** and press ENTER.
   The following screen will appear.

Setting the graph drawing "on"

3. The first line shows if the graph drawing is on or off. Initially, the graph drawing is off. With the cursor pointer at the "on" position, press ENTER to set the graph drawing on.

4. Press ▼ to move the cursor to the next line (DATA).
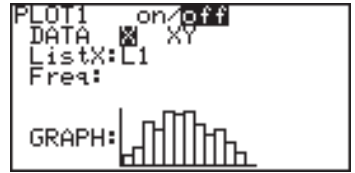
Selecting whether 1-variable plotting or 2-variable plotting

5. Select X for 1-variable plotting and press ENTER.

Select the list number used for graphing

Determining ListX and Freq Frequency relates to the number of times access occurred (L2) at the ListX stage. You can refer that the Access of ListX (L1) hour occurred Freq (L2) number of times.

6. Press ▼ to move the cursor to the next line (ListX).

7. The default list name for ListX is L1. If another list name is set, press 2ndF L1 to enter L1.

8. L1 is set to be used for x-axis items.

Setting the frequency

9. Press ▼ to move the cursor to the next line (Freq).

10. Press 2ndF L2 to enter L2.
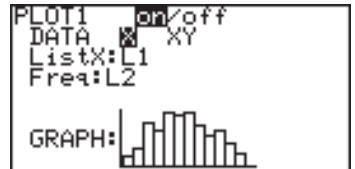
Selecting the graph

11. Press ▼ to move the cursor to the next line (GRAPH).

12. The graph format defaults to histogram, so if that is what is required, this does not need to be changed.

Making a graph

13. Press ZOOM, and then select **A ZOOM**.

14. Press ▶ to move the cursor right and then press ▼ several times. **9 Stat** will appear.

15. Select **9 Stat** and press ENTER.
    You can directly press ⌐ 9 ⌐ at step 13 to select **9 Stat**.
    The histogram will appear on the display.

    When you draw the graph using the automatic statistics zoom function (**9 Stat**), the division number is automatically set to $\frac{X_{max} - X_{min}}{X_{scl}}$ (default value: 10). If you wish to show the graph hour by hour, change the value in the WINDOW menu.

Set the WINDOW settings

1. Press WINDOW.
   Window (Rect) setting menu will appear.
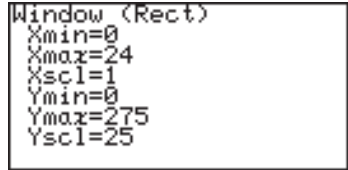
2. Enter the values as shown in the diagram to the right.
   Ymax is determined by the maximum access number (253 at 20:00 on Sunday).

```
Window (Rect)
 Xmin=0
 Xmax=24
 Xscl=1
 Ymin=0
 Ymax=275
 Yscl=25
```

Compare the access rates on Sunday and Monday

3. Press GRAPH.
   You can compare up to 3 statistical data by setting PLOT2/PLOT3 to on.
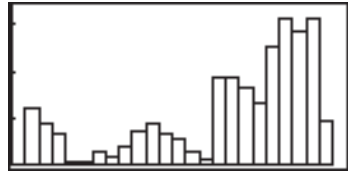
Set the statistical plotting of PLOT1 (Sunday data) to a broken line

1. Press STAT/PLOT ⌐ A ⌐ ENTER and move the cursor to GRAPH.

2. Press STAT/PLOT again.

3. Press ⌐ B ⌐ and ⌐ 1 ⌐ (broken line with circle dots).
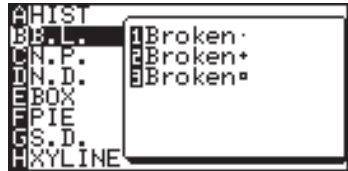
4. Press GRAPH.
   The histogram is now changed to a broken line graph.

```
AHIST
BB.L.      1Broken·
CN.P.      2Broken+
DN.D.      3Broken▫
EBOX
FPIE
GS.D.
HXYLINE
```

5. Press 2ndF QUIT to clear the screen.

6. Press STAT/PLOT and select **B PLOT2**.

7. Set as follows.
   PLOT: on, DATA: X, ListX: L1, and Freq: L3.

8. Move the cursor to GRAPH and press $\boxed{\substack{\text{STAT} \\ \text{PLOT}}}$.

9. Press $\boxed{\text{B}}$ $\boxed{2}$ (broken line with cross points).

10. Press $\boxed{\text{GRAPH}}$.
    Now you can compare the difference in web site access counts between Sunday and Monday.
    Press $\boxed{\text{2ndF}}$ $\boxed{\text{QUIT}}$.
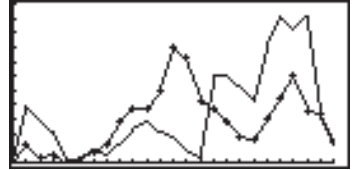
2. Statistics Features

1. STAT menus

Press the $\boxed{\text{STAT}}$ key to access the statistical calculation menus. The menus are as follows:

A EDIT	Provides the entry or edit mode and displays a list table.
B OPE	Calculation menu for operations such as ascending or descending sort.
C CALC	Obtains statistical values.
D REG	Calculates regression curves.
E TEST	Statistical hypothesis tests
F DISTRI	Distribution menu items

Data Entry   Use a list table to enter the statistical data (press $\boxed{\text{STAT}}$ to access). Up to 999 elements can be used for each list, though the amount of data able to be entered will vary according to the memory usage.

Calculating statistic values (CALC menu)   Use the CALC menu under the STAT menu to obtain statistic values.
Press $\boxed{\text{STAT}}$ $\boxed{\text{C}}$ to access the CALC menu.

2. Statistical evaluations available under the C CALC menu

1_Stats   1-variable (x) statistical a calculations

$\overline{x}$ Mean of sample (x)

sx   Standard deviation of sample (x)

$$sx = \sqrt{\frac{\Sigma x^2 - n\overline{x}^2}{n-1}}$$

σx   Population standard deviation of sample (x)

$$\sigma x = \sqrt{\frac{\Sigma x^2 - n\overline{x}^2}{n}}$$

Σx   Sum of sample (x)

Σx^2 Sum of squares of sample (x)

n   Sample number

xmin   Smallest value of sample (x)

Q1   First quartile of sample (x)

Med   Median of sample (x)

Q3   Third quartile of sample (x)

xmax   Largest value of sample (x)

2_Stats   2-variable (x, y) statistical calculations

The following values are added to the 1-variable statistic calculations

$\overline{y}$ Mean of sample (y)

sy   Standard deviation of sample (y)

σy   Population standard deviation of sample (y)

Σy   Sum of sample (y)

Σy^2 Sum of squares of sample (y)

Σxy   Sum of product of sample (x, y)

ymin   Smallest value of sample (y)

ymax   Largest value of sample (y)

The web site access counts example on page 145 will be used again to demonstrate the calculation of statistical values.

Hours	01	02	03	04	05	06	07	08	09	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
Sunday	98	72	55	3	6	24	15	30	59	72	55	43	21	10	150	151	135	108	204	253	232	251	75	30
Monday	32	8	12	2	4	19	32	72	95	91	123	201	184	108	95	72	45	38	75	111	153	90	84	35

* If you did not previously enter the above values in the list table, press $\boxed{\text{STAT}}$ and select **A EDIT** to display the list entry mode and enter the values.

Calculating one-variable statistics using web site access counts for Sunday (L2) and Monday (L3).

Statistical calculations using the Sunday data (L2)

1. Press $\boxed{\text{⊞⊟}}$ $\boxed{\text{CL}}$ and $\boxed{\text{STAT}}$ to display the statistics menu.

2. Press $\boxed{\text{C}}$ and then $\boxed{1}$.
   1_Stats will be displayed on the top line of the screen followed by the cursor.

3. Press $\boxed{\text{2ndF}}$ $\boxed{\text{L2}}$ to enter L2 and press $\boxed{\text{ENTER}}$. All the statistical values will be displayed on the screen.


   ```
   1_Stats L2
   ```



   ```
   1_Stats
    x̄=89.66666667
    sx=79.35646965
    σx=77.68562
    Σx=2152
   ↓Σx²=337804
   ```

4. Press $\boxed{\blacktriangledown}$ or $\boxed{\blacktriangle}$ to scroll the screen.

Statistical calculations using the Monday data (L3)

5. Press $\boxed{\text{STAT}}$ to display the statistics menu.

6. Press $\boxed{\text{C}}$ and then $\boxed{1}$.
   1_Stats will be displayed on the bottom line of the screen followed by the cursor.

7. Press $\boxed{\text{2ndF}}$ $\boxed{\text{L3}}$ to enter L3 and press $\boxed{\text{ENTER}}$.


   ```
   1_Stats
    x̄=74.20833333
    sx=54.94105867
    σx=53.78427525
    Σx=1781
   ↓Σx²=201591
   ```

Calculating the previous two-variable statistical values can be performed in a single operation. Use a " , " (comma) to separate the two variables.

1. Press [田田/図田] [CL] and [STAT] to display the statistics menu.

2. Press [C] and then [2]. **2_Stats** will be displayed on the top line of the screen followed by the cursor.

3. Press [2ndF] [L2] [,] [2ndF] [L3] to enter L2 and L3, and press [ENTER]. All the statistical values will be displayed on the screen.

4. Press [▼] or [▲] to scroll the screen.
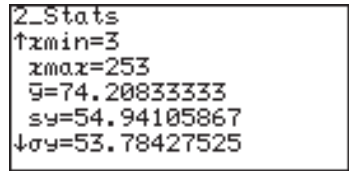
ANOVA(The **ANOVA(** feature performs an analysis of variance to compare up to six population means.

1. Press [田田/図田] [CL] and [STAT] to display the statistics menu.

2. Press [C] and then [3]. **ANOVA(_** will display on the top line of the screen.

3. Press [2ndF] [L2] [,] [2ndF] [L3] [ )].
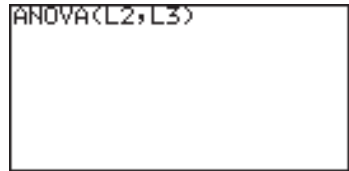
4. Press [ENTER]. The answer will appear on the screen.

Each character represents the following variables.

F	The F statistic for the analysis
p	The p value for the analysis
df	Degrees of freedom
SS	Sum of squares
MS	Mean Square
sxp	Pooled standard deviation
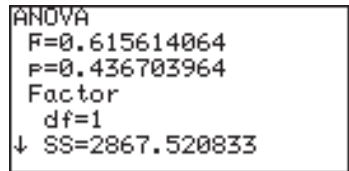
3. Graphing the statistical data

Press $\boxed{\substack{\text{STAT}\\\text{PLOT}}}$ to access the statistical graphing mode.

The calculator can plot statistical data on up to 3 types of graph (PLOT1 to PLOT3) to check the state of distribution.

The graph types can be selected from histogram, broken line plot, normal probability plot, normal distribution plot, box plot, modified box plot, pie chart, scatter diagram and XY line. Broken line plot, normal probability plot, modified box plot, scatter diagram and XY line can use 3 different types of points — circle, cross, and square.

Statistical graph types overview (chart)
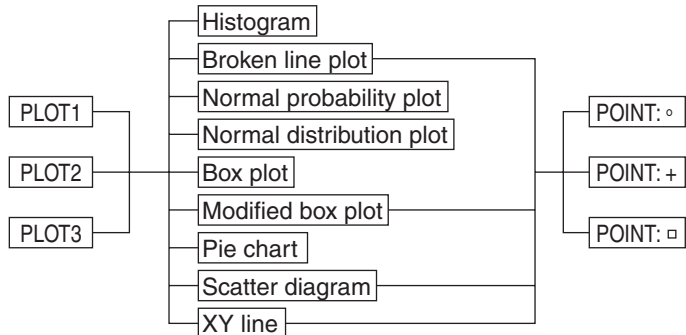
1. Graph Types

Histogram (HIST)

A bar graph of sample (x)
The width of the bars is set by the Xscl*.
The Y-axis shows the frequency.

* The Xscl can be changed to between 1 and 64. Use the Window Setting Menu to change the Xscl. (See page ??.)
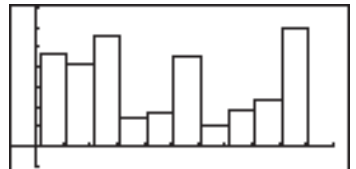
Broken line plot (B.L.)

A broken line graph for the frequency distribution of sample (x)
Three types of points can be selected from circle, cross and square.
The broken line is displayed by connecting the upper left points of the bars of the histogram, as the upper left point of each bar represents each class value in the histogram.

The calculator can draw both a histogram and a broken line plot at the same time.
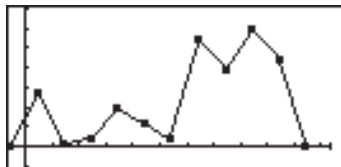
Normal probability plot (N.P.)

Plots the variance of the standardized normal distribution with the statistical data (x) on the X axis or Y axis.
If the points plot almost linearly, it indicates that the data is of normal distribution.
The distance between the dots is set by the Xscl.

- The Xscl can be changed between 1 and 64. Use the Window Setting Menu to change the figure. (See page ??)

- You cannot set the frequency in the Normal probability plot. The statistical data must be created using only one list without splitting into the data and frequency.
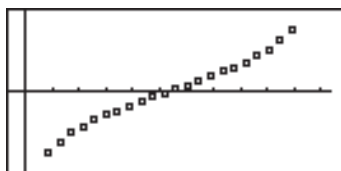
Normal distribution plot (N.D.)

A normal distribution curve of sample(x)
The x-axis is in the range of Xmin to Xmax.
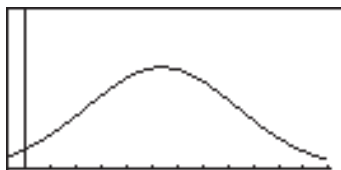
**Box plot
(Box)**

A box plot graph of sample (x)

A. The minimum value (xmin) of the sample (x)

B. The first quartile (Q1)

C. Median (Med) of the sample (x)

D. The third quartile (Q3)

E. The maximum value (xmax) of the sample (x)
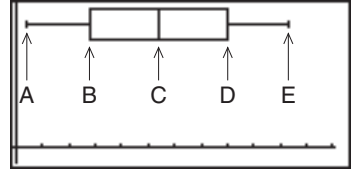
**Modified box plot
(MBox)**

A modified box plot graph of sample (x)

A. The minimum value (xmin) of the sample (x)

B. The tip of extension which is defined by (Q3 − Q1) x 1.5

C. The first quartile (Q1)

D. Median (Med) of the sample (x)

E. The third quartile (Q3)

F. The tip of extension which is defined by (Q3 − Q1) x 1.5

G. The maximum value (xmax) of the sample (x)

• Statistical data on the outside of the extension are indicated by points, selectable from circle, cross, or square.

• The length of the extension from the box is determined by Q1 and Q3.
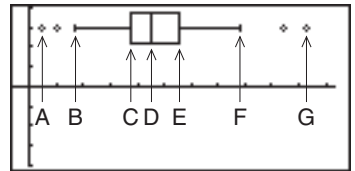
Pie chart (PIE)

Pie graph of sample (x)

- Maximum number of division is 8.
- Calculation range: $0 \leq x < 10^{100}$
- Data can be displayed in two modes:
  - Value display: 8 digits
  - Percentage display: Fixed decimal (2 digits decimal)
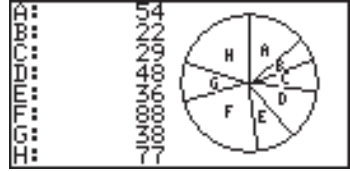
* Pie graphs are drawn in the same order as on the specifying list.

* Pie graphs cannot be displayed simultaneously with other graphs and X/Y axis, though lines or dots can be drawn. The coordinates of the free-moving cursor depend on the Window settings.

- The values are stored in variables A to H.
- As all the displayed values are rounded down in the percentage display mode, the total percentage may not be 100.

Scatter diagram (S.D.)

A two-dimensional plot graph using two samples (x, y)

Two sets of statistical data are required for the scatter diagram.

- Three types of points are selectable from circle, cross and square.
- Two statistical data lists can be set to either x- or y-axis according to your requirements.
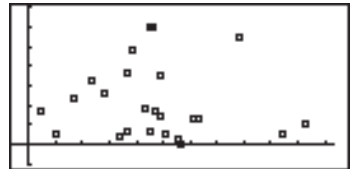
XY Line (XYLINE)

- Displays a graph that connects each point of the scatter diagram.
- Each point is connected in the sequence (rows) of the statistical data.
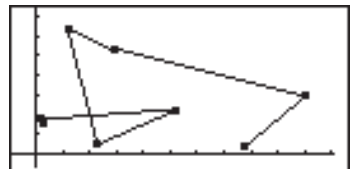
2. Specifying statistical graph and graph functions

• Up to three graphs can be plotted per sample data.

Specifying type of statistics graphing

1. Press $\boxed{\substack{\text{STAT} \\ \text{PLOT}}}$.

2. Select from **A PLOT1**, **B PLOT2** or **C PLOT3** and press $\boxed{\text{ENTER}}$ to set the statistical graphing specifications.

    Press $\boxed{\text{2ndF}}$ $\boxed{\text{QUIT}}$ before step #3.

• You may just press $\boxed{\text{A}}$ to $\boxed{\text{C}}$ to select.

• You can overlap 3 plotting graphs (from PLOT1 to PLOT3) on a single screen. Choose on or off at the top line to determine whether each graph is displayed or not.

Limit settings (x value)

3. Press $\boxed{\substack{\text{STAT} \\ \text{PLOT}}}$ $\boxed{\text{D}}$ **(D Limit)** to specify the graphing range. The **D Limit** menu is used to set the upper and lower limit lines of sample (x) of the statistical graph.

Displaying the upper and lower limit lines

4. Press $\boxed{1}$ **(1 SET)**.

5. Enter the appropriate value for Lower limit and press $\boxed{\text{ENTER}}$.

6. Enter the appropriate value for Upper limit and press $\boxed{\text{ENTER}}$.

Displaying the mean value line of sample (x)

7. Press $\boxed{\substack{\text{STAT} \\ \text{PLOT}}}$ $\boxed{\text{D}}$ **(D Limit)** and press $\boxed{2}$ **(2 LimON)** $\boxed{\text{ENTER}}$ to display a line that indicates the mean value of sample (x), as well as the upper and lower limit lines.

8. Press $\boxed{\substack{\text{STAT} \\ \text{PLOT}}}$ $\boxed{\text{D}}$ $\boxed{3}$ **(3 LimOFF)** and $\boxed{\text{ENTER}}$ not to display the lines.

• Upper and lower limit values are displayed using short broken lines.

• The default value of the upper/lower limit is 1.

* The mean value line is indicated by a long broken line.

3. Statistical plotting on/off function

• You can set the statistical plotting of PLOT 1 to 3 at once.

1. Press $\boxed{\substack{\text{STAT} \\ \text{PLOT}}}$.

2. Press $\boxed{\text{E}}$.

3. • To set the all plotting ON: Press ⬚1⬚ (**1 PlotON**).
   • To set the all plotting OFF: Press ⬚2⬚ (**2 PlotOFF**).

   * You can control the plotting of **PLOT1** to **PLOT3** separately by pressing ⬚1⬚ ~ ⬚3⬚ after **PlotON** (or **PlotOFF**).

4. Press ⟨ENTER⟩ to set.

4. Trace function of statistical graphs

• The trace feature is available in statistical graphing and can be used to trace the curves of graphs with the cursor.

Tracing the graph

1. Press ⟨TRACE⟩.
2. Use ⟨◀⟩ or ⟨▶⟩ to move the cursor pointer to trace the graph curve.

Histogram

How tracing is done

• After pressing ⟨TRACE⟩, the cursor pointer will appear on the top left corner of the first bar.

P1:L3,L1
X=85.936407   Y=105

• If you press ⟨◀⟩ or ⟨▶⟩, the cursor pointer sequentially jumps between top left corners of the bars.
• X and Y values are displayed at the bottom line of the screen.
• Use ⟨▲⟩ or ⟨▼⟩ to change between graphs to trace.
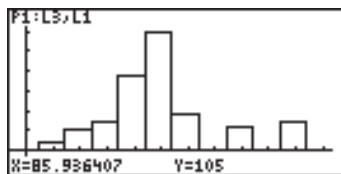
Box plots and modified box plots

• After pressing ⟨TRACE⟩, the cursor pointer will appear on the Med value of sample (x).

P1:L1,L2
Med=18

• If you press ⟨◀⟩ or ⟨▶⟩, the cursor pointer sequentially jumps among specific values, such as Q1, Q3, min, max.
• The value of cursor pointer position is displayed at the bottom line of the screen.
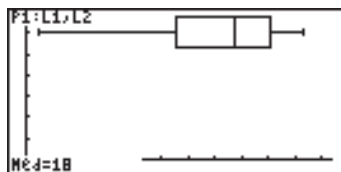
Pie chart

• If you press ⟨◀⟩ or ⟨▶⟩, the cursor pointer sequentially trace the chart. The cursor is displayed at the outside the graph, and the selected chart is highlighted.

4. Data list operations

Descending sort, ascending sort, changing the list order and deleting the lists can be done in the Operation menu.

Press [STAT] **B OPE** to access the data list operations.

1 sortA(**sortA(*list*)**
Sorts the list in ascending order.
This function is the same as the sortA(menu item in List functions.
See page 135 for details.

2 sortD(**sortD(*list*)**
Sorts the list in descending order.
This function is the same as the sortD(menu item in List functions.
See page 135 for details.
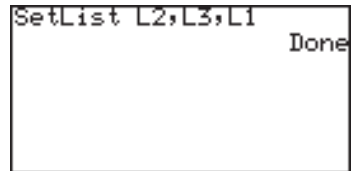
3 SetList   **SetList *list name 1 [, list name 2 ...]***
Changes the list order as specified.

Example
To change the order of lists in order of L2, L3, L1.

Press [ENTER] to execute.
Each list must be separated by a " , " (comma).

```
SetList L2,L3,L1
                   Done
```

- If only a single list name is specified, the specified list moves to the left end of the table.

- After changing the list order, execute **SetList** with no argument. The list names are redefined according to the changing order.
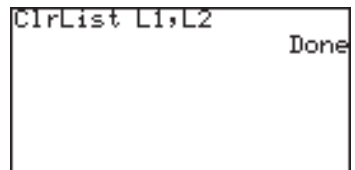
4 ClrList   **ClrList *list name 1 [, list name 2 ...]***
Deletes all the data from the specified list(s).

Example
To delete the data of L1 and L2.

Press [ENTER] to execute.
Each list must be separated by a " , " (comma).

```
ClrList L1,L2
                   Done
```

5. Regression Calculations

Accessing the regression menu

1. Press $\boxed{\text{STAT}}$ **D REG**.
   The Regression menu is displayed.

01 Med_Med

Med_Med *(list name for x, list name for y [, frequency list] [, equation name to store])*
Finds the regression line using the median-median method. (linear regression)

Formula: $y = ax + b$
Parameters: a, b

02 Rg_ax+b

Rg_ax+b *(list name for x, list name for y [, frequency list] [, equation name to store])*
Finds the regression line. (linear regression)

Formula: $y = ax + b$
Parameters: a, b, r, r^2

03 Rg_ax

Rg_ax *(list name for x, list name for y [, frequency list] [, equation name to store])*
Finds the regression line. (linear regression)

Formula: $y = ax$
Parameters: a, r^2

04 Rg_a+bx

Rg_a+bx *(list name for x, list name for y [, frequency list] [, equation name to store])*
Finds the regression line. (linear regression)

Formula: $y = a + bx$
Parameters: a, b, r, r^2

05 Rg_x^2

Rg_x^2 *(list name for x, list name for y [, frequency list] [, equation name to store])*
Finds the regression line using the second degree polynomial. (quadratic regression)

Formula: $y = ax^2 + bx + c$
Parameters: a, b, c, R^2

06 Rg_x³ **Rg_x³** *(list name for x, list name for y [, frequency list] [, equation name to store])*

Finds the regression line using the third degree polynomial. (cubic regression)

Formula: $y = ax^3 + bx^2 + cx + d$
Parameters: a, b, c, d, R^2

07 Rg_x⁴ **Rg_x⁴** *(list name for x, list name for y [, frequency list] [, equation name to store])*

Finds the regression curve using the fourth degree polynomial. (quartic regression)

Formula: $y = ax^4 + bx^3 + cx^2 + dx + e$
Parameters: a, b, c, d, e, R^2

08 Rg_ln **Rg_ln** *(list name for x, list name for y [, frequency list] [, equation name to store])*

Finds the regression curve using the natural logarithm. (natural logarithm regression)

Formula: $y = a + b \ln x$
Parameters: a, b, r, r^2

09 Rg_log **Rg_log** *(list name for x, list name for y [, frequency list] [, equation name to store])*

Finds the regression curve using the common logarithm. (common logarithm regression)

Formula: $y = a + b \log x$
Parameters: a, b, r, r^2

10 Rg_abˣ **Rg_abˣ** *(list name for x, list name for y [, frequency list] [, equation name to store])*

Finds the regression curve using the exponential function. (exponential regression)

Formula: $y = ab^x$
Parameters: a, b, r, r^2

11 Rg_aeᵇˣ **Rg_aeᵇˣ** *(list name for x, list name for y [, frequency list] [, equation name to store])*

Finds the regression curve using the Euler exponential function. (Euler exponential regression)

Formula: $y = ae\text{^}bx$
Parameters: a, b, r, r^2

12 Rg_x^{-1}   **Rg_x^{-1}** *(list name for x, list name for y [, frequency list] [, equation name to store])*

Finds the regression curve using the reciprocal function. (reciprocal regression)

Formula: $y = a + bx^{-1}$
Parameters: a, b, r, r^2

13 Rg_ax^b   **Rg_ax^b** *(list name for x, list name for y [, frequency list] [, equation name to store])*

Finds the regression curve using the power function. (power regression)

Formula: $y = ax^b$
Parameters: a, b, r, r^2

14 Rg_logistic   **Rg_logistic** *(list name for x, list name for y [, frequency list] [, equation name to store])*

Finds the regression curve using the logistic function. (logistic regression)

Formula: $y = c \div (1 + ae^{-bx})$
Parameters: a, b, c

15 Rg_sin   **Rg_sin** *([iterations,] list name for x, list name for y [, frequency list] [, period] [, equation name to store])*

Finds the regression curve using the sine function.
The calculator will fit a sine curve for unequal and equal spacing.

Formula: $y = a \sin(bx + c) + d$
Parameters: a, b, c, d

Note: The default iterations value is 3. The user may specify the value up to 25. To raise the accuracy, set the iterations value to 25 and enter $2\pi/b$ to the period, where b = result obtained from the calculation beforehand.

16 x'   *value or list* **x'**

Finds the estimated value of x for a given value of y by applying the function determined by the regression.

Example

When the following is entered as statistical data:

x	10	20	30	40	50
y	20	40	60	80	100

Find estimated value of x given *y = 140*.

1. Enter the above data into L1 (x) and L2 (y) and execute **Rg_ax+b** (L1, L2).

2. Press [⊞] 140 [STAT] [D] [1] [6] [ENTER].

```
a=2
b=0
r=1
r²=1
140x'
              70
```

17 y'   *value or list* **y'**

Find the estimated value of y for a given value of x by applying the function determined by the regression formula.

Example

Using above data, find the estimated value for y given *x = 80*, *100*.

1. Press [⊞] [2ndF] [{] 80 [,] 100 [2ndF] [}] [STAT] [D] [1] [7] [ENTER].

• **16 x'** and **17 y'** will be valid after executing a regression calculation excluding 2nd, 3rd, 4th, degree polynomial, logistic, and sine regressions.

```
r=1
r²=1
140x'
              70
{80,100}y'
        {160 200}
```

Using the regression functions

The following table shows the relationship between the time and temperature of water, when heating a beaker filled with water.

Time (min)	2	3	4	5	6	7	8	9	10	10.5	11	11.5	12	12.5
Temperature (°C)	38.4	46.4	54.4	62.5	69.6	76.1	82.4	88.6	93.4	94.9	96.5	98.2	99.1	100

Enter a data in a list table

1. Press $\boxed{\text{STAT}}$ $\boxed{\quad A \quad}$ $\boxed{\text{ENTER}}$.

2. Enter the time into list 1 (L1).

3. Enter the temperature into list 2 (L2).

Plotting the data

1. Press $\boxed{\substack{\text{STAT} \\ \text{PLOT}}}$ $\boxed{\quad A \quad}$ $\boxed{\text{ENTER}}$.

2. Press $\boxed{\text{ENTER}}$ to turn on the plotting.

3. Press $\boxed{\blacktriangledown}$ and $\boxed{\blacktriangleright}$ to select XY of DATA menu and press $\boxed{\text{ENTER}}$.
   Freq will change to ListY and set L2 to ListY.

Selecting the graph type

1. Press $\boxed{\blacktriangledown}$ to move the cursor to GRAPH.

2. Press $\boxed{\substack{\text{STAT} \\ \text{PLOT}}}$ $\boxed{\quad G \quad}$ and $\boxed{\quad 2 \quad}$ **(2 Scattr+)** to set the graph type to scatter and point type to "+".

3. Press $\boxed{\text{ZOOM}}$ $\boxed{\quad A \quad}$ $\boxed{\quad 9 \quad}$ **(9 Stat)** to plot the scatter diagram for this data.

• Selecting $\boxed{\quad A \quad}$ $\boxed{\quad 9 \quad}$ in the ZOOM mode allows for quick graphing in an optimum range since window setting values of the graph plotting screen are automatically set using the list data.

Drawing a regression curve using quadratic regression

1. Press $\boxed{\substack{\boxplus\boxminus \\ \boxtimes\boxminus}}$ $\boxed{\text{CL}}$ $\boxed{\text{STAT}}$ $\boxed{\quad D \quad}$ $\boxed{\quad 0 \quad}$ $\boxed{\quad 5 \quad}$ **(05 Rg_x^2)**.

2. Press $\boxed{\quad (\quad}$ $\boxed{\text{2ndF}}$ $\boxed{\quad L1 \quad}$ $\boxed{\quad , \quad}$ $\boxed{\text{2ndF}}$ $\boxed{\quad L2 \quad}$ $\boxed{\quad , \quad}$ $\boxed{\text{2ndF}}$ $\boxed{\text{VARS}}$ $\boxed{\quad A \quad}$ $\boxed{\text{ENTER}}$ $\boxed{\quad A \quad}$ $\boxed{\quad 1 \quad}$ $\boxed{\quad) \quad}$.
   If you enter Y1 as the last variable, the obtained formula will automatically be set to the formula Y1.

3. Press $\boxed{\text{ENTER}}$.
   The regression formula and parameters will be displayed on the screen.

4. Press $\boxed{\text{GRAPH}}$.
   The calculator will draw the scatter diagram using the determined parameter values.

5. If there is a large difference between the regression curve and plotted dots, change the regression curve and repeat the above procedures.

About the residual list

- There are residuals between regression curves and actual values.

- The residual list stores these residuals automatically.

- The **resid** list can be found in **B REGEQN** of the STAT VARS menu (2ndF VARS H ENTER B 0).

- Use the following key operation to recall the residual list from the calculation screen.

  ⌗⌗ CL 2ndF VARS H ENTER B 0

- Press ENTER to display the residual list on-screen.

- To show the residual list in the form of a graph, first store as a list, then follow the graphing operation.

- * **resid** cannot be graphed when specified independently.

6. Statistical Hypothesis Testing

- The calculator performs hypothesis tests on statistical data.

Start a statistical test

1. Press STAT E **(E TEST)**.
   The statistics test menu will appear.

2. There are 17 options in the statistics test menu. Press ▶
   to navigate between pages, and press ▲ or ▼ to scroll the window.

3. Press the appropriate number to access a specific test.
   The statistics test window will appear.

4. Input appropriate information in the test window.

   - There are two types of input, from a statistics data list or inputting numerical values.

   - Some tests may not allow for inputting from the statistics data lists.

- **16 InputList** and **17 InputStats** specify the above input methods.

  16 InputList: Sets the input mode to the statistic data list method

  17 InputStats: Sets the input mode to the value input mode

  For example, press [STAT] [E] [1] [6] [ENTER] to set to the list input mode.

5. Press [2ndF] [EXE] to execute the hypothesis test.

Note: • Either list input or parameter input may be used for tests other than **01 χ^2test**, **05 TtestLinreg**, **10 Ztest1prop**, **11Ztest2prop**, **14 Zint1prop** and **15 Zint2prop**.

• To clear the contents entered in **Freq**, move the cursor to the list name then press [DEL] [ENTER].

01 χ^2 test   Uses the sample data from a two-dimensional table represented by a matrix.

Example

If mat A =   3 2 5 4
               6 1 3 8
               2 3 5 1

execute the χ^2test and store the obtaining results in mat B.

1. Press [STAT] [E] [0] [1].

2. Enter mat A as the Observed Matrix, and mat B as the Expected Matrix.

   Press [2ndF] [MATRIX] [A] [1] [ENTER] [2ndF] [MATRIX] [A] [2].
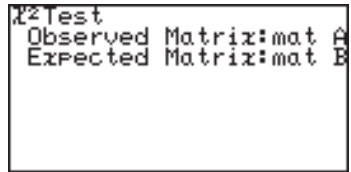
3. Press [2ndF] [EXE] to execute the χ^2 test. The result is entered in mat B.
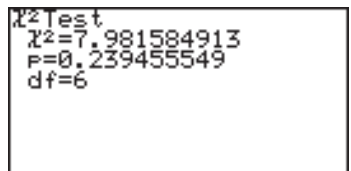
χ^2: χ-squared statistic for the test

p: p value for the test

df: degrees of freedom

02 Ftest2samp Two samples data are tested for equality of standard deviation σ_1 and σ_2.

Example

Test when population standard deviation $\sigma_1 < \sigma_2$,

$n_1 = 20$,
standard deviation $sx_1 = 5.6$,

$n_2 = 50$, and
standard deviation $sx_2 = 6.2$

Set the input method to value input mode

1. Press [⊞⊞] [STAT] [E] [1] [7] [ENTER].

2. Press [STAT] [E] [0] [2].
   The parameter input screen will appear.

   ```
   Ftest2samp
   σ1≠σ2  σ1<σ2  σ1>σ2
   sx1=0
   n1=0
   sx2=0
   n2=0
   ```

3. Press [▶] [ENTER] [▼] to select $\sigma_1 < \sigma_2$.

4. Enter the values into the parameter fields.

   5.6 [ENTER] 20 [ENTER] 6.2 [ENTER] 50 [ENTER].

5. Press [2ndF] [EXE] to execute the test.

   F: Statistics

   p: Probability

   ```
   Ftest2samp
   σ1<σ2
   F=0.815816857
   P=0.321426456
   sx1=5.6
   sx2=6.2
   n1=20
   n2=50
   ```

03 Ttest1samp Tests the hypothesis of population mean μ.

Example

Test the population mean $\mu_0 = 65$ with the sample data of

{65.6, 62.8, 66.0, 64.5, 65.1, 65.3, 63.8, 64.2, 63.5, 64.4},

from a given population
(alternate hypothesis of $\mu < \mu_0$)

1. Enter the above statistical data into L1.
   Press [STAT] [E] [1] [6] [ENTER] to set the list input mode.

2. Press [STAT] [E] [0] [3].
   The parameter input screen will appear.

3. Press ▶ ENTER ▼ to select $\mu < \mu_0$ and press ENTER.

4. Move the cursor pointer to μ_0 and input 65 and press ENTER.

```
Ttest1samp
μ≠μ0 μ<μ0 μ>μ0
μ0=65
List:L1  Freq:
```

5. Set the List to L1 and press ENTER.

6. Press 2ndF EXE. Answers are displayed on the screen, where t is the t statistic for the test, p is the p value for the test and sx indicates sample standard deviation.

```
Ttest1samp
μ<65
t=-1.523319186
p=0.081006024
x̄=64.52
sx=0.9964381
n=10
```
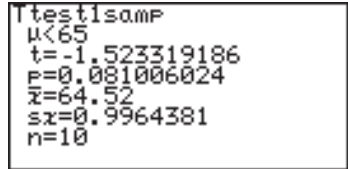
• If there is no weight list, the Freq field can remain empty.

04 Ttest2samp　Tests two sample means, μ_1 and μ_2.

Example

Test the following two samples;

List 1 {2.37, 2.51, 2.43, 2.28, 2.46, 2.55, 2.49}
List 2 {2.63, 2.71, 2.56, 2.61, 2.55, 2.68, 2.42, 2.48, 2.51, 2.65}

1. Enter the above data into lists L1 and L2, respectively.

2. Press STAT E 0 4. The parameter input screen will appear.

```
AEDIT    01 χ² test
BOPE     02 Ftest2samp
CCALC    03 Ttest1samp
DREG     04 Ttest2samp
ETEST    05 TtestLinreg
FDISTRI  06 Tint1samp
```

3. Enter the appropriate value into each field.
   If no Freq specification data is input, an initial Freq value of 1 is used.
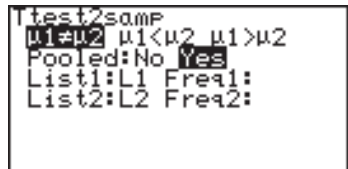
   * Pooled is prediction for unknown σ_1, σ_2.
   Select "No" if σ_1, σ_2, are subjectively unequal.
   Select "Yes" if σ_1, σ_2, are equal.
   Calculation is executed using this prediction as the basis.

```
Ttest2samp
μ1≠μ2 μ1<μ2 μ1>μ2
Pooled:No Yes
List1:L1 Freq1:
List2:L2 Freq2:
```

4. Press $\boxed{\text{2ndF}}$ $\boxed{\text{EXE}}$.

```
Ttest2samp
 µ1≠µ2
 t=-3.050093286
 P=0.008101925
 df=15
 x̄1=2.441428571
 x̄2=2.58
↓sx1=0.091729415
```

05 TtestLinreg   Tests the significance of the slope for the linear regression and its correlation coefficient ρ.

Example

The test is for the slope β, and correlation coefficient ρ obtained from statistical data X {65, 56, 78, 86, 92, 71, 68} and Y {95, 59, 88, 78, 75, 68, 80} are not equal to zero (β & $\rho \neq 0$.)

1. Input the above lists X and Y into lists L1 and L2, respectively.

2. Press $\boxed{\text{STAT}}$ $\boxed{\text{E}}$ $\boxed{0}$ $\boxed{5}$.
    The parameter input screen will appear.

```
AEDIT
BOPE        01 X²test
CCALC       02 Ftest2samp
DREG        03 Ttest1samp
ETEST       04 Ttest2samp
FDISTRI     05 TtestLinreg
            06 Tint1samp
```

3. Enter the appropriate value into each field.

    • Equation items may not be required.

    • If a linear regression calculation has been

```
TtestLinreg
B&p≠0 B&p<0 B&p>0
ListX:L1 Freq:
ListY:L2
Equation:RegEqn
```

    executed using the data, and the function equation has been stored in Y0 to Y9, input that equation number for the equation items.

4. Press $\boxed{\text{2ndF}}$ $\boxed{\text{EXE}}$.
    Answers are displayed on the screen, where a, b indicate regression coefficients, s indicates standard deviation, r indicates the correlation

```
TtestLinreg
y=ax+b
B&p≠0
 t=0.490444536
 P=0.64458274
 df=5
 a=0.205846342
↓b=62.39761249
```

    coefficient, and r^2 indicates the coefficient of determination.

171

06 Tint1samp Finds the confidence interval for the population mean μ.

Example

Find the confidence interval for the statistical data of

{65.6, 62.8, 66.0, 64.5, 65.1, 65.3, 63.8, 64.2, 63.5, 64.4},

from a given population and the level of confidence is 0.99.

1. Enter the above statistical data into list L1.

2. Press [STAT] [E] [0] [6].
   The parameter input screen will appear.

3. Enter the C-level value of 0.99.

```
Tint1samp
C-level=0.99
List:L1  Freq:
```

4. Set the List to L1 and press [ENTER].

5. Press [2ndF] [EXE].
   Answers are displayed on the screen, where sx indicates the sample standard deviation.

```
Tint1samp
(63.495972,65.544028)
x̄=64.52
sx=0.9964381
n=10
```

   • If you enter a value from 1 to 100 for the C-level, it will be changed to the % input mode.

   • In the numerical value input mode, n is a positive integer.

07 Tint2samp Finds the confidence interval for the difference of two sample means, μ_1 and μ_2.

Example

Use the following two sample data (used for example 04);

List 1 {2.37, 2.51, 2.43, 2.28, 2.46, 2.55, 2.49}
List 2 {2.63, 2.71, 2.56, 2.61, 2.55, 2.68, 2.42, 2.48, 2.51, 2.65},

with the level of confidence of 0.99.

1. Enter the above data in to lists L1 and L2.

2. Press [STAT] [E] [0] [7].
   The parameter input screen will appear.

3. Enter the appropriate value in each field.

4. Press [2ndF] [EXE].
   Answers are displayed on the screen, where the numerical value within () indicates the confidence interval for the differences between μ_1 and μ_2 when the level of confidence is 99%.
   In the numerical value input mode, "n_1", "n_2" are positive integers.
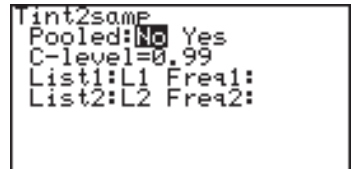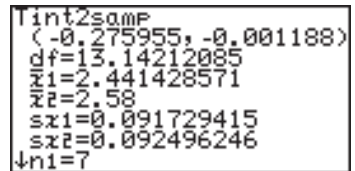
08 Ztest1samp Tests the hypothesis of population mean μ.

Example

The average weight of a newly developed product is known to be 53.4 g and standard deviation (σ) is 4.5. Judge the validity when the average weight of 20 units is 52.4 g (x).

Set the input method to value input mode

1. Press [⌗] [STAT] [E] [1] [7] [ENTER].

2. Press [STAT] [E] [0] [8].
   The parameter input screen will appear.

3. Set the alternate hypothesis to $\mu \neq \mu_0$, $\mu < \mu_0$ and $\mu > \mu_0$ (two-tail test, one-tail test settings). In this case, choose $\mu \neq \mu_0$ (two-tail test).
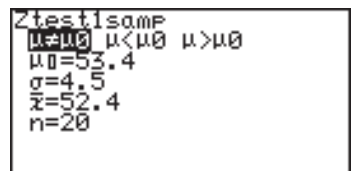
- μ_0 indicates the hypothesis mean, σ indicates the population standard deviation, x indicates the sample mean and n indicates the sample size. ("n" is a positive integer.)

4. Enter the appropriate value in each field.

5. Press 2ndF EXE.
   Answers will be displayed on the screen, where z indicates the test statistic and p indicates the p value of the test.

```
Ztest1samp
 μ≠53.4
 z=-0.99380799
 p=0.320316355
 x̄=52.4
 n=20
```

09 Ztest2samp   Tests the equality of two sample means, μ_1 and μ_2.

Example

Test $\mu_1 > \mu_2$ where $\overline{x}_1 = 77.3$, $\sigma_1 = 3.4$, $n_1 = 30$, and $\overline{x}_2 = 75.2$, $\sigma_2 = 2.8$, $n_2 = 20$.

Set the input method to value input mode

1. Press ⊞ STAT E 1 7 ENTER.

2. Press STAT E 0 9.
   The parameter input screen will appear.

3. Enter the appropriate value into each field.

```
Ztest2samp
 μ1≠μ2 μ1<μ2 [μ1>μ2]
 σ1=3.4
 σ2=2.8
 x̄1=77.3
 n1=30
 x̄2=75.2
 n2=20
```

4. Press 2ndF EXE.
   Answers will be displayed on the screen.

```
Ztest2samp
 μ1>μ2
 z=2.381856808
 p=0.008612815
 x̄1=77.3
 x̄2=75.2
 n1=30
 n2=20
```

10 Ztest1prop   Tests the success probability P_0 of a population.

Example

A coin was tossed 100 times and landed head side up 42 times.
Normally, the probability of head facing up is 0.5. Test to see if the
coin is fair.

1. Press [STAT] [E] [1] [0].
   The parameter input screen will appear.

   • prop is the hypothesis probability. The test will be conducted
     using hypothesis prop ≠ P_0.

   • x is the number of successes observed and n is the number
     of trials (where n is a positive integer.)

2. Enter the appropriate value
   into each field.

```
Ztest1prop
PROP≠P0  PROP<P0  PROP>P0
P0=0.5
x=42
n=100
```

3. Press [2ndF] [EXE].
   p̂: Success probability
   obtained from the sample
   data.

```
Ztest1prop
PROP≠0.5
z=-1.6
P=0.109598583
P̂=0.42
n=100
```

11 Ztest2prop   Executes a comparative test for two success probabilities, (P_1, P_2).

Example

Test the equality of P_1 and P_2 given the sample data $n_1 = 50$, $x_1 =$
16 and $n_2 = 20$, $x_2 = 5$, where the hypothesis is $P_1 < P_2$.

1. Press [STAT] [E] [1] [1].
   The parameter input screen will appear.

2. Enter the appropriate value
   into each field.

```
Ztest2prop
P1≠P2  P1<P2  P1>P2
x1=16
n1=50
x2=5
n2=20
```

3. Press 2ndF EXE.
   Answers will be displayed on the screen, where P̂ indicates the calculated success rate of the data combined with sample data 1 and 2, and

```
Ztest2Prop
 P1<P2
 z=0.577350269
 P=0.718148569
 P̂=0.3
 P̂1=0.32
 P̂2=0.25
↓n1=50
```

P̂$_1$ and P̂$_2$ show the success rates of sample data 1 and 2, respectively. n_1 and n_2 are positive integers.

12 Zint1samp Finds the confidence interval of a population mean, μ.

Example

The average weight of a newly developed product is known to be 52.4 g and standard deviation (σ) is 4.5. Given the average weight of 20 units is 53.4 g (x), find the confidence interval of the data where the level of confidence (C-level) is 0.95.

Set the input method to value input mode

1. Press ▦ STAT E 1 7 ENTER.
2. Press STAT E 1 2.
   The parameter input screen will appear.

3. Enter the appropriate value into each field.

```
Zint1samp
 σ=4.5
 C-level=0.95
 x̄=53.4
 n=20
```

4. Press 2ndF EXE.
   Answers will be displayed on the screen, where the numerical value within () indicates the confidence interval with the level of confidence at 0.95, that is, the confidence interval of this sample data with the confidence level of 95% is between 51.427… and 55.372….

```
Zint1samp
 (51.427824,55.372176)
 x̄=53.4
 n=20
```

C-level indicates the level of confidence and n is a positive integer.

13 Zint2samp Finds the confidence bound of two sample means μ_1 and μ_2.

Example

Find the confidence interval of μ_1 and μ_2 of sample data with the confidence level of 0.9, where $\overline{x}_1 = 77.3$, $\sigma_1 = 3.4$, $n_1 = 30$ and $\overline{x}_2 = 75.2$, $\sigma_2 = 2.8$, $n_2 = 20$ ($\overline{x}_1$ and $\overline{x}_2$ indicate sample means of two data.)

Set the input method to value input mode

1. Press 〔田日/図日〕〔STAT〕〔E〕〔1〕〔7〕〔ENTER〕.

2. Press 〔STAT〕〔E〕〔1〕〔3〕.
    Parameter input screen will appear.

3. Enter the appropriate value into each field.

    ```
    Zint2samp
    σ1=3.4
    σ2=2.8
    C-level=0.9
    x̄1=77.3
    n1=30
    x̄2=75.2
    n2=20
    ```

4. Press 〔2ndF〕〔EXE〕.
    Answers will be displayed on the screen, where the numeric value within () indicates the confidence interval of μ_1 and μ_2 at a confidence level of 90%.

    ```
    Zint2samp
    (0.64979  ,3.55021  )
    x̄1=77.3
    x̄2=75.2
    n1=30
    n2=20
    ```

    * n_1 and n_2 are positive integers.

14 Zint1prop Finds the confidence interval of the success probability of a population from the success probability obtained from sample data collected from a population.

Example

A coin was tossed 100 times and landed head side up 42 times. Normally, the probability of head facing up is 0.5. Find the confidence interval of the success probability at a confidence level of 0.95.

1. Press 〔STAT〕〔E〕〔1〕〔4〕.
    The parameter input screen will appear.

2. Enter the appropriate value into each field.

```
Zint1Prop
C-level=0.95
x=42
n=100
```

3. Press [2ndF] [EXE]. Answers will be displayed on the screen, where the numerical value within () indicates the confidence

```
Zint1Prop
(0.3232643,0.5167357)
p=0.42
n=100
```

interval of the success probability at a confidence level of 95%.

   * n is a positive integer.

15 Zint2prop   Finds the confidence interval of the difference $(P_1 - P_2)$ of the success probability obtained from the two sets of sample data collected from two different populations.

Example

Find the confidence interval of the success probability (P_1, P_2) at a confidence level of 0.9 for the two sets of sample data $n_1 = 50$, $x_1 = 16$ and $n_2 = 20$, $x_2 = 5$.

1. Press [STAT] [E] [1] [5]. The parameter input screen will appear.

2. Enter the appropriate value into each field.

```
Zint2Prop
C-level=0.9
x1=16
n1=50
x2=5
n2=20
```

3. Press [2ndF] [EXE].

4. Answers will be displayed on the screen, where the numerical value within () indicates the confidence

```
Zint2Prop
(-0.122715,0.2627148)
p1=0.32
p2=0.25
n1=50
n2=20
```

interval of the success probability $P_1 - P_2$ at a confidence level of 90%.

   * n_1 and n_2 are positive integers.

7. Distribution functions

The calculator has distribution features to find statistical calculations.

To enter the distribution menu,

1. Press [STAT] [F] (F DISTRI).
   The distribution menu will appear.

2. There are 15 options in the distribution menu. Press [▶] to navigate between pages, and press [▲] or [▼] to scroll the window.

3. Press [ENTER] to select the function.

4. Input the specified values.

5. Press [ENTER] to solve.

Note: All functions of the distribution feature can be displayed as a graph by using the graphing feature.

01 pdfnorm(

pdfnorm(*value [, mean, standard deviation]*)
Finds the probability density of the specified value x for the normal distribution $N(\mu, \sigma_2)$. A list cannot be used.

* When mean (μ) and standard deviation (σ) are omitted, $\mu = 0$ and $\sigma = 1$ are applied.

Example
Find the nominal distribution probability density for x = 65 when the normal distribution of the test score averages is 60 with a standard deviation of 6.
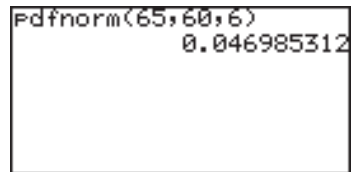
02 cdfnorm(

cdfnorm(*lower limit, upper limit [, mean, standard deviation]*)
Calculates the normal distribution probability of a specified range x for the normal distribution $N(\mu, \sigma^2)$. A list cannot be used.

* When mean (μ) and standard deviation (σ) are omitted, $\mu = 0$ and $\sigma = 1$ are applied.

Example
Calculate the probability of range x = 54 to 66 in the above sample.
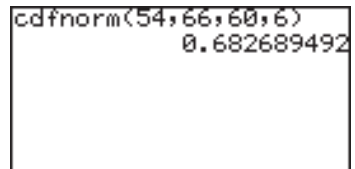
03 InvNorm(**InvNorm(*probability [, mean, standard deviation]*)**

Finds the value of x of a given normal distribution probability. A list cannot be used.

* When mean (μ) and standard deviation (σ) are omitted, $\mu = 0$ and $\sigma = 1$ are applied.

Example

Find the value of x for the probability of 0.8 in the above sample.

```
InvNorm(0.8,60,6)
              65.0497274
```

04 pdfT(**pdfT(*value, degree of freedom*)**

Finds the probability density of a specified value x for the T distribution with n degrees of freedom. A list cannot be used.
Limitations:
Degree of freedom ≤ 140

• Degrees of freedom is a positive real number.
  If decimal values are used for the degrees of freedom, the calculator uses the closest integer of the given degree of freedom.

• An error may occur when an extremely large number is entered for degree of freedom.

Example

Find the probability density of the T distribution with 9 degrees of freedom when x = 2.5.

```
PdfT(2.5,9)
              0.02778012
```

05 cdfT(**cdfT(*lower limit, upper limit, degree of freedom*)**

Finds the T distribution probability within the specified range of x for the T distribution with n degrees of freedom. A list cannot be used.

Limitations:

Degree of freedom $\leq$ 670

• Degrees of freedom is a positive real number.

Example

Find the probability of range X = 0.5 to 3.2 for T distribution with 9 degrees of freedom.

```
cdfT(0.5,3.2,9)
              0.309119998
```

06 pdfχ^2(**pdfχ^2(*value, degree of freedom*)**

Finds the probability density of a specified value x for the χ^2 distribution with n degrees of freedom. A list cannot be used.

Limitations:

Degree of freedom $\leq$ 141

• Degree of freedom is a positive real number.

Example

Find the probability density of χ^2 distribution with 15 degrees of freedom when x = 6.5.

```
pdfχ²(6.5,15)
              0.022010097
```

07 cdfχ^2(**cdfχ^2(*lower limit, upper limit, degree of freedom*)**

Finds the χ^2 distribution probability of a specified range of x for the χ^2 distribution with n degrees of freedom. A list cannot be used.

• Degree of freedom is a positive real number.

Example

Find the probability of range x = 3 to 15 for the χ^2 distribution with 10 degrees of freedom.

```
cdfχ²(3,15,10)
              0.849362207
```

08 pdfF(**pdfF(*value, degree of freedom of numerator, degree of free-dom of denominator*)**

Finds the probability density of a specified value x for the F distribution that possesses two independent degrees of freedom, m and n. A list cannot be used.

Limitations: Degree of freedom ≤ 70

- Degree of freedom is a positive real number.
- An error may occur when an extremely large number is entered for degrees of freedom.

Example

Find the probability density for the F distribution generated with degrees of freedom 15 and 10 when x = 3.

```
pdfF(3,15,10)
            0.044804194
```

09 cdfF(**cdfF(*lower limit, upper limit, degree of freedom of numerator, degree of freedom of denominator*)**

Finds the F distribution probability of a specified range x for the F distribution with two independent degrees of freedom, m and n. A list cannot be used.

Limitations:

Degree of freedom ≤ 670

- Degree of freedom is a positive real number.
- An error may occur when an extremely large number is entered for degree of freedom.

Example

Find the probability of the range x = 0 to 2.5 for the F distribution generated with degrees of freedom 15 and 10.

```
cdfF(0,2.5,15,10)
            0.926291613
```

10 pdfbin(**pdfbin(***trial number, success probability [, success number])***)**

Finds the probability density of a specified value x for the binomial distribution. A list cannot be used except for success numbers. When the success number is not specified, the calculation is executed by entering values from 0 to the trial number and displays the list.
Limitations:
Success probability is $0 \leq p \leq 1$.

Example

Find the probability density for 15 trials with x = 7, for the binomial distribution with success probability of 30%.

```
pdfbin(15,0.3,7)
              0.081130033
```

11 cdfbin(**cdfbin(***trial number, success probability [, success number])***)**

Finds the probability of a specified range x for the binomial distribution. A list cannot be used except for success numbers.

When the success number is not specified, the calculation is executed by entering values from 0 to the trial number and displays the list.

Example

Find the probability of range up to x = 7 for the F distribution generated with degrees of freedom 15 and 10.

```
cdfbin(15,0.3,7)
              0.949987459
```

Note for 10 pdfbin(, 11 cdfbin(:

When using function terms, please note that values for the number of trials and for the success number must be integer(i.e. must be rounded). E.g. inputting Y1=pdfbin(X, 0.5, 0) provides a value table, but no graph is drawn. If X is replaced by „intX", the expected graph is displayed.

12 pdfpoi(**pdfpoi(***mean, value***)**

Finds the probability density of a specified value x for a Poisson distribution of mean μ.
Limitations: Mean of Poisson distribution ≤ 230

Example

Find the probability density of x = 4, for the mean of a Poisson distribution of 3.6.

```
pdfpoi(3.6,4)
              0.191222339
```

13 cdfpoi(**cdfpoi(*mean, value*)**

Finds the probability of a specified range x for a Poisson distribution of mean mu.

Example

Find the probability within the range up to x = 4.

```
cdfPoi(3.6,4)
                0.706438449
```

14 pdfgeo(**pdfgeo(*success probability, value*)**

Finds the probability density of a specified value x for the geometric distribution.
Limitations:
Success probability is $0 \le p \le 1$.

Example

Find the probability density of a geometric distribution of success at the 26th time with success probability of 5.6%.

```
Pdfgeo(0.056,26)
                0.013258301
```

15 cdfgeo(**cdfgeo(*success probability, value*)**

Finds the probability of a specified range of x for the geometric distribution.
Limitations:
Success probability is $0 \le p \le 1$

Example

Find the probability for the range up to x = 26 with success probability of 5.6%.

```
cdfgeo(0.056,26)
                0.77650292
```

Chapter 9
Financial Features

The financial calculation features include capabilities for compound interest calculations.

Press 2ndF FINANCE.

The financial menu screen will appear.

- Specifies the TVM-SOLVER mode.
- Selects a financial calculation function
- Specifies payment due (to pay at the beginning or end of period)
- Determines individual settings (in TVM-SOLVER mode)

1. Try it! 1

> You plan to purchase a house for a price of $300,000. The down payment is $100,000. Calculate the monthly payments for a 30-year loan at an annual interest rate of 5% for the remaining $200,000.

Draw a cash flow diagram on paper

1. Draw the following cash flow diagram to simplify the problem.
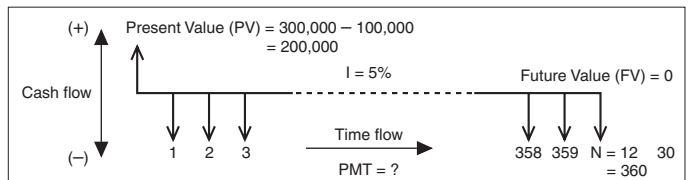
- A horizontal line indicates a time flow (left to right) divided into even sections — months in this case. Each section indicates a compound period and the total number of sections indicates the total number of periods for payment.

- Vertical arrows along the horizontal line indicate the cash flow.

  An UP arrow indicates inflow (+) and a DOWN arrow indicates outflow (–).

- The calculator considers the cash inflow for each period is constant. (Even payment.)

2. Determine the time each payment is due.

    For deposits and loan payments, the time each payment is due (paid at the beginning or the end of the period) makes for a different cash flow diagram.

    Payment due at the end of the period
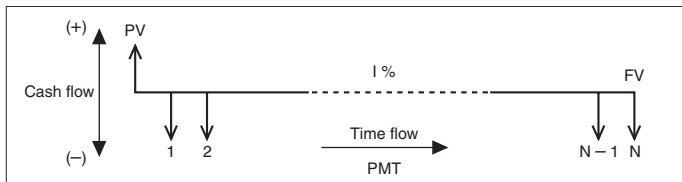
    Payment due at the beginning of the period
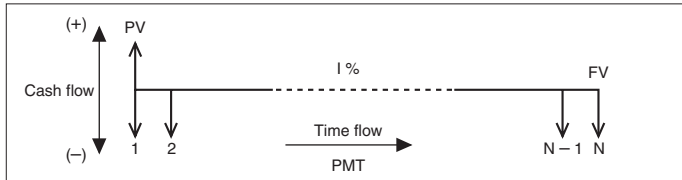
    In this case payment is due at the end of the period.

3. Determine the inflow and outflow and place the present value (PV = $200,000) on the diagram.

    We can consider the present value (PV) as a loan and thus inflow (revenue) from the customer's point of view. So, place the PV at the top left end of the diagram. We also can consider the principal interest total (Future value) as outflow (payment). Draw a vertical line with a DOWN arrow on the top of the diagram.

4. Complete the diagram with interest (I%), number of payment periods (N), future value (FV), and other required numbers.

Starting the calculation	**Setting the payment due time**

5. Press 2ndF FINANCE.

6. Press C **(C PERIOD)**.

7. Press 1 **(1 PmtEnd)** and press ENTER.

   Payment due time is now set to the end of the period.

```
PmtEnd
                    Done
```

Enter the value using the SOLVER function

8. Press 2ndF FINANCE.

9. Press A ENTER.

10. The following TVM-SOLVER screen will appear.

    The payment due time is set to the end of the period.

The payment due time is set to the end of period.

Payment due settings►
Number of payment periods►
Interest►
Present value (principal sum)►
Payment or received amount►
Future value (principal interest total)►
Number of payments per year►
Cumulative interest per year►

```
Payment:END
N=0
I%=0
PV=0
PMT=0
FV=0
P/Y=1
C/Y=1
```

11. Input 360 for N (number of payment periods) and press ENTER.

    The cursor moves to "I%".

12. Input 5 for I% (annual interest) and press ENTER.

13. Input 200000 for PV (present value) and press ENTER.

```
Payment:END
N=360
I%=5
PV=200000
PMT=0
FV=0
P/Y=12
C/Y=12
```
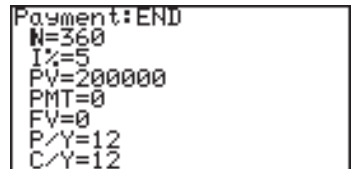
14. Press ENTER.

    Since the payment amount is to be calculated from the other values, no value must be entered for PMT (payment or received amount).

15. Press ENTER again.

    Since FV (future value) is "0" at the end, no value must be entered for FV.

16. Press 12 for P/Y (number of payments per year) and press ENTER.

17. Press ENTER.

    Usually C/Y (cumulative interest per year) is the same value as P/Y. If not, enter the value instead.

```
Payment:END
 N=360
 I%=5
 PV=200000
 PMT=0
 FV=0
 P/Y=12
 C/Y=12
```

18. Press ▲ 3 times to move the cursor to PMT (payment amount).

19. Press 2ndF EXE.

    The result will appear as follows.

20. Payment amount per month
    PMT = -1073.643246
    (Negative value indicates payment.)
    The numerical value input format and display format in

```
Payment:END
 N=360
 I%=5
 PV=200000
*PMT=-1073.643246
 FV=0
 P/Y=12
 C/Y=12
```

    the FINANCE mode comply to that of SETUP.

    The above answer is given when the FSE setting in SET UP menu is set to FloatPT. If you wish to display 2 digit decimal point format, set TAB to 2 and FSE to FIX.

Answer: You have to pay $1,073.64 per month for 30 years.

Simple interest and compound interest

There are two ways to calculate interest: simple and compound. In the FINANCE mode, the calculator can execute compound interest calculations.

Example of depositing $10,000 in a bank for 3 years at an annual interest rate of 3%

Period	Simple interest	Compound interest
First year	Receive $10,000 x 0.03 = $300	Receive $10,000 x 0.03 = $300
Second year	Receive $300 (constantly)	Receive $10,300 x 0.03 = $309
Third year	Receive $300 (constantly)	Receive $10,609 x 0.03 = $318.27

With compound interest, the amount in the bank is increased by receiving interest on the interest gained during each calculated period.

Try it! 2

If the monthly payments in the first example is limit to a fixed $800, how much must be the present value (PV) and the required amount of down payment.
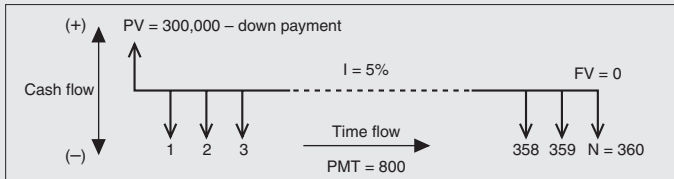
Set the TAB and FSE (2 and FIX respectively)

1. Press [2ndF] [SETUP] [C] 2 [D] 2
   TAB is set to 2 and FSE is set to FIX.

2. Press [CL] [2ndF] [FINANCE] [A] and [ENTER].

   The previous TVM-SOLVER screen will appear with the cursor flashing on N.

   ```
   Payment:END
   N=360.00
   I%=5.00
   PV=200000.00
   PMT=-1073.64
   FV=0.00
   P/Y=12.00
   C/Y=12.00
   ```

3. Press [▼] three times to move the cursor to PMT.

4. Press [(–)] 800 and [ENTER].
   Be sure to enter the minus sign to indicate payment.

   ```
   Payment:END
   N=360.00
   I%=5.00
   PV=0.00
   PMT=-800.00
   FV=0.00
   P/Y=12.00
   C/Y=12.00
   ```

5. Move the cursor to PV.

6. Press [2ndF] [EXE].

7. PV will change to 149025.29

   - This indicates that the total amount over 30 years will be $149,025.29 if the maximum monthly payment is limited to $800.

   ```
   Payment:END
   N=360.00
   I%=5.00
   *PV=149025.29
   PMT=-800.00
   FV=0.00
   P/Y=12.00
   C/Y=12.00
   ```

- So, the required amount of down payment is
  $300,000 − $149,025.29 = $150,974.71.

Using the TVM-SOLVER screen, you can obtain various results by inputting the known variables and then moving the cursor to the unknown variable and pressing 2ndF EXE . The value where the cursor pointer is placed will be calculated from the known variables.

Example

Compare the principal interest total when accumulating an interest of 2.18% monthly on $100 for 5 years with payment due at the beginning of the period and at the end of the period.

1. Payment due at the beginning of the period

    1. Press 2ndF FINANCE C 2 and press ENTER .
    2. Press 2ndF FINANCE A ENTER .

       Payment due is now set to the beginning of the period.

    3. Enter the values.

    4. Move the cursor to FV and press 2ndF EXE .

```
Payment:BEGIN
 N=60.00
 I%=2.18
 PV=0.00
 PMT=-100.00
*FV=6344.65
 P/Y=12.00
 C/Y=12.00
```

2. Payment due at the end of the period.

    1. Press 2ndF FINANCE C 1 and press ENTER .
    2. Press 2ndF FINANCE A ENTER .

       Payment due is now set to the beginning of the period.

    3. Enter the values.

    4. Move the cursor to FV and press 2ndF EXE .

```
Payment:END
 N=60.00
 I%=2.18
 PV=0.00
 PMT=-100.00
*FV=6333.14
 P/Y=12.00
 C/Y=12.00
```

2. CALC functions

Press $\boxed{2ndF}$ $\boxed{FINANCE}$ $\boxed{B}$ to access the **CALC** functions.

The **CALC** functions 01 to 05 calculate any of the following variables from the other variables. (The same calculations are possible as the **SOLVER** functions.)

N: Number of payment periods
I%:   Interest
PV: Present value (principal sum)
PMT: Payment or received amount
FV: Future value (principal interest total)
P/Y: Number of payments per year
C/Y: Cumulative interest per year
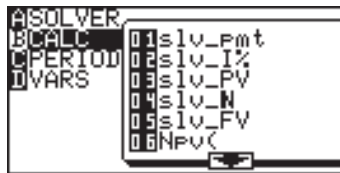
• The contents calculated on the calculation screen do not affect the variable values in the TVM-SOLVER.

01 slv_pmt   **solv_pmt [(N, I%, PV, FV, P/Y, C/Y)]**

Calculates monthly payment (PMT)

02 slv_I%   **slv_I% [(N, PV, PMT, FV, P/Y, C/Y)]**

Calculates annual interest

03 slv_PV   **slv_PV [(N, I%, PMT, FV, P/Y, C/Y)]**

Calculates present value (PV)

04 slv_N   **slv_N [(I%, PV, PMT, FV, P/Y, C/Y)]**

Calculates the number of payment periods (N)

05 slv_FV   **slv_FV [(N, I%, PV, PMT, P/Y, C/Y)]**

Calculates future value (FV)

06 Npv (**Npv (*Interest rate, initial investment, list of following collected investment [, frequency list]*)**

Calculates the net present value and evaluates the validity of the investment. You can enter unequal cash flows in the list of following collected investment.

Example

The initial investment is $25,000 planning to achieve the profits each year as shown on the right, Evaluate whether annual revenue of 18% is achieved.
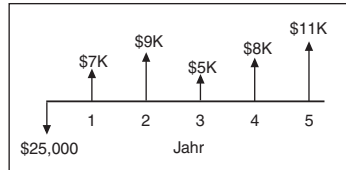
* You can execute the calculation by using a list or a frequency list calculation.

07 Irr (**Irr (*initial investment, list of following collected investment [, frequency list] [, assumed revenue rate]*)**

Calculates the investment revenue rate where the net present value is 0.

Example

If the investment for the sales plan in the previous example is $28,000, how much is the investment revenue rate?

• 12.42 is obtained as the answer, thus, the investment revenue rate for the above condition is 12.42%.

* In the previous example, revenues following the investment value (input using minus sign) were assumed to be positive. However, when the assumed revenue is set to minus (in other words, more than two inverse symbols), the assumed revenue rate must be entered at the end. Otherwise an error may occur.

The following CALC functions, **08 Bal**, **09 ΣPrn** and **10 ΣInt** require the values of I%, PV and PMT variables. Enter the values beforehand in the TVM-SOLVER function.

```
Payment:END
 N=360
 I%=5
 PV=200000
*PMT=-1073.643246
 FV=0
 P/Y=12
 C/Y=12
```

Example using the 08 and 10 calculations

You plan to purchase a house for the price of $300,000. The down payment is $100,000. Calculate the monthly payments for a 30-year loan at an annual interest rate of 5% for the remaining $200,000.

08 Bal (**Bal (*number of payments [, decimal place to round]*)**

Calculates loan balance.

Calculate the loan balance after 15 years (180 months).

```
Bal(180)
            135767.8173
```

09 ΣPrn (**ΣPrn (*initial number of payments, end number of payments [, decimal place to round]*).**

Calculates the principal amount of the total payments.

Compare the principal amount of the total payments after 5 (1 to 60 months) and 10 years (61 to 120 months).

```
ΣPrn(1,60)
            -16342.53583
ΣPrn(61,120)
            -20973.33519
```

10 ΣInt (**ΣInt (*Initial number of payments, end number of payments [, decimal place to round]*)**

Calculates the sum of the interest on the payments.

Compare the sum of the interest on the payment sum after 5 years and 10 years.

```
ΣInt(1,60)
            -48076.05893
ΣInt(61,120)
            -43445.25957
```

Conversion functions

11 →Apr (→**Apr (*effective interest rate, number of settlements*)**
Converts effective interest rate to nominal interest rate

Example
If the effective interest rate
is 12.55%, how much is the
nominal interest rate for the
quarterly compound interest? If
the monthly compound interest
rate is 10.5%, how much is the
nominal interest rate?

```
→Apr(12.55,4)
                    12.00
→Apr(10.5,12)
                    10.03
```

12 →Eff (→**Eff (*nominal interest rate, number of settlements*)**
Converts nominal interest rate to effective interest rate

Example
If the annual (nominal) interest
rate is 8%, how much is the
effective interest rate for monthly
compound interest? How much
is it over half a year?

```
→Eff(8,12)
                     8.30
→Eff(8,2)
                     8.16
```

13 days (**days (*start month.day year, end month.day year*)**
days (*day month.year, day month.year*)
Calculates the number of days between dates entered (within the
range of 1950 to 2049)

Year, month, and day must
be entered in 2-digit form. For
example, enter 02 for 2002.

Calculate the number of days
from September 1, 1997 to
December 31, 2004.

```
days(9.0197,12.3104)
                  2678.00
```

3. VARS Menu

The VARS menu consist of a list of the variables used for the TVM-SOLVER functions.

- The VARS menu can be used to enter values in the sub-menu within the Finance menu.

1. Press [2ndF] [FINANCE] [D].

2. The VARS sub-menu will appear.

3. Select the appropriate variable to use.

The variables in the VARS sub-menu are the same as those of the TVM-SOLVER feature.

How to recall the content of N

1. Press [⊞⊟/⊠⊞] [2ndF] [FINANCE] [D] [1] [ENTER].

How to recall the content of I%

2. Press [2ndF] [FINANCE] [D] [2] [ENTER].

How to recall the content of PV

3. Press [2ndF] [FINANCE] [D] [3] [ENTER].

- Each variable of the TVM-SOLVER can be recalled and then reentered.

How to reenter the value

Reenter 400 for N instead of 360

1. Press 400 [STO].

2. Press [2ndF] [FINANCE] [D] [1] [ENTER].
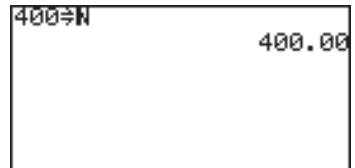
Chapter 10
The SOLVER Feature

The SOLVER feature is one of the calculator's most powerful and distinctive features, and helps you solve math problems with various analysis methods.
Using this feature, problems from linear equations to complex formulas can be solved with ease.

To access the SOLVER feature, press $\boxed{\text{2ndF}}$ $\boxed{\text{SOLVER}}$; to exit, press $\boxed{\begin{smallmatrix}\square\square\\\square\square\end{smallmatrix}}$.

> **Note:** • The SOLVER feature shares variables with other calculator features. These variables can be called up or defined within the SOLVER feature OR any other features. For example, solving/defining a value of "A" within the SOLVER feature will also change the global value of "A".

1. Three Analysis Methods: Equation, Newton & bisection, and Graphic

To switch your preferred analysis style:

1. Go into the SOLVER menu by pressing $\boxed{\text{2ndF}}$ $\boxed{\text{SOLVER}}$ WITHIN the SOLVER window. The SOLVER menu appears with four menu items.

2. While **A METHOD** item is selected on the left, select your preferred method by pressing $\boxed{1}$, $\boxed{2}$, or $\boxed{3}$.

> **Note:** • When you enter an equation, you can use graph equations variables (Y1 - Y0) which are defined in the Graph Equation window.

Equation method

The **Equation method** is useful when there is only one unknown variable. For example, if you know the values of B and C for an expression "A + B = C", use the Equation method.

Example

Determine the value of "C" in "A = 2B^2 + 4C", when A = 4, and B = 5.

1. Enter SOLVER by pressing $\boxed{\text{2ndF}}$ $\boxed{\text{SOLVER}}$. The word SOLVER will flash on the screen, indicating that you are now in the SOLVER feature mode.

2. Enter the equation "A = 2B^2 + 4C".
   Press $\boxed{\text{ALPHA}}$ A $\boxed{\text{ALPHA}}$ $\boxed{=}$
   2 $\boxed{\text{ALPHA}}$ B $\boxed{x^2}$ $\boxed{+}$ 4
   $\boxed{\text{ALPHA}}$ C.

```
Solver:Equation
 A=7
 B=4
 C=57
```

3. Press $\boxed{\text{ENTER}}$.

   The screen above right appears, indicating that there are 3 variables to be assigned.

Note: If values were assigned to those variables prior to this operation, then the previously set values will be shown here. For example, "C = 57" may show up in this window; this simply indicates the value of "C" was previously set to "57".

4. Enter "4" for variable "A", and "5" for variable "B".
   Press 4 $\boxed{\text{ENTER}}$ 5 $\boxed{\text{ENTER}}$.

```
Solver:Equation
 A=4
 B=5
 C=57
```

5. When the two known values have been specified, make sure that the cursor is at the value yet to be determined (in this case, the value of "C").

6. Press $\boxed{\text{2ndF}}$ $\boxed{\text{EXE}}$ to execute the SOLVER. The value of "C" will be obtained.

```
Equation solver

 C=-11.5
```

* After the solution has been found, press $\boxed{\text{CL}}$ to return to the variable input screen. You may change the numeric values for the variables and select another unknown variable to solve.

* To edit the equation, press $\boxed{\text{CL}}$ on the variable input screen.

   The equation input screen allows you to correct or edit the previously input equation.

**Newton&
bisection
method**
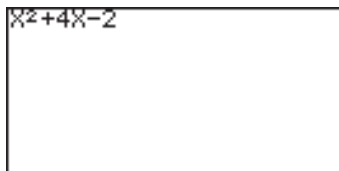
Newton&bisection method is a technique of finding approximate solutions to a math problem via calculus, when conventional algebraic techniques just cannot work. If the Equation method fails, the calculator will automatically switch to Newton&bisection method.

Example

Solve "$X^2 + 4X - 2 = 0$".
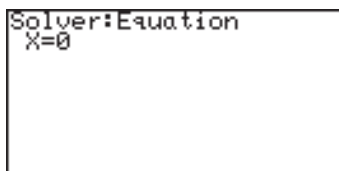
1. Enter SOLVER by pressing $\boxed{\text{2ndF}}$ $\boxed{\text{SOLVER}}$. If you have items left on the screen, clear the entries by pressing the $\boxed{\text{CL}}$ key several times.

2. Enter "$X^2 + 4X - 2$". When the expression is entered as a non-equation format, then "=0" is automatically assumed at the end. When done, press $\boxed{\text{ENTER}}$.
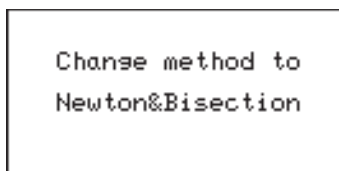
```
X²+4X-2
```

3. The next screen indicates the variable "X" and its previously set value. This value will be assumed as the starting point of the calculation segments, and the Newton&bisection

```
Solver:Equation
 X=0
```

SOLVER will find the closest approximation to the starting point. Enter "0", and press $\boxed{\text{ENTER}}$.
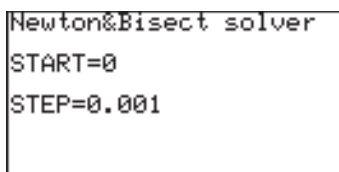
4. Now, press $\boxed{\text{2ndF}}$ $\boxed{\text{EXE}}$ to execute the SOLVER. Since this cannot be solved using the Equation method, the calculator automatically switches analysis to Newton&bisection method.

```
    Change method to

    Newton&Bisection
```

5. The next window confirms the starting point of the analysis (set to "X = 0" from step #3), and the size of each step (default is set to "0.001"). Press $\boxed{\text{2ndF}}$ $\boxed{\text{EXE}}$.

```
Newton&Bisect solver
START=0
STEP=0.001
```

6. The following window shows the approximate value of X (0.449489742), the right side value of the equation (assumed as "0", at step #2), the left side value (which the

```
Newton&Bisect solver
 X=0.449489742

RIGHT=0
LEFT =8.33ᴇ-11
L-R  =8.33ᴇ-11
```

entered expression results to this value when the value X is entered), and the difference between the left and the right side.

7. Since the L-R difference above indicates a margin of error, try entering smaller steps. Press ⌐ CL ⌐ to go back to step #3. Enter the value of X, then press

```
Newton&Bisect solver
START=0

STEP=0.00001
```

⌐ 2ndF ⌐ ⌐ EXE ⌐ to execute the SOLVER again. When the next window appears, try entering smaller step value ("0.00001", for example).

8. Press ENTER to register the step value change, then ⌐ 2ndF ⌐ ⌐ EXE ⌐. Although the value of X appears to be unchanged, the margin of error will have become small

```
Newton&Bisect solver
 X=0.449489742

RIGHT=0
LEFT =0
L-R  =0
```

enough ("0", in this example), to be as close to zero as possible.

Note: As you may well know, there may be more than one solution to the equation. To obtain the value of the other solutions, set the starting point of Newton&bisection method lower ("-10", for example) or execute the SOLVER again with the current solution as a starting point.

Graphic method   The **Graphic method** is another way of approximating solutions, using graphical representations. This method is particularly useful when finding more than one solution on a graph axis.

Example

Obtain values for "Y = X^3 − $3X^2$ + 1", when Y = 0.
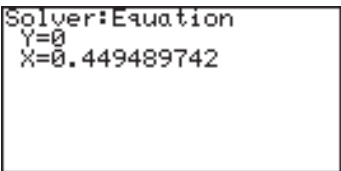
1. Press 2ndF SOLVER to enter SOLVER. Clear screen entries by pressing CL several times.

2. Enter "Y = X^3 − $3X^2$ + 1" into the initial window, and press ENTER.

```
Y=X³-3X²+1
```

3. In the next window, set the Y value as "0", and press ENTER. The right side value of the equation is now set.

```
Solver:Equation
 Y=0
 X=0.449489742
```

Note: Unlike in the Newton&bisection method, the X value will not be assumed as the starting point for the Graphic method.
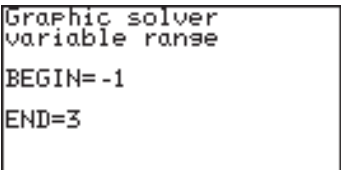
4. Before proceeding further, you will need to set the SOLVER to the Graphic method. Press 2ndF SOLVER to call up the SOLVER menu, and press A (for "A METHOD"), then 3 (for "3 Graphic"). The Graphic method is now set.

```
Solver:Graphic
 Y=0
 X=0.449489742
```

5. Press 2ndF EXE to proceed.

6. Next in the following window, specify the range of analysis that will incorporate all possible solution. In this example, we will set the beginning point at "-1", and the end point at "3". Press ENTER at each variable entry.

```
Graphic solver
variable range

BEGIN=-1

END=3
```

Note: The analysis will be limited to the range specified; a solution outside of the analysis range will not be detected. If no crossing point is found in the range, then a message "No solution found" will show at the bottom of the screen.

7. Pressing ⌐2ndF⌐ ⌐EXE⌐ at this point will engage the analysis, as well as the graphical representation of the equation. Note that while the cursor flashes at the upper right corners of the screen, the calculator is busy processing tasks.

8. When the processing is complete, you will get the first value of X (the smallest), with a flashing star on the graph at the crossing point.
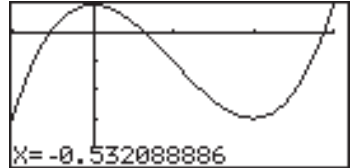
To obtain the next X value, press ⌐2ndF⌐ ⌐CALC⌐.

Note: To enlarge a part of graph after the solution has been found, you may use the ZOOM Box function. Press ⌐ZOOM⌐ and use the cursor for defining the box area.
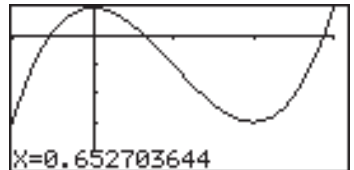
2. Saving/Renaming Equations for Later Use

The expressions you have entered in the SOLVER can be named and stored:

1. Go to the SOLVER menu by pressing 2ndF SOLVER.

2. Press C to select the **C SAVE** menu, and press ENTER.

3. When the next screen appears, ALPHA LOCK mode is automatically set and the cursor is changed to "Ḁ", indicating that alphabet characters can be entered.
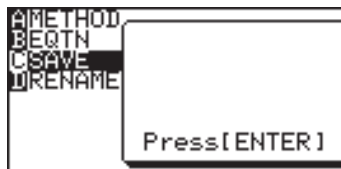
   To enter numbers, press ALPHA.

   The equation name should consist of 8 characters/numbers or less.

4. When done, press ENTER. The screen goes back to the SOLVER function screen.
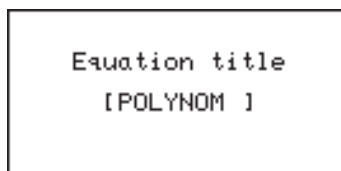
Saved SOLVER expressions can also be renamed:

1. Go to the SOLVER menu, and press D to select the **D RENAME** sub-menu.

2. A list of saved equation names appears in the sub-menu. Select the equation name you wish to change. For example, press 0 1 to select the first item of the list.

3. When renaming is complete, press ENTER to save the change.

   The screen goes back to the SOLVER function screen.

3. Recalling a Previously Saved Equation

To recall a stored SOLVER equation:

1. Go to the SOLVER menu, and press ⬚ B ⬚ to select the **B EQTN** sub-menu.

2. A list of saved equation names appears in the sub-menu. Select the equation you wish to call back.

3. Press ENTER. The stored equation is called back.

Note: Any changes unsaved prior to recalling will be lost. Also be aware that any changes to the recalled equation will not be retained unless saved manually.

Functions of the SOLVER feature

Functions of the SOLVER feature are as follows:

$(-)$, $($, $)$, $=$, $+$, $-$, $\times$, $\div$, $a\frac{b}{c}$, a/b, x^2, x^{-1}, a^b, $\sqrt{}$, $a\sqrt{}$, log, ln, $\log_2$, 10^x, e^x, 2^x, sin, cos, tan, $\sin^{-1}$, $\cos^{-1}$, $\tan^{-1}$, sinh, cosh, tanh, $\sinh^{-1}$, $\cosh^{-1}$, $\tanh^{-1}$, sec, csc, cot, $\sec^{-1}$, $\csc^{-1}$, $\cot^{-1}$, int, pdfnorm(, pdfT(, pdfχ^2(, pdfF(, pdfbin(, pdfpoi(, pdfgeo(, cdfnorm(, cdfT(, cdfχ^2, cdfF(, cdfbin(, cdfpoi(, cdfgeo(, InvNorm(.

Chapter 11
Programming Features

The calculator has programming features that enable automatic processing of a series of calculations any number of times.

Almost all the calculation and graphing language can be used in programs as well as the usual control flow statements such as If, For, While and Goto (with Label).

Please note that complex numbers cannot be used in programming.

1. Try it!

Display a message "HELLO WORLD" on the display.

Creating a new program

1. Press PRGM.

   The program menu screen will appear.

A EXEC	Executes the selected program
B EDIT	Opens a stored program file.
C NEW	Creates a new program file
D V_INDX	Show variables which are used in the programs.

2. Press ☐ C ☐ ENTER.

   A new program window will open.

3. Input the program name (HELLO) on the top line of the screen. Up to 8 characters can be used for the title.

4. Press ENTER.

5. The cursor will move to the program input field just under the title.

Starting programming

6. Press [PRGM].

The program menu will open.

The commands and other statements are preinstalled in the calculator.
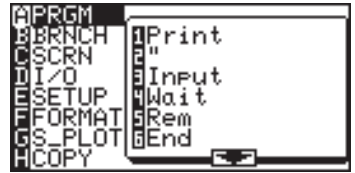
Do not directly type in commands using the Alphabetical mode, select each command from the program menu.

Note: Press [2ndF] [CATALOG], and you can access all the available commands at once.

Entering a command

7. Select [A] [1].

8. Press [PRGM].

9. Select [A] [2].

The characters following a double quotation mark can be manipulated as text. No double quotation mark is required to close the text.
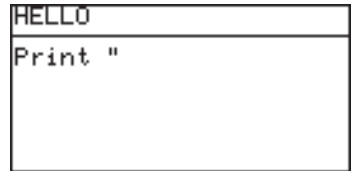
Entering the alphabetical input lock mode

10. Press [2ndF] [A-LOCK] to enter the alphabetic lock mode.

11. Type HELLO WORLD.

Up to 160 alphanumeric characters can be input per line. (Strings of up to 158 characters maximum can be entered per line excluding commands, because each command is regarded as a single character.

When a line exceeds the width of the screen, the display will shift to the left.

Store the program line by line

12. Press [ENTER].

The cursor will move to the next line and the data input will be stored.

Store the program line by line by pressing [ENTER], [▲] or [▼].

13. Press [2ndF] [QUIT] to exit the program edit screen.

Execute the program

14. Press [PRGM] [A]. A list of stored programs will appear.

Select a program by using [▲] [▼], and press [ENTER].

2. Programming Hints

Editing the program	Press PRGM B and then the appropriate numbers to open the stored program.
Adding commands, strings or command lines to the program	Press 2ndF INS to enter the insert type mode. Press ENTER to go to the next line. Be sure to press 2ndF INS again to turn off the insert type mode and return to type over mode. Press ENTER twice to insert a blank line.
Entering alphabetical characters (uppercase only)	Press ALPHA to enter characters. Press 2ndF A-LOCK to use an ALPHA-LOCK mode to input a series of alphabetical characters.
Inputting commands	In general, only a single command can be input per line.
Storing a program line by line	After pressing ENTER, ▼ or ▲, the line will be stored in memory. Otherwise, it is not stored. Be sure to store the all lines by pressing ENTER (▲ or ▼) before quitting editing (pressing 2ndF QUIT).
Blank line	Blank lines are ignored during execution. You can include blank lines to gain better readability.
Deleting a line	Move the cursor to the line you wish to delete and press CL .
Deleting command or strings	Move the cursor to on or after the letter you wish to delete and press DEL or BS , respectively.
Deleting an entire program	Press 2ndF OPTION and use **C DEL**. (See Chapter 14 OPTION Menu).
Copying a line to another location	Press PRGM H in the program edit mode. (See page 214 for details)
Changing the program name	Press ▲ to move the cursor to the program name field. Enter the new name and press ENTER or ▼ .
Re-executing the program	Pressing ENTER again after execution of the program completes.
Break the execution process	Press ON or 2ndF QUIT to break the execution process.

3. Variables

• Single letters (uppercase letter from A to Z and θ) can be used as variables.

• Defined once in one program, a variable is set as a global variable across all other stored programs unless redefined.

Hence results calculated in one program can be used by another.

• Only value (numbers) can be set as variables.

• Strings cannot be set as variables.

Setting a variable

Use [STO] to input a specific value or the value of formula into the variable. Do not use = (comparison operands) to set the values into variable.

$5 \rightarrow X$ The variable X is set to the value 5.

$MX + B \rightarrow Y$ The variable Y is set to the value of formula MX + B.

Index of variables in the programs

Press [PRGM] [D], and then select the program title.

The index of variables which are used in the selected program is displayed.

• The subjects of the index are as follows ;

A~Z, θ, L1~L6, mat A~ mat J

• Press [▲] or [▼] to display the previous or next program's variables.

• Press [CL] or [2ndF] [QUIT] to exit.

4. Operands

• Almost all the calculation operands can be used in a program.

• Input an operand directly from the keys (+, −, ×, ÷, sin, cos, log and others) or using MATH, STAT, LIST, MATRIX and other menus.

Comparison operands

• The calculator has 6 comparison operands.

• Press [MATH] [F] and select an appropriate comparison operand.

= Equal   ≠ Not equal

> Greater than   ≥ Greater than or equal

< Less than   ≤ Less than or equal

5. Programming commands

• Print, Input, Wait, Rem, End and other commands can be used in a program.

Screen settings, data input/output, graph settings and others can be controlled from a program.

• Press PRGM in the program edit mode to input the command.

A PRGM menu PRGM ⬚ A ⬚

1 Print **Print** *variable*

Print *"character strings ["]*

Displays the value of the variable on the screen.

The display format may vary according to the SET UP menu settings.

Character strings displayed by the print command will break at the edge of the screen.

2 " *command " strings*

Characters enclosed by double-quote marks are considered to be strings.

The closing double-quote can be omitted when it would appear at the end of a line.

3 Input **Input** *["prompt strings",] variable*

Enables the user to input a value (list, etc.) for the specified variable during execution. A message "variable = ?" or "prompt strings?" will appear on the screen while the calculator waits for data input.

Prompt strings include alphabetical words, numbers, and other character strings that can be entered by keys and menus.

4 Wait   Wait [*natural number* (1 to 255)]

Interrupts execution for the
(natural number) of seconds. If
no value is specified, interruption
continues until any key is
pressed.

```
WAITPRG

Print "BELATED
Wait 10
Print "HELLO TO YOU
```

- A symbol will flash at the upper
  right corner of the screen during the wait.

- This command can be used for displaying intermediate results or
  other information.

5 Rem   Rem *comments*

Comments start with Rem and extend to the end of the line.

These lines are ignored at execution.

Comments should be entered as notes for future reference, though
it should be noted that they do occupy some memory space.

6 End   End

Indicates the end of a program.

End is not necessary at the last line of the program.

7 Key   Key *variable*

If a numeric key or one of the cursor keys is pressed, the variable
is set to the corresponding numeric value as specified in the
following table.

Keys and Corresponding Numbers

keys	Numbers	keys	Numbers	keys	Numbers
0	0	5	5	▶	10
1	1	6	6	◀	11
2	2	7	7	▲	12
3	3	8	8	▼	13
4	4	9	9		

B BRNCH menu [PRGM] [B]

C SCRN menu [PRGM] [C]

C SCRN menu commands are used to display or clear the screen.

1 ClrT   **ClrT**

Clears the program text screen without affecting the plotted graph.

2 ClrG   **ClrG**

Clears the graph screen without affecting the specified graph.

After the graph screen is cleared, the specified graph statement is drawn.

3 DispT   **DispT**

Displays the program text screen.

4 DispG   **DispG**

Displays the graph screen.

D I/O menu [PRGM] [D]

This menu is used to send or receive data from externally connected devices.

1 Get   **Get *variable***

Receives data from externally connected devices.

2 Send   **Send *variable***

Sends data to externally connected devices.

E SETUP menu [PRGM] [E]

SETUP menu commands are used to set the various settings used in graphing and calculations.

01 Rect   **Rect**

Sets the graph coordinates as X and Y coordinates.

02 Param   **Param**

Sets the graph coordinates as parametric coordinates.

03 Polar   **Polar**

Sets the graph coordinates as polar coordinates.

04 Web **Web**
Sets the graph coordinates as axes in sequence graphs.
u(n − 1) is set to the X axis and u(n) is set to the Y axis.

05 Time **Time**
Sets the graph coordinates as axes in sequence graphs.
n is set to the X axis and u(n), v(n) and w(n) is set to the Y axis.

06 uv **uv**
Sets the graph coordinates as the axes of sequence graphs.
u(n) is set to the X axis and v(n) is set to the Y axis.

07 uw **uw**
Sets the graph coordinates as the axes of sequence graphs.
u(n) is set to the X axis and w(n) is set to the Y axis.

08 vw **vw**
Sets the graph coordinates as the axes of sequence graphs.
v(n) is set to the X axis and w(n) is set to the Y axis.

09 Deg **Deg**

10 Rad **Rad**

11 Grad **Grad**
Sets the angle mode to degree, radian and gradient, respectively.

12 FloatPt **FloatPt**

13 Fix **Fix**

14 Sci **Sci**

15 Eng **Eng**

16 Tab **Tab** *integer* (0 to 9)
Sets the number display mode to floating point, fixed decimal,
scientific and engineering, respectively.

17 Decimal **Decimal**

18 Mixed **Mixed**

19 Improp **Improp**

20 x±yi **x±yi**

21 r∠θ **r∠θ**
Sets the answering mode to the one specified.

F FORMAT menu $\boxed{\text{PRGM}}$ $\boxed{\quad\text{F}\quad}$

F FORMAT menu commands are used to set the graph format.

01 RectCursor **RectCursor**

Sets the graph coordinate display format to X - Y axes.

02 PolarCursor **PolarCursor**

Sets the graph coordinates display format to polar coordinates.

03 ExprON **ExprON**

Sets the graph equation to be displayed on the graph screen.

04 ExprOFF **ExprOFF**

Sets the graph equation to not be displayed on the graph screen.

05 Y' ON **Y'ON**

Sets the derived function (Y') to be displayed on the graph screen.

06 Y' OFF **Y'OFF**

Sets the derived function (Y') to not be displayed on the graph screen.

07 AxisON **AxisON**

Sets the specified axis to be displayed on the graph screen.

08 AxisOFF **AxisOFF**

Sets the specified axis to not be displayed on the graph screen.

09 GridON **GridON**

Sets the grid lines to be displayed on the graph screen.

10 GridOFF **GridOFF**

Sets the grid lines to not be displayed on the graph screen.

11 Connect **Connect**

Draws a graph with connected lines.

12 Dot **Dot**

Draws a graph with dots.

13 Sequen **Sequen**

Draws the graphs in sequential order.

14 Simul **Simul**

Draws the graphs simultaneously.

G S_PLOT menu PRGM G

S_PLOT menu commands are used for statistics plotting.

1 Plt 1(Sets the statistical graph settings for plot 1.

2 Plt 2(Sets the statistical graph settings for plot 2.

3 Plt 3(Sets the statistical graph settings for plot 3.

The above menu commands have the same usage as the following:

Plt1(*graph type, X list name [, Y list name, frequency list]*)
* Press STAT PLOT to specify a graph type.

4 PlotON   **PlotON** *[number]*
Sets drawing of the specified statistical graph to on.
If no number is specified, this command turns on all of the statistical graphs.

5 PlotOFF   **PlotOFF** *[number]*
Sets drawing of the specified statistical graph to off.
If no number is specified, this command turns off all of the statistical graphs.

6 LimON   **LimON**
This commands turns on the limit lines for upper, lower, and mean values.

7 LimOFF   **LimOFF**
This commands turns off the limit lines for upper, lower, and mean values.

6. Flow control tools

The calculator has the common flow control tools such as Goto - Label loop structures, and If-, For- and While-statement clauses for enhancing a program's efficiency. It also has the capability for subroutines.

It is recommended to use If, For or While statements rather than Goto-Label loop structures.

To access the flow control tools, use the PRGM **B BRNCH** menu.

01 Label   **Label *label name***

Specifies a branch destination for Goto or Gosub.

The same Label name cannot be used in two places within the same program.

Up to 10 characters can be used for a Label name.

Up to 50 Labels can be used in a single program.

02 Goto   **Goto *label name***

To shift the program execution to a label.

03 If   **If *conditional statements* Goto *label name***
or
If *conditional statements*
Then
***commands or multiple statements* ***
[Else
***commands or multiple statements*]**
EndIf

* Multiple statements mean a group of statement lines separated by colons(:) that are evaluated as a single line.

Within a second structure it is possible to use the following menu items.

04 Then

05 Else

06 EndIf

* Use a comparison operand in a condition statement.

* Up to 115 If clauses can be nested, though if combined with other types of loops, the maximum nested loop number may vary due to the memory capacity.

07 For   **For** *variable, initial value, end value [, increment]*
08 Next *commands or multiple statements*
          Next

- The increment value can be omitted. The default value is 1.
- For and Next statements must be placed at the beginning of the line.
- If the comparisons *variable > end value* (*positive*) or *variable < end value* (*negative*) are satisfied, the program will end the loop and go to the line indicated by the Next command.
- Up to 5 For loops can be nested, though if combined with other types of loops, the maximum nested loop number may vary due to the memory capacity.
- It is highly recommended that Label and Goto statements are not used in For loop structures.

09 While **While** *conditional statements*
10 WEnd *commands or multiple statements*
          WEnd

- While and WEnd statements must be placed at the beginning of the line.
- Multiple While loops can be nested to within the memory capacity.
- Conditional statements are evaluated before entering the While clause.
- It is highly recommended that Label and Goto statements are not used in While loop structures.
- * Up to 8 while loops can be nested, though if combined with other types of loops, the maximum nested loop number may vary due to the memory capacity.

Note: Else clause cannot be omitted when the matching If clause is contained in a For or a While loop.

11 Gosub **Gosub** *label name*
12 Return **....................**
           End

[Rem start of the subroutine (label name)]
Label *label name*
Statements
Return

Subroutine structures can be used for programming.

- The Gosub label name must be the same as the Label starting the subroutine.

- A Return statement is necessary at the end of the subroutine.

  When the Return statement is executed, the calculator executes the next line after the Gosub statement.

- Up to 10 subroutines can be nested.

7. Other menus convenient for programming

H COPY menu [PRGM] [H]

You can copy and paste line by line using the COPY menu commands.

1. Move the cursor to the line that you wish to copy.

2. Press [PRGM] [H].

3. Select **1 StoLine** and press [ENTER].

   The selected line will be stored in the memory.

4. Move the cursor to the line where you wish to paste the stored line.

5. Press [PRGM] [H], select **2 RclLine** and press [ENTER].

   The stored line will be inserted at the targeted position.
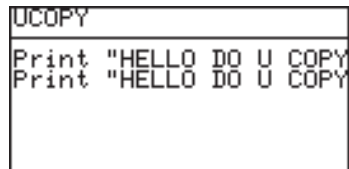
- Please note that only a single line can be stored in the memory.

VARS menu

- Functions that control the graph screen can be selected from the VARS menu.
- Press [2ndF] [VARS] to display the VARS menu (shown to the right).

```
A EQVARS
B WINDOW    Graph
C STOWIN       equation
D L_DATA
E G_DATA
F PICTUR
G TABLE     Press[ENTER]
H STAT
```

A EQVARS   Specifies the graph equation (Y1 to Y9, and Y0, X1T•Y1T to X6T•Y6T, R1 to R6).

B WINDOW   Specifies the functions that set the graph display screen size (Xmin, Ymax, Tstep, etc.).

C STOWIN   Specifies the stored zoom (window) setting value (Zm_Xmin, Zm_Ymax, etc.).

D L_DATA   Specifies list data (L_Data1 to L_Data9, and L_Data0).

E G_DATA   Specifies the graph data (G_Data1 to G_Data9, and G_Data0).

F PICTUR   Specifies picture data (Pict1 to Pict9, and Pict0).

G TABLE   Specifies table setting values (Table Start, Table Step, Table List).

H STAT   Specifies statistics, functions ($\overline{x}$, Σx, $\overline{y}$ …), regression expressions, points and statistical verification functions.

- The commands and functions in the VARS menu can be displayed on the screen. Current setting data can also be reset.
- The results of arithmetic functions can also be displayed.
- The ZOOM command is selected directly from the ZOOM menu.
  Names of some ZOOM commands change when inserted into programs. These are [A ZOOM], [C POWER], [D EXP], [E TRIG], and [F HYP] of the ZOOM menu.
  "Zm_" is automatically added to each of these functions when inserted into programs.

Example
Zm_Auto, Zm_x2, Zm_sin, etc.

- Always enter the argument for functions requiring an argument at the end of the command, such as the CALC function (2ndF CALC). An error will be returned for commands not accompanied by an argument.

Example

Value 5

Example

Set Xmin = -3, Xmax = 10, Xscl = 1, Ymin = -5, Ymax = 5, Yscl = 1 in the WINDOW screen.

Use STO to input the settings.

Expression	Operational sequence
-3 $\Rightarrow$ Xmin	(–) 3 STO 2ndF VARS B ENTER A 1 ENTER
10 $\Rightarrow$ Xmax	10 STO 2ndF VARS ENTER 2 ENTER
1 $\Rightarrow$ Xscl	1 STO 2ndF VARS ENTER 3 ENTER
-5 $\Rightarrow$ Ymin	(–) 5 STO 2ndF VARS ENTER 4 ENTER
5 $\Rightarrow$ Ymax	5 STO 2ndF VARS ENTER 5 ENTER
1 $\Rightarrow$ Yscl	1 STO 2ndF VARS ENTER 6 ENTER

* Operation to input a function equation (for example, $x^2 + 2$) to the graphic equation "Y1" is also made using STO in the same manner as described above.

"$X^2 + 2$" $\Rightarrow$ Y1: PRGM A 2 $x/\theta/T/n$ x^2 + 2 PRGM A 2 STO 2ndF VARS A ENTER A 1

Note: Function equations cannot be assigned in the graphic equations, such as Y1, if the EDITOR mode under SET UP is set to Equation. Switch the EDITOR to One line mode prior to assigning such graphic equations.

Example

The following data are included in list L1.

L1: 165, 182.5, 173.8, 166.5, 185.3

A one-variable calculation was executed based on this data.

After returning to the calculation screen, average values can be viewed by using the following procedure.

- Press [2ndF] [VARS] [H]
  [ENTER] [A] [0] [2] to
  display "x̄" on the screen.

- Press [ENTER] to obtain
  the average value of X as
  determined in the previous
  calculation.

| x̄ | 174.62 |

- In this way, the contents of an immediately preceding statistical
  calculation can be stored as statistical values.

- These contents remain valid until the next statistical calculation is
  executed, even if the power is turned off.

- The same is true even for regression calculations and verification
  calculations.

8. Debugging

After programming, it is required to debug the program.

1. Press [PRGM] [A] and select the program to debug.

   If any bugs are present, error messages will appear.

   The following example indicates that the same label name has
   been used two or more times.

2. Press [◀] or [▶] to
   display the line where the
   error exists and correct the
   mistake.

```
      ERROR  40

 [Lbl duplicate ]

 ◀,▶:Goto error
 CL :Quit
```
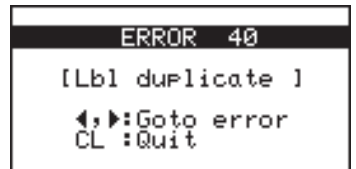
**When an infinite
loop occurs**

Execution can be interrupted by pressing [ON].

Use this command if the program enters an infinite loop. Press
[◀] or [▶] to display the program source with the cursor on
the line where interrupted.

* Refer to Appendix "Error Codes and Error Messages" on page
  ???.

* It is highly recommended that goto-Label statements are not
  used in If, While and For loop structures.

* Multiple statements cannot be used in a command line such as
  Else, EndIf, Next, While and WEnd. It is recommended not to use
  multiple statements.

9. Preinstalled program

There is one preinstalled program ("integral").

Calculating the area between equations for a given interval

Integral

• Enter necessary equations before executing this program.

1. Press [PRGM] [A] [0] [1].

2. Press [1] to select "∫Y1-Y2dx", or [2] to select "AREA BETWEEN Y1-Y2" to avoid the surface cancel each other.

3. Press [1] ~ [4] to select the first equation, and then press [1] ~ [4] to select the second equation.

4. Input a lower value while "LOWER=?" is displayed, then press [ENTER].

5. Input an upper value while "UPPER=?" is displayed, then press [ENTER].

   The calculation result is displayed with highlighted graph.

6. Press [ENTER] to display the calculation result without the graph.

Errors and calculation ranges

• If "ERROR" is displayed instead of a calculation result, press [ENTER], then enter the numeric values again.

• If a screen like the one shown on the right is displayed during calculation or after you exit the program, press [CL].

  Please do not press [◄] or [►] instead of [CL]. The editing screen will be displayed if you press [◄] or [►]. Press [🔳] at this time to exit the editing screen.

```
        BREAK !!

◄,►:Break
CL :Quit
```

```
        ERROR  02
[Calculate        ]

◄,►:Goto error
CL :Quit
```
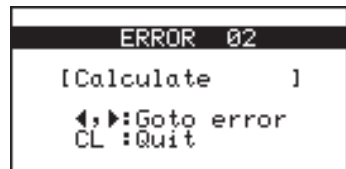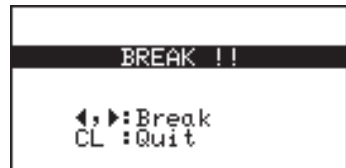
Calculation ranges are illustrated below.

Program name	Calculation range	Note
integral	Xmin ≤ LOWER ≤ Xmax Xmin ≤ UPPER ≤ Xmax	Xmin and Xmax are in the windows settings.

Storage locations of the calculation result

This program calculate by using the variables below. Therefore, please note that some numbers are stored in these variables if you execute the program.

Program name	Variable	Storage location of the calculation result
integral	A, B, C, D, H, M, X	C

Chapter 12
OPTION Menu

The calculator is equipped with OPTION menu for adjusting the display contrast, checking memory usage, deleting stored data, transferring data, and resetting the calculator's memory.

Accessing the OPTION Menu

Press 2ndF OPTION.

The OPTION Menu will appear.

A: Adjusts the display contrast

B: Checks the memory usage

C: Deletes files

D: Link command to use with another calculator or PC.

E: Resets the calculator
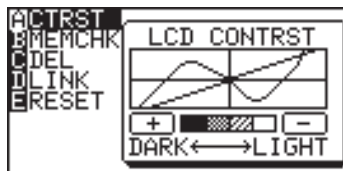
1. Adjusting the screen contrast

1. Press 2ndF OPTION.

   The screen contrast setting window will appear.

2. Press + to darken or − to lighten the screen.

2. Checking the memory usage

The memory usage window enables you to check how much memory you have used. If the memory is nearly full, delete files or reset the calculator to operate safely.

1. Press 2ndF OPTION.

2. Press B.

   The memory check window will appear. The remaining number of bytes of user memory will be shown on the display.

   Software version

   The user memory is used to store data for graph equations, graph screens, matrices, lists and so on.

3. If you want check the details, press ENTER.

   The detailed memory usage window will appear.

   The total remaining memory will appear on the bottom line of the screen.

```
Memory check
   List          270
   Matrix        165
   Graph Eqn     558
   Solver Eqn      0
   Program        71
 ↓ Picture       110
         Remain:47376
```

4. Press ▼ to scroll the window.

```
Memory check
 ↑ G_Data        140
   L_Data        180
   Slide           0


         Remain:47376
```

List:	The amount of memory (bytes) used by lists
Matrix:	The amount of memory (bytes) used by matrices
Graph Eqn:	The amount of memory (bytes) used by graph equations
Solver Eqn:	The amount of memory (bytes) used by solver equations
Program:	The amount of memory (bytes) used by program files
Picture:	The amount of memory (bytes) used by graph pictures
G_Data:	The amount of memory (bytes) used by stored graph data
L_Data:	The amount of memory (bytes) used by stored list data
Slide:	The amount of memory (bytes) used by slide shows the user has created

3. Deleting files

Press $\boxed{2ndF}$ $\boxed{OPTION}$ $\boxed{C}$ to enter the delete menu.

The sub-menu items are the same as those of the Memory Check menu (List, Matrix, Graph Eqn, Solver Eqn, Program, Picture, G_Data, L_Data and Slide).

Deletions can be executed entry by entry.

To delete the matrix mat C

1. Press $\boxed{2ndF}$ $\boxed{OPTION}$ $\boxed{C}$ $\boxed{2}$.

   The matrix deletion window will appear with the cursor pointer at the top (mat A).

```
DEL:Matrix
  mat A        36
  mat B        54
  mat C        81

        Remain:47205
```
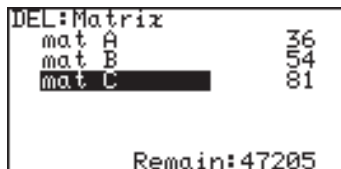
2. Move the cursor pointer to **mat C** using $\boxed{\blacktriangle}$ / $\boxed{\blacktriangledown}$.

3. Press $\boxed{ENTER}$.

   mat C will disappear and the **mat C** line will become empty.

```
DEL:Matrix
  mat A        36
  mat B        54

        Remain:47286
```
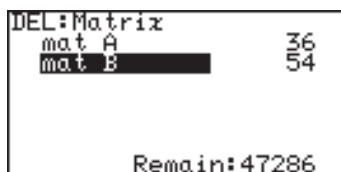
• Press $\boxed{2ndF}$ $\boxed{QUIT}$ to cancel the delete option.

• Above procedures and displays are only an example. Displayed items may vary according to data input and use.

* Press $\boxed{2ndF}$ $\boxed{OPTION}$ $\boxed{C}$ $\boxed{0}$ to delete the memories previously entered.

4. Linking to another EL-9950 or PC

Using the optional CE-451L or CE-LK4, the EL-9950 can be linked to another EL-9950.

To transfer data, press $\boxed{2ndF}$ $\boxed{OPTION}$ $\boxed{DEL}$ to open the Link option window. Press $\boxed{1}$ to send data and press $\boxed{2}$ to receive data.

Transmission between EL-9950's

1. Connect the calculators securely using the optional CE-451L communication cable.

• Make sure the communication cable is firmly inserted into the ports of both calculators.

• Use the communication cable only for linking two EL-9950's. The EL-9950 can only be linked to another EL-9950.
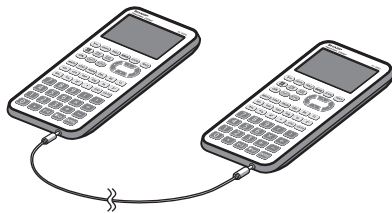
2. Press $\boxed{\text{2ndF}}$ $\boxed{\text{OPTION}}$ $\boxed{\quad D \quad}$ on both calculators.

3. Press $\boxed{\quad 2 \quad}$ on the receiving machine.

   The receive mode screen will appear on the display.

   ```
   RECEIVING
   [ON] to cancel
   ```
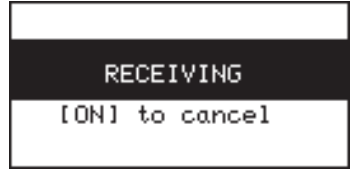
4. Press $\boxed{\quad 1 \quad}$ on the sending machine.

5. The send menu will appear on the display. Specify the data to send from the following categories.

A SELECT   Displays the menu window to send the data specified as follows:

01 ALL	Displays a list of all the stored files category by category.	ASELECT / BBACKUP 01ALL 02List 03Matrix 04Graph Eqn 05Solver Eqn 06Program
02 List	Displays a list of all the stored list files.	

03 Matirx   Displays a list of all the stored matrix files.

04 Graph Eqn   Displays a list of all the stored graph equations.

05 Solver Eqn   Displays a list of all the stored solver equations.

06 Program   Displays a list of all the stored program files.

07 G_Data   Displays a list of all the stored graph data files.

08 L_Data   Displays a list of all the stored list data files.

09 Picture   Displays a list of all the stored picture files.

10 Slide   Displays a list of all the user-made slide show data.

11 A - Z, θ Displays a list of variables A to Z and θ.

B BACKUP   Send all the data stored in the calculator memory.

6. Select the item to send using `▲`/`▼` and pressing `ENTER`. A "✳" will be placed by the selected item.

7. Press `2ndF` `ENTER` to send.

8. Transmission begins and a busy message will appear on the displays of the both calculators.

```
Select Data
  mat A        :Matrix
  mat B        :Matrix


[2ndF][ENTER] to send
```

• An data in the same memory locations in the receiver will be automatically overwritten.

• Up to 10 files can be selected to send at once.

Example

If you wish to send the list **L1**, matrices **mat A** and **mat B** and graph equation **Y2** to the other calculator.

1. Prepare the receiving calculator by pressing `2ndF` `OPTION` `D` `2`.

2. Press `2ndF` `OPTION` `D` `1` on the sending calculator.

   The send menu will appear.

```
ASELECT
BBACKUP 01ALL
        02List
        03Matrix
        04Graph Eqn
        05Solver Eqn
        06Program
```

3. Press `0` `1`.

   A list of all the data stored will be are displayed and the cursor positioned on the top line.

   • You can also select **02 List** for "L1", **03 Matrix** for "mat A" and "mat B", and **04 Graph Eqn** for "Y2", for example, and send the data category by category.

4. Move the cursor to L1 and press `ENTER`.

   A "✳" mark will flash to the left of "L1", indicating that the item has been selected to be sent.

```
Select Data
  L1           :List
  mat A        :Matrix
  mat B        :Matrix
  E=MC2        :Solver
  GETVAR       :Program
  A~Z,θ        :Variable
[2ndF][ENTER] to send
```

   Press `ENTER` again to deselect.

5. Select the other files you wish to send in the same manner.

6. Press `2ndF` `ENTER` to start transmission.

Transmission between the EL-9950 and PC

• The optional kit CE-LK4 (cable and Windows software) is required for calculator to data communication with PC.

   About Windows software, the version of EL-9950 must be installed to your PC. From the following Web site, it can be download.

   http://

• Refer to the CE-LK4 operation manual for details.

• During communications between calculator and PC, no operation of the calculator is required. Just connect the cable and press the power on key, and the entire operation can be controlled from the PC.

• CE-LK4 can also be utilized to update the calculator's software.

5. Reset function

If a problem occurs after replacing batteries, or the calculator does not function correctly, use the RESET option.

1. Press ⌈2ndF⌉ ⌈OPTION⌉ ⌈ E ⌉.

2. Press ⌈ 1 ⌉ to return the calculator's SETUP and FORMAT settings to the default value, or ⌈ 2 ⌉ to delete all the stored data.
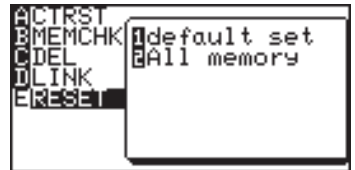
See "Resetting the Calculator" on page ??? for details.

227

Appendix

1. Replacing Batteries

The calculator uses two different kinds of batteries: manganese (AAA) for unit operation, and lithium (CR2032) for memory backup.

Compatible battery types

Type (use)	Model	Quantity
Manganese battery (for unit operation)	AAA	4
Lithium battery (for memory backup)	CR2032	1

Note:
- To prevent loss of stored data, **DO NOT remove both the unit operation and memory backup batteries at the same time**.
- Please do not use rechargeable battery. This can lead to a mulfunction of the device.

Precautions for handling batteries
- Fluid from a leaking battery accidentally entering an eye could result in serious injury. Should this occur, wash with clean water and immediately consult a doctor.
- Should fluid from a leaking battery come into contact with your skin or clothes, immediately wash with clean water.
- If the product is not to be used for some time, to avoid damage to the unit from leaking batteries, remove them and store in a safe place.
- Do not leave exhausted batteries inside the product.
- Do not fit partially used batteries, and be sure not to mix different batteries types.
- Keep batteries out of the reach of children.
- Do not allow batteries to become completely exhausted; doing so may cause the batteries to leak, and may damage the calculator's hardware.
- Do not throw batteries into a fire or water, as this may cause them to explode.

Procedures for replacing unit operation batteries

When battery power becomes low, a message will show indicating that a new set of batteries are needed.

```
        <ATTENTION>

The OPERATING
batteries are depleted
.
Read OPERATION MANUAL
for detail.
```

1. Turn off the calculator's power (2ndF OFF).

2. Turn over the calculator.

   Locate the battery compartment cover, and open the cover as illustrated.

3. Replace all four AAA batteries as illustrated.

Note: Do not remove the lithium battery while the unit operation batteries are removed; otherwise all the calculator's stored memory will be lost.

4. Replace the battery compartment cover.

5. **After a few seconds,** press ON .

   The following message will appear.

   If the message does not appear, repeat the procedures from step 2.

```
PRESS [CL] KEY TO
CLEAR ALL DATA

PRESS [ON] KEY TO
CANCEL
```

6. Press ON .

   Do not press CL . This will clear all the data.

Replacing the memory backup battery

Once every 5 years, the lithium battery will need to be replaced.

The lithium battery is used to maintain the memory of the calculator.

Note: Do not remove the lithium battery while the unit operation batteries are removed; otherwise all the calculator's stored memory will be lost.

1. Perform procedures 1 and 2, as shown above. Do not remove the unit operation batteries.

2. Remove the screw and the lithium battery cover, as shown.
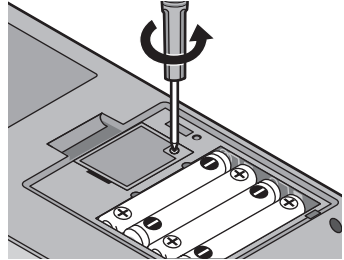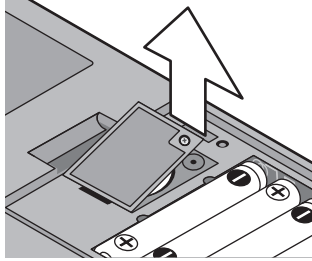
3. Use a pen to lift the lithium battery out of the battery compartment.

4. Insert the new battery with the PLUS (+) side facing up.

5. Replace the lithium battery cover and fasten the screw.
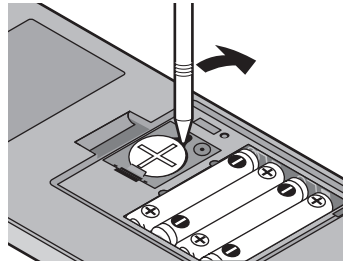
6. Replace the battery compartment cover, **wait a few seconds** and then press ⌈ ON ⌉.
   The following message will appear.

7. Press ⌈ ON ⌉.
   Do not press ⌈ CL ⌉. This will clear all the data.

```
PRESS [CL] KEY TO
CLEAR ALL DATA

PRESS [ON] KEY TO
CANCEL
```

2. Troubleshooting Guide

Refer to the list of possible symptoms, and solutions may be found here.

The calculator's power won't turn on!

- The operation batteries may not be installed, may be exhausted, or may be inserted incorrectly. Check the operation batteries in the battery compartment.
- Place the battery cover securely or the calculator will not turn on.

The saved calculator configurations are not retained!

- Both the lithium battery and the operation batteries may need to be replaced.

The power seems to be on, but the characters and numbers cannot be seen clearly on the display!

- The screen contrast may need to be adjusted.
  Press [2ndF] [OPTION], then press [A] to enter **A CTRST**; the screen contrast can be adjusted by using the [+] or the [−] key.

The calculator won't take the minus (-) sign; calculation results in a syntax error!

- To set a negative value, use the [(–)] key instead of the [−] key.

The calculation results are very different from what is usually expected!

- The angle unit and other configurations may be incorrectly set. Check the configuration under the [2ndF] [SETUP].

The graph cannot be seen!

- Check the zoom configuration. Try selecting the automatic zoom tool, by pressing [ZOOM], then [A] [1].
- The graph line may be set differently; check the line configuration under [2ndF] [DRAW] menu.
- The calculator may not be set to display graphs. Check the **"="** sign in **Y=** screen.
- Graphs drawings may be interrupted in rare cases when equations of Graphs have a list format.

The screen images cannot be stored (SLIDE SHOW)

- The available memory may be too small to store the screen image. Select **"B MEMCHK"** under $\boxed{\text{2ndF}}$ $\boxed{\text{OPTION}}$ menu. Select and delete unnecessary items under **"C DEL"**.

The calculator is not responding; the software appears to have crashed!

- Press $\boxed{\text{ON}}$. If this does not work, then press $\boxed{\text{2ndF}}$, then $\boxed{\text{ON}}$ to tell the running application to quit.

  If everything fails, then the calculator's memory may need to be reset. Resetting the calculator's memory will clear all the stored information, such as programs, lists, and variables.

  To reset the unit's memory, open and close the battery compartment cover, wait a few seconds, and then press $\boxed{\text{ON}}$ to open the verification window. To prevent data loss, try $\boxed{\text{ON}}$ first. If it does not work, repeat the reset operation and press $\boxed{\text{CL}}$ when prompted.

3. Specifications

Model	EL-9950
Product name	Graphing Calculator
Display	132 x 64 dot matrix liquid crystal display Number of digits: mantissa 10 digits, exponents 2 digits (standard screen); 7 digit display (including negatives, decimals) for table screen, split screen, etc. Mantissa of 10 digits in the complex number mode Display method: Numerical value, calculation equation input (direct algebraic logic input / one-line input method), fraction, and complex number display method specification.
Calculation method	D.A.L. (Direct Algebraic Logic)
Calculation features	Manual calculation (arithmetic, parentheses calculation, memory calculation, function calculation, integral calculation, coordinate conversion), binary/octal/decimal/hexadecimal calculation, Boolean operation, matrix calculation, complex number calculation, complex function calculation, statistic calculation, regression calculation, statistic authorization calculation, financial calculation, etc.
Input method	Manual key entry
Graphic features	Rectangular/polar/parametric/sequence coordinate graph Graph range specification, graph window mode automatic specification, graph plotting, trace, calculation function, zoom, picture input, paint, graph database register split-screen, etc.
Statistic features	1-/2-variable statistical data input/calculation, register, edit and frequency input, regression calculation function, and estimated statistic/authorization function, etc.
Solver features	Equation solver: numerical syntax analysis, Newton&bisection method, graph analysis, and solver equation register.

List features	Direct data entry/edit to list, calculation function for various lists, and list/matrix conversion.
Substitution features	Graph drawing, numerical input from split-screen
Slide Show features	Screen image capture, play function
	The maximum number of pages to be captured: Approx. 250 pages (pages equivalent to the $Y = X^2$ graph screen)
Program features	Condition statement command, subroutine, graph, various function commands
Option menu	Screen contrast adjustment, memory usage check, data delete, data link (between EL-9950 and PC or another EL-9950)
Memory size	64 KB (user area: approx. 47.4 KB)
Power supply	Operation: 6 V DC⎓ AAA manganese battery (R03) $\times$ 4 Memory backup: 3 V DC⎓ Lithium battery (CR2032) $\times$ 1
Automatic power-off	Approx. 10 minutes
Operating temperature range	
	0 °C to 40 °C (32 °F to 104 °F)
Battery life	Operation battery set: approx. 150 hours (with 5 minutes of continual use and 55 minutes in the display state for every hour at a temperature of approx. 20 °C/68 °F)
	Memory backup: approx. 5 years (at a temperature of approx. 20 °C/68 °F, and when the operation batteries are replaced frequently)
Note:	The life span may differ according to battery brand, type, usage, and ambient temperature.
External dimensions	86 mm (W) $\times$ 183 mm (D) $\times$ 20 mm (H) 3-3/8" (W) $\times$ 7-7/32" (D) $\times$ 25/32" (H)
Weight	g (lb) (with batteries, without the hard cover)
Accessories	4 AAA manganese batteries (included), 1 lithium battery (installed), operation manual

4. Error Codes and Error Messages

Error Code	Error Message	Description
01	Syntax	Syntax error found in equation/program
02	Calculate	Calculation-related error found (division by 0, calculation beyond range, etc.)
03	Nesting	Cannot nest more than 14 numerical values, or 32 functions during execution. Graph equation variables (Y1, etc.) includes other graph equation variables (Solver features).
04	Invalid	Matrix definition error or entering an invalid value.
05	Dimension	Matrix dimension, or STAT list dimension, inconsistent.
07	Invalid DIM	Size of list/matrix exceeds calculation range.
08	Argument	Inconsistency found in argument of the structured function.
09	Data Type	Invalid data type used in calculation.
10	No Sign Change	Financial calculation error found.
11	No define	Undefined list/matrix used in calculation. Undefined graph equation variables used in Solver features.
12	Domain	Argument definition outside of domain.
13	Increment	Increment error found.
16	Irr Calc	More than two inflection points for Irr calculation.
17	Stat Med	Med-Med law (statistic) error found.
20	No Argument	Argument missing.
21	Not pair ∫ dx	∫ and dx are not used in a pair.
22	Not pair [ ]	Brackets are not used in a pair.
23	Not pair ( )	Parentheses are not used in a pair.
24	Not pair { }	Braces are not used in a pair.
25	Line over	Line is over the capacity.
26	Not delete	Unable to delete a selected item.
27	Buffer over	Input/equation exceeds buffer capability.
30	Editor type	Invalid editor type found.*
31	Continue =	" = " exists in equation that has been recalled (RCL).
32	No data	Data does not exist.
33	Graph Type	Graph type setting incorrect.
34	Too many var.	Too many variables assigned in the SOLVER.
35	No variable	No variable specified in the SOLVER.

Error Code	Error Message	Description
36	No solution	No solution found.
37	No title	No title entered.
38	Too many obj	More than 30 objects selected.
40	Lbl duplicate	Labels with identical name found in program.
41	Lbl undefined	Goto/Gosub encountered with no defined label.
42	Lbl over	More than 50 labels found in program.
43	Gosub stack	Nesting of more than 10 subroutines found.
44	Line too long	Line contains more than 160 characters.
45	Can't return	Return used without jumping from subroutine.
46	Storage full	Cannot create more than 99 files.
47	Coord type	Invalid coordinate system for command.
48	Without For	For is missing corresponding to the Next command.
49	Without WEnd	WEnd is missing corresponding to the While command.
50	Without While	While is missing corresponding to the WEnd command.
51	Without Then	Then is missing corresponding to the If command.
52	Without EndIf	EndIf is missing corresponding to the If command.
53	Without If	If is missing corresponding to the EndIf command.
70	I/O device	Communication error found among devices.
71	Wrong Mode	Wrong communication mode set.
90	Memory over	Memory is full; cannot store data as requested.
99	System error	System error found; user memory space is insecure.
	Low battery	Operation interrupted due to low battery power.
	BREAK!!	Operation break specified.

* The following operations may cause Editor type error. Correct the Editor type to continue.

- Recall the SOLVER equations (EQTN) or Graph data (G_DATA) stored in a different EDITOR mode than currently in use.
- Receive the Graph equation (Y1 and others) entered in a different EDITOR mode than currently in use.

5. Error Conditions Relating to Specific Tasks

1. Financial

* Define constants "r" and "s" as used in the equation below.

$$r = \left(\frac{I\,(\%)}{100} \; C/Y + 1 \; \right)^{\frac{C/Y}{P/Y}} - 1 \;,\; \left\{ \begin{array}{l} S = 1 \text{ (Pmt\_Begin)} \\ S = 0 \text{ (Pmt\_End)} \end{array} \right\}$$

1. I% calculation

① If PMT = 0

$$r = \left(-\frac{PV}{FV} \right)^{-\frac{1}{n}} - 1$$

② If PMT ≠ 0

$$f\,(r) = PV + (1 + r \times s) \times PMT \times \frac{1 - (1 + r)^{-n}}{r} + FV\,(1 + r)^{-n} : (r \neq 0)$$
$$f\,(r) = PV + PMT \times n + FV : (r = 0)$$

calculate the following for r solved in ① and ②

$$I\,(\%) = 100 \times C/Y \times ((r + 1)^{\frac{P/Y}{C/Y}} - 1)$$

2. PV calculation

① If r ≠ 0, r > -1

$$PV = -\,(1 + r \times s) \times \frac{1 - (1 + r)^{-n}}{r} \times PMT - FV \times (1 + r)^{-n}$$

② If r = 0

$$PV = -n \times PMT - FV$$

③ If r ≤ -1

Error

3. FV calculation

① If $r \neq 0$, $r > -1$

$$FV = -\frac{PV + (1 + r \times s) \times \dfrac{1 - (1 + r)^{-n}}{r} \times PMT}{(1 + r)^{-n}}$$

② If $r = 0$

$$FV = -n \times PMT - PV$$

③ If $r \leq -1$

Error

4. PMT calculation

① If $r \neq 0$, $r > -1$

$$PMT = -\frac{PV + FV \times (1 + r)^{-n}}{(1 + r \times s) \times \dfrac{1 - (1 + r)^{-n}}{r}}$$

② If $r = 0$

$$PMT = -\frac{PV + FV}{n}$$

③ If $r \leq -1$

Error

5. N calculation

① If $r \neq 0$, $r > -1$

$$N = -\frac{\log\left\{\dfrac{PV + \dfrac{1}{r} \times (1 + r \times s) \times PMT}{\dfrac{1}{r} \times (1 + r \times s) \times PMT - FV}\right\}}{\log (1 + r)}$$

② If $r = 0$

$$N = -\frac{FV + PV}{PMT}$$

③ If $r \leq -1$

Error

2. Error conditions during financial calculations

- $r \leq -1$
- N = 0 in PMT calculations
- I% = 0 and PMT = 0, or I% $\neq$ 0 and FV = (1/r) (1 + r × s) × PMT, in N calculations.

  s = 1 (Pmt_Begin)
  s = 0 (Pmt_End)

In I% calculations

 If PMT > 0:

   Pmt_End mode: PV $\geq$ 0 and FV + PMT $\geq$ 0

          PV < 0 and FV + PMT < 0

   Pmt_Begin mode: PV + PMT $\geq$ 0 and FV $\geq$ 0

          PV + PMT < 0 and FV < 0

 If PMT < 0:

   Pmt_End mode: PV > 0 and FV + PMT > 0

          PV $\leq$ 0 and FV + PMT $\leq$ 0

   Pmt_Begin mode: PV + PMT > 0 and FV > 0

          PV + PMT $\leq$ 0 and FV $\leq$ 0

 If PMT = 0: PV $\div$ FV $\geq$ 0

- FV, N × PMT, PV $\geq$ 0 or FV, N × PMT, PV $\leq$ 0
- Irr calculation: all cash flows have the same sign.

3. Distribution function

 ① pdfnorm(

$$f(x) = \frac{1}{\sqrt{2\pi}\,\sigma}\,\exp\left(-\frac{(x-\mu)^2}{2\sigma^2}\right)$$

Calculation result→Xreg μ: Mean

               σ: Standard deviation

 ② pdfT(

$$f(x) = \frac{\Gamma\left(\frac{df+1}{2}\right)}{\Gamma\left(\frac{df}{2}\right)}\frac{\left(1+\frac{x^2}{df}\right)^{-\frac{df+1}{2}}}{\sqrt{\pi df}}$$

However: $\Gamma(s) = \int_0^\infty x^{s-1}\,e^{-x}\,dx$

Calculation result→Xreg

③ pdfχ^2(

$$f(\chi^2, df) = \frac{1}{2\Gamma(\frac{df}{2})} (\frac{\chi^2}{2})^{\frac{df}{2} - 1} e^{(-\frac{\chi^2}{2})}$$

However: $\Gamma(s) = \int_0^\infty x^{s-1} e^{-x} dx$

df: Degree of freedom

④ pdfF(

$$f(x) = \frac{\Gamma(\frac{m+n}{2})}{\Gamma(\frac{m}{2}) \Gamma(\frac{n}{2})} (\frac{m}{n})^{\frac{m}{2}} x^{\frac{m}{2} - 1} (1 + \frac{mx}{n})^{-\frac{m+n}{2}}$$

However: $\Gamma(s) = \int_0^\infty x^{s-1} e^{-x} dx$

m: Degree of freedom of numerator

n: Degree of freedom of denominator

⑤ pdfbin(

$$P(x = 0) = (1 - p)^n$$

$$P(x = c + 1) = \frac{(n - c) p}{(c + 1)(1 - p)} P(x = c)$$

$$(c = 0, 1, ..., n - 1)$$

n: Trial number (integers greater than 0)

p: Success probability $(0 \le p \le 1)$

c: Success number

⑥ pdfpoi(

$$f(x) = \frac{e^{-\mu} \mu^x}{x!}$$

$$(x = 0, 1, 2, ...)$$

⑦ pdfgeo(

$$f(x) = p(1 - p)^{x-1}$$

x: First successful trial number

6. Calculation Range

1. Arithmetic calculation

The results for dividend, multiplicand and operand are:

$-1 \times 10^{100} < x \le -1 \times 10^{-99}$, $1 \times 10^{-99} < x \le 1 \times 10^{100}$ or $x = 0$

(valid within the range of display capability)

Note: Calculation results and input values less than 1×10^{-99} are considered equal to 0.

2. Function calculation

Calculation accuracy

In principle, calculation errors are ±1 of the last digit. (In case of exponential display, the calculation errors are ±1 of the last digit of the mantissa display.)

However, a calculation error increases in continuous calculations due to accumulation of each calculation error. (This is the same for a^b, $\sqrt{b}$, n!, e^x, ln, etc. where continuous calculations are performed internally.)

Additionally, a calculation error will accumulate and become larger in the vicinity of inflection points and singular points of functions. (for example, calculating sinh X or tanh X at X = 0)

Function	Calculation range	Notes
sin x cos x tan x	DEG $: \lvert x \rvert < 1 \times 10^{10}$ RAD $: \lvert x \rvert < \frac{\pi}{180} \times 10^{10}$ GRAD $: \lvert x \rvert < \frac{10}{9} \times 10^{10}$ However, the following are excluded for tan x DEG $: \lvert x \rvert = 90\,(2n - 1)$ RAD $: \lvert x \rvert = \frac{\pi}{2}\,(2n - 1)$ GRAD $: \lvert x \rvert = 100\,(2n - 1)$	"n" is an integer
$\sin^{-1} x$ $\cos^{-1} x$	$-1 \le x \le 1$	
$\tan^{-1} x$	$\lvert x \rvert < 1 \times 10^{100}$	
sinh x cosh x tanh x	$-230.2585093 \le x \le 230.2585092$	
$\sinh^{-1} x$	$\lvert x \rvert < 1 \times 10^{50}$	
$\cosh^{-1} x$	$1 \le x \le 1 \times 10^{50}$	
$\tanh^{-1} x$	$\lvert x \rvert < 1$	

Function	Calculation range	Notes
ln x log x	$1 \times 10^{-99} \leq x < 1 \times 10^{100}$	$\ln x = \log_e x$
e^x	$-1 \times 10^{100} < x \leq 230.2585092$	$e = 2.71828...$
10^x	$-1 \times 10^{100} < x < 100$	
x^{-1}	$|x| < 1 \times 10^{100}$	$x \neq 0$
x^2	$|x| < 1 \times 10^{50}$	
$\sqrt{x}$	$0 \leq x < 1 \times 10^{100}$	
n!	$-0.5 \leq n \leq 69.5$	n is an integer or integer + 0.5
a^b (^)	When a > 0: $-1 \times 10^{100} < b \log a < 100$ When a = 0: $0 < b < 1 \times 10^{100}$ When a < 0: b is an integer, or $\frac{1}{b}$ is an odd number (b ≠ 0) However, $-1 \times 10^{100} < b \log |a| < 100$	$a^b = 10^{b \cdot \log a}$
$\sqrt[a]{b}$	When b > 0: $-1 \times 10^{100} < \frac{1}{a} \log b < 100$, a ≠ 0 When b = 0: $0 < a < 1 \times 10^{100}$ When b < 0: a is an odd number, or $\frac{1}{a}$ is an integer (a ≠ 0) However, $-1 \times 10^{100} < \frac{1}{a} \log |b| < 100$	$\sqrt[a]{b} = 10^{\frac{1}{a} \log b}$
nPr	$0 \leq r \leq n \leq 9999999999$ When $r < \frac{n}{2}$: $\frac{n!}{(r-1)!(n-r)!} < 10^{100}$ When $\frac{n}{2} \leq r$: $\frac{n!}{r!(n-r-1)!} < 10^{100}$	n and r are positive integers
nCr	$0 \leq r \leq n \leq 9999999999$ $\frac{n!}{(n-r)!} < 10^{100}$	

Function	Calculation range		Notes
dec bin oct hex	Decimal:	$\|x\| \leq 9999999999$	x is an integer
	Binary:	$1000000000000000 \leq x$ ≤ 1111111111111111 $0 \leq x \leq 0111111111111111$	
	Octal:	$4000000000 \leq x \leq 7777777777$ $0 \leq x \leq 3777777777$	
	Hexadecimal:	$FDABF41C01 \leq x \leq FFFFFFFFFF$ $0 \leq x \leq 2540BE3FF$	
→dms →deg	$\|x\| < 1 \times 10^{100}$		
xy → r xy → θ	$\|x\| < 1 \times 10^{100}$, $\|y\| < 1 \times 10^{100}$ $\sqrt{x^2 + y^2} < 1 \times 10^{100}$ $\left\|\dfrac{y}{x}\right\| < 1 \times 10^{100}$		$r = \sqrt{x^2 + y^2}$ $\theta = \tan^{-1}\dfrac{y}{x}$
rθ → x rθ → y	$\|r\| < 1 \times 10^{100}$		$x = r\cos\theta$ $y = r\sin\theta$ The range of θ is the same as x of sin x and cos x
not	Binary:	$1000000000000000 \leq x$ ≤ 1111111111111111 $0 \leq x \leq 0111111111111111$	Other Boolean operations are the same as not and neg
	Octal:	$4000000000 \leq x \leq 7777777777$ $0 \leq x \leq 3777777777$	
	Hexadecimal:	$FDABF41C01 \leq x \leq FFFFFFFFFF$ $0 \leq x \leq 2540BE3FE$	
neg	Binary:	$1000000000000001 \leq x$ ≤ 1111111111111111 $0 \leq x \leq 0111111111111111$	
	Octal:	$4000000001 \leq x \leq 7777777777$ $0 \leq x \leq 3777777777$	
	Hexadecimal:	$FDABF41C01 \leq x \leq FFFFFFFFFF$ $0 \leq x \leq 2540BE3FF$	

Function	Calculation range	Notes
Statistic calculations	$\lvert x \rvert < 1 \times 10^{50}$ $\lvert y \rvert < 1 \times 10^{50}$ $\lvert \Sigma x \rvert < 1 \times 10^{100}$ $\Sigma x^2 < 1 \times 10^{100}$ $\lvert \Sigma y \rvert < 1 \times 10^{100}$ $\Sigma y^2 < 1 \times 10^{100}$ $\lvert \Sigma xy \rvert < 1 \times 10^{100}$ $\lvert n \rvert < 1 \times 10^{100}$	
$\bar{x}$	$n \neq 0$	
sx	$n > 1$ $\lvert \Sigma x \rvert < 1 \times 10^{50}$ $0 \le \dfrac{\Sigma x^2 - \dfrac{(\Sigma x)^2}{n}}{n-1} < 1 \times 10^{100}$	Same for $\bar{y}$, sy and σy
σx	$n > 0$ $\lvert \Sigma x \rvert < 1 \times 10^{50}$ $0 \le \dfrac{\Sigma x^2 - \dfrac{(\Sigma x)^2}{n}}{n} < 1 \times 10^{100}$	
r	$n > 0$ $\lvert \Sigma x \rvert < 1 \times 10^{50}$ $\lvert \Sigma y \rvert < 1 \times 10^{50}$ $0 < (\Sigma x^2 - \dfrac{(\Sigma x)^2}{n})\,(\Sigma y^2 - \dfrac{(\Sigma y)^2}{n}) < 1 \times 10^{100}$ $\lvert \Sigma xy - \dfrac{\Sigma x \Sigma y}{n} \rvert < 1 \times 10^{100}$ $\left\lvert \dfrac{\Sigma xy - \dfrac{\Sigma x \Sigma y}{n}}{\sqrt{(\Sigma x^2 - \dfrac{(\Sigma x)^2}{n})\,(\Sigma y^2 - \dfrac{(\Sigma y)^2}{n})}} \right\rvert < 1 \times 10^{100}$	
b	$n > 0$ $\lvert \Sigma x \rvert < 1 \times 10^{50}$ $\lvert (\Sigma x)\,(\Sigma y) \rvert < 1 \times 10^{100}$ $0 < \lvert \Sigma x^2 - \dfrac{(\Sigma x)^2}{n} \rvert < 1 \times 10^{100}$ $\lvert \Sigma xy - \dfrac{\Sigma x \Sigma y}{n} \rvert < 1 \times 10^{100}$ $\left\lvert \dfrac{\Sigma xy - \dfrac{\Sigma x \Sigma y}{n}}{(\Sigma x^2 - \dfrac{(\Sigma x)^2}{n})} \right\rvert < 1 \times 10^{100}$	Regression calculations excluding 2nd, 3rd, and 4th degree polynomials.

Function	Calculation range	Notes
a	$\|b\overline{x}\| < 1 \times 10^{100}$ $\|\overline{y} - b\overline{x}\| < 1 \times 10^{100}$	Same as above. Same as b for other.
y'	$\|bx\| < 1 \times 10^{100}$ $\|a + bx\| < 1 \times 10^{100}$	
x'	$\|y - a\| < 1 \times 10^{100}$ $\|\frac{y - a}{b}\| < 1 \times 10^{100}$	
int÷ remain %	$0 \leq x < 10^{10}$ $0 \leq x < 10^{10}$ $\|x\| < 10^{100}$	
→ a b/c → b/c	$\|x\| < 10^{10}$	A number with 10 or less decimal places, or the 10^{10}-th or above decimal places are 0.
List	Error is returned when the number of elements exceeds 1000.	This is the same when the result of a list function specifies 1000 or more elements.
Matrix	Error is returned when specifying columns or rows that exceed 100. mat A^n : n ≤ 255	

3. Complex number calculation

In a complex number calculation, a calculation error may occur and increase due to inner continuous calculations.

Function	Calculation range	Notes
$\dfrac{1}{x + yi}$	$\|x\| < 10^{50}$ $\|y\| < 10^{50}$	$x + yi \neq 0$
$(x + yi)^2$	$\|x\| < 10^{50}$ $\|y\| < 10^{50}$ $\|xy\| < 5 \times 10^{99}$	
$\ln (x + yi)$ $\log (x + yi)$ $\sqrt{x + yi}$	$\|x\| < 10^{50}$ $\|y\| < 10^{50}$ $\left\|\dfrac{y}{x}\right\| < 10^{100}$	
$e^{(x + yi)}$	$\|x\| < 230$ $\|y\| < 230$	
$10^{(x + yi)}$	$\|x\| < 100$ $\|y\| < 100$	
$(x + yi)^{(a + bi)}$	$\|x\| < 10^{50}$ $\|y\| < 10^{50}$ $\|a\| < 10^{100}$ $\|b\| < 10^{100}$	

7. List of Menu/Sub-menu Items

CATALOG function lets you access almost all the functions and commands.
Square brackets indicate that the value or variable is optional.

1. MATH menus

Functions Commands	Syntax	Keystrokes	Page
MATH CALC			
$\log_2$	$\log_2$ *value*	A 0 1	70
2^X	$2^{\textit{value}}$	A 0 2	71
fmin(	fmin(*equation, lower limit of x, upper limit of x*)	A 0 3	71
fmax(	fmax(*equation, lower limit of x, upper limit of x*)	A 0 4	71
d/dx(	d/dx(*equation, value of x [, tolerance]*)	A 0 5	71
$\int$	$\int$ *equation, lower limit, upper limit [, tolerance]* dx	A 0 6	71
dx	$\int$ *equation, lower limit, upper limit [, tolerance]* dx	A 0 7	71
$\sum$(	$\sum$ (*expression, initial value, end value [, increment]*)	A 0 8	72
sec	sec *value*	A 0 9	72
csc	csc *value*	A 1 0	72
cot	cot *value*	A 1 1	72
$\sec^{-1}$	$\sec^{-1}$ *value*	A 1 2	72
$\csc^{-1}$	$\csc^{-1}$ *value*	A 1 3	72
$\cot^{-1}$	$\cot^{-1}$ *value*	A 1 4	72
sinh	sinh *value*	A 1 5	72
cosh	cosh *value*	A 1 6	72
tanh	tanh *value*	A 1 7	72
$\sinh^{-1}$	$\sinh^{-1}$ *value*	A 1 8	73
$\cosh^{-1}$	$\cosh^{-1}$ *value*	A 1 9	73
$\tanh^{-1}$	$\tanh^{-1}$ *value*	A 2 0	73

Functions Commands	Syntax	Keystrokes	Page
MATH NUM			
abs(	abs(*value*)	B 1	73/43
round(	round(*value [, digit number of decimals]*)	B 2	73/44
ipart	ipart *value*	B 3	73/44
fpart	fpart *value*	B 4	73/44
int	int *value*	B 5	73/44
min(	min(*value A, value B*) or min(*list*)	B 6	73/45
max(	max(*value A, value B*) or max(*list*)	B 7	73/45
lcm(	lcm(*natural number, natural number*)	B 8	73/45
gcd(	gcd(*natural number, natural number*)	B 9	73/45
MATH PROB			
random	random *[(number of trial)]*	C 1	74/46
rndInt(	rndInt(*minimum value, maximum value [, number of trial]*)	C 2	74/46
rndNorm(	rndNorm(mean, standard deviation *[, number of trial]*)	C 3	74/47
rndBin(	rndBin(number of trial, probability of success *[, number of simulatins]*)	C 4	74/48
nPr	*value A* nPr *value B*	C 5	
nCr	*value A* nCr *value B*	C 6	
!	*value* !	C 7	74/48
MATH CONV			
→deg	*value* →deg	D 1	74/48
→dms	*value* →dms	D 2	74/49
xy→r(	xy→r(*x-coordinate, y-coordinate*)	D 3	75
xy→θ(	xy→θ(*x-coordinate, y-coordinate*)	D 4	75
rθ→x(	rθ→x(*r-coordinate, θ-coordinate*)	D 5	75
rθ→y(	rθ→y(*r-coordinate, θ-coordinate*)	D 6	75
MATH ANGLE			
°	*value* ° [*value* ' *value* "]	E 1	76/49
'	*value* ° *value* ' [*value* "]	E 2	76/49
"	*value* ° *value* ' *value* " Print "*character strings*["]	E 3	76/49
r	*value* r	E 4	76/49

Functions Commands	Syntax	Keystrokes	Page
g	*value* g	[E] [5]	76
MATH INEQ			
=	*value A* = *value B*	[F] [1]	76
≠	*value A* ≠ *value B*	[F] [2]	76
>	*value A* > *value B*	[F] [3]	76
≥	*value A* ≥ *value B*	[F] [4]	76
<	*value A* < *value B*	[F] [5]	76
≤	*value A* ≤ *value B*	[F] [6]	76
MATH LOGIC			
and	*value A* and *value B*	[G] [1]	77
or	*value A* or *value B*	[G] [2]	77
not	not *value*	[G] [3]	77
xor	*value A* xor *value B*	[G] [4]	78
xnor	*value A* xnor *value B*	[G] [5]	78
MATH COMPLEX			
conj(	conj(*complex number*)	[H] [1]	78
real(	real(*complex number*)	[H] [2]	79
image(	image(*complex number*)	[H] [3]	79
abs(	abs(*complex number*)	[H] [4]	79
arg(	arg(*complex number*)	[H] [5]	79
MATH (in the N-base calculation mode) LOGIC			
and	*value A* and *value B*	[A] [1]	77
or	*value A* or *value B*	[A] [2]	77
not	not *value*	[A] [3]	77
neg	neg *value*	[A] [4]	78
xor	*value A* xor *value B*	[A] [5]	78
xnor	*value A* xnor *value B*	[A] [6]	78

2. LIST menus

Functions Commands	Syntax	Keystrokes	Page
2ndF **LIST** OPE/NAME			
sortA(	sortA(*list name [, subordinate list name1, ... , subordinate list name n]*)	A 1	135
sortD(	sortD(*list name [, subordinate list name1, ... , subordinate list name n]*)	A 2	135
dim(	dim(*list*)	A 3	136
fill(	fill(*value, list*)	A 4	136
seq(	seq(*equation, start value, end value [, increment]*)	A 5	137
cumul	cumul *list*	A 6	137
df_list	df_list *list*	A 7	137
augment(	augment(*list 1, list 2*)	A 8	138
list→mat(	list→mat(*list 1, ... , list n, matrix name*)	A 9	138
mat→list(	mat→list(*matrix name, list name1, ... , list name n*) mat→list(*matrix name, column number, list name*)	A 0	138
2ndF **LIST** MATH			
min(	min(*value A, value B*) or min(*list*)	B 1	139
max(	max(*value A, value B*) or max(*list*)	B 2	139
mean(	mean(*list [, frequency list]*)	B 3	139
median(	median(*list [, frequency list]*)	B 4	140
sum(	sum(*list [, start number, end number]*)	B 5	140
prod(	prod(*list [, start number, end number]*)	B 6	140
stdDv(	stdDv(*list [, frequency list]*)	B 7	141
varian(	varian(*list [, frequency list]*)	B 8	141
P_stdDv(	P_stdDv(*list [, frequency list]*)	B 9	
2ndF **LIST** L_DATA			
StoLD	StoLD *natural number*	C 1	142
RclLD	RclLD *natural number*	C 2	143
2ndF **LIST** VECTOR			
CrossPro(	CrossPro(*list name 1, list name 2*)	D 1	142
DotPro(	DotPro(*list name 1, list name 2*)	D 2	143

* "list" in the above table means a list or a list name.

250

3. STAT menus

Functions Commands	Syntax	Keystrokes	Page
[STAT] EDIT/OPE			
EDIT	No arguments	[A] [ENTER]	149
sortA(	sortA(*list [, subordinate list 1, ... , subordinate list n]*)	[B] [1]	159
sortD(	sortD(*list [, subordinate list 1, ... , subordinate list n]*)	[B] [2]	159
SetList	SetList *[list name 1, list name 2, list name 3, ...]*	[B] [3]	159
ClrList	ClrList *list name1 [, list name 2, ...]*	[B] [4]	159
[STAT] CALC			
1_Stats	1_Stats *[x list name [, frequency list]]*	[C] [1]	150
2_Stats	2_Stats *[x list name, y list name [, frequency list]]*	[C] [2]	150
ANOVA(	ANOVA(*list name 1, list name 2 [, ...]*)	[C] [3]	152
[STAT] REG			
Med_Med	Med_Med (*list name for x, list name for y [, frequency list] [, equation name to store]*)	[D] [0] [1]	160
Rg_ax+b	Rg_a+bx (*list name for x, list name for y [, frequency list] [, equation name to store]*)	[D] [0] [2]	160
Rg_ax	Rg_ax (*list name for x, list name for y [, frequency list] [, equation name to store]*)	[D] [0] [3]	160
Rg_ax+bx	Rg_ax+b (*list name for x, list name for y [, frequency list] [, equation name to store]*)	[D] [0] [4]	160
Rg_x^2	Rg_x^2 (*list name for x, list name for y [, frequency list] [, equation name to store]*)	[D] [0] [5]	160
Rg_x^3	Rg_x^3 (*list name for x, list name for y [, frequency list] [, equation name to store]*)	[D] [0] [6]	160
Rg_x^4	Rg_x^4 (*list name for x, list name for y [, frequency list] [, equation name to store]*)	[D] [0] [7]	161
Rg_ln	Rg_ln (*list name for x, list name for y [, frequency list] [, equation name to store]*)	[D] [0] [8]	161
Rg_log	Rg_log (*list name for x, list name for y [, frequency list] [, equation name to store]*)	[D] [0] [9]	161

* "list" in the above table means a list or a list name.

Functions Commands	Syntax	Keystrokes	Page
Rg_ab^x	Rg_ab^x (*list name for x, list name for y [, frequency list] [, equation name to store]*)	D 1 0	161
Rg_ae^{bx}	Rg_ae^{bx} (*list name for x, list name for y [, frequency list] [, equation name to store]*)	D 1 1	161
Rg_x^{-1}	Rg_x^{-1} (*list name for x, list name for y [, frequency list] [, equation name to store]*)	D 1 2	162
Rg_ax^b	Rg_ax^b (*list name for x, list name for y [, frequency list] [, equation name to store]*)	D 1 3	162
Rg_logistic	Rg_logistic (*list name for x, list name for y [, frequency list] [, equation name to store]*)	D 1 4	162
Rg_sin	Rg_sin (*[iterations,] list name for x, list name for y [, frequency list] [, period] [, equation name to store]*)	D 1 5	162
x'	*value or list* x'	D 1 6	163
y'	*value or list* y'	D 1 7	163

STAT TEST

Functions Commands	Syntax	Keystrokes	Page
χ^2 test	No arguments	E 0 1	166
Ftest2samp	No arguments	E 0 2	167
Ttest1samp	No arguments	E 0 3	167
Ttest2samp	No arguments	E 0 4	168
TtestLinreg	No arguments	E 0 5	169
Tint1samp	No arguments	E 0 6	170
Tint2samp	No arguments	E 0 7	170
Ztest1samp	No arguments	E 0 8	171
Ztest2samp	No arguments	E 0 9	172
Ztest1prop	No arguments	E 1 0	173
Ztest2prop	No arguments	E 1 1	173
Zint1samp	No arguments	E 1 2	174
Zint2samp	No arguments	E 1 3	175
Zint1prop	No arguments	E 1 4	175
Zint2prop	No arguments	E 1 5	176
InputList	No arguments	E 1 6	166
InputStats	No arguments	E 1 7	166

STAT DISTRI

Functions Commands	Syntax	Keystrokes	Page
pdfnorm(	pdfnorm(*value [, mean, standard deviation]*)	F 0 1	177

Functions Commands	Syntax	Keystrokes	Page
cdfnorm(	cdfnorm(*lower limit, upper limit [,mean, standard deviation]*)	[F] [0] [2]	177
InvNorm(	InvNorm(*probability [, mean, standard deviation]*)	[F] [0] [3]	178
pdfT(	pdfT(*value, degree of freedom*)	[F] [0] [4]	178
cdfT(	cdfT(*lower limit, upper limit, degree of freedom*)	[F] [0] [5]	179
pdfχ^2(	pdfχ^2(*value, degree of freedom*)	[F] [0] [6]	179
cdfχ^2(	cdfχ^2(*lower limit, upper limit, degree of freedom*)	[F] [0] [7]	179
pdfF(	pdfF(*value, degree of freedom of numerator, degree of freedom of denominator*)	[F] [0] [8]	180
cdfF(	cdfF(*lower limit, upper limit, degree of freedom of numerator, degree of freedom of denominator*)	[F] [0] [9]	180
pdfbin(	pdfbin(*number of trial, success probability [, success numbers]*)	[F] [1] [0]	181
cdfbin(	cdfbin(*number of trial, success probability [, success numbers]*)	[F] [1] [1]	181
pdfpoi(	pdfpoi(*mean, value*)	[F] [1] [2]	181
cdfpoi(	cdfpoi(*mean, value*)	[F] [1] [3]	182
pdfgeo(	pdfgeo(*success probability, value*)	[F] [1] [4]	182
cdfgeo(	cdfgeo(*success probability, value*)	[F] [1] [5]	182

4. STAT PLOT menus

Functions Commands	Syntax	Keystrokes	Page
[STAT PLOT] **PLOT1/PLOT2/PLOT3/LIMIT/ON/OFF**			
PLOT1	No arguments	[A] [ENTER]	157
PLOT2	No arguments	[B] [ENTER]	157
PLOT3	No arguments	[C] [ENTER]	157
SET	No arguments	[D] [1]	157
LimON	No arguments	[D] [2]	157
LimOFF	No arguments	[D] [3]	157
PlotON	PlotON [number]	[E] [1]	158
PlotOFF	PlotOFF [number]	[E] [2]	158
[STAT PLOT] **(in STAT PLOT mode) HIST/B.L./N.P./N.D./BOX/PIE/S.D./XYLINE**			
Hist	No arguments	[A] [1]	153
Broken •	No arguments	[B] [1]	154

Functions Commands	Syntax	Keystrokes	Page
Broken +	No arguments	B 2	154
Broken □	No arguments	B 3	154
Norm •_X	No arguments	C 1	154
Norm+_X	No arguments	C 2	154
Norm □_X	No arguments	C 3	154
Norm •_Y	No arguments	C 4	154
Norm+_Y	No arguments	C 5	154
Norm □_Y	No arguments	C 6	154
NormDis	No arguments	D 1	154
Box	No arguments	E 1	155
MBox •	No arguments	E 2	155
MBox+	No arguments	E 3	155
MBox □	No arguments	E 4	155
Pie	No arguments	F 1	156
Pie%	No arguments	F 2	156
Scattr •	No arguments	G 1	156
Scattr+	No arguments	G 2	156
Scattr □	No arguments	G 3	156
xyLine•	No arguments	H 1	156
xyLine+	No arguments	H 2	156
xyLine □	No arguments	H 3	156

5. DRAW menus

Functions Commands	Syntax	Keystrokes	Page
[2ndF] [DRAW] DRAW			
ClrDraw	No arguments	A 0 1	102
Line(	Line(x-coordinate of start point, y-coordinate of start point, x-coordinate of end point, y-coordinate of end point [,0])	A 0 2	103
H_line	H_line y-value	A 0 3	105
V_line	V_line x-value	A 0 4	105
T_line(	T_line(equation, x-value)	A 0 5	106
N_line	N_line(equation, x-value)	A 0 6	106

Functions Commands	Syntax	Keystrokes	Page
Draw	Draw *equation*	A 6	107
Shade(	Shade(*equation 1, equation 2 [, begin, end]*)	A 7	107
DrawInv	DrawInv *equation*	A 8	108
Circle(	Circle(*x-coordinate of center, y-coordinate of center, radius*)	A 9	108
Text(	Text(*column, row, "character strings"*) Text(*column, row, variable*)	A 0	109
2ndF DRAW POINT			
PntON(	PntON(*x-coordinate, y-coordinate*)	B 1	110
PntOFF(	PntOFF(*x-coordinate, y-coordinate*)	B 2	110
PntCHG(	PntCHG(*x-coordinate, y-coordinate*)	B 3	110
PxlON(	PxlON(*column, row*)	B 4	110
PxlOFF(	PxlOFF(*column, row*)	B 5	110
PxlCHG(	PxlCHG(*column, row*)	B 6	110
PxlTST(	PxlTST(*column, row*)	B 7	111
2ndF DRAW ON/OFF/LINE/G_DATA/PICT/SHADE			
DrawON	DrawON [*equation number 1, equation number 2, …*]	C 1	111
DrawOFF	DrawOFF [*equation number 1, equation number 2, …*]	C 2	111
LINE	No arguments	D ENTER	112
StoGD	StoGD *number*	E 1	112
RclGD	RclGD *number*	E 2	112
StoPict	StoPict *number*	F 1	113
RclPict	RclPict *number*	F 2	113
SET	No arguments	G 1	114
INITIAL	No arguments	G 2	114

6. ZOOM menus

Functions Commands	Syntax	Keystrokes	Page
ZOOM ZOOM			
Auto Zm_Auto	No arguments	A 1	53
Box Zm_Box	No arguments	A 2	54

Functions Commands	Syntax	Keystrokes	Page
In Zm_In	No arguments	A 3	54
Out Zm_Out	No arguments	A 4	54
Default Zm_Default	No arguments	A 5	54
Square Zm_Square	No arguments	A 6	54
Dec Zm_Dec	No arguments	A 7	54
Int Zm_Int	No arguments	A 8	54
Stat Zm_Stat	No arguments	A 9	54
ZOOM FACTOR/POWER			
FACTOR	No arguments	B ENTER	55
x^2 Zm_x^2	No arguments	C 1	55
x^{-1} Zm_x^{-1}	No arguments	C 2	55
$\sqrt{x}$ $Zm\_\sqrt{\ }$	No arguments	C 3	55
ZOOM EXP			
10^x Zm_10^x	No arguments	D 1	55
e^x Zm_e^x	No arguments	D 2	97
log x Zm_log	No arguments	D 3	55
ln x Zm_ln	No arguments	D 4	97
ZOOM TRIG			
sin x Zm_sin	No arguments	E 1	56
cos x Zm_cos	No arguments	E 2	56
tan x Zm_tan	No arguments	E 3	56

Functions Commands	Syntax	Keystrokes	Page
$\sin^{-1} x$ Zm_sin^{-1}	No arguments	E 4	97
$\cos^{-1} x$ Zm_cos^{-1}	No arguments	E 5	97
$\tan^{-1} x$ Zm_tan^{-1}	No arguments	E 6	97
ZOOM **HYP/STO/RCL**			
sinh x Zm_sinh	No arguments	F 1	97
cosh x Zm_cosh	No arguments	F 2	97
tanh x Zm_tanh	No arguments	F 3	97
$\sinh^{-1} x$ Zm_sinh^{-1}	No arguments	F 4	97
$\cosh^{-1} x$ Zm_cosh^{-1}	No arguments	F 5	97
$\tanh^{-1} x$ Zm_tanh^{-1}	No arguments	F 6	97
StoWin	No arguments	G 1	56
RclWin	No arguments	H 1	56
PreWin	No arguments	H 2	56

7. CALC menus

Functions Commands	Syntax	Keystrokes	Page
2ndF CALC **CALC**			
Value	Value *x*	A 1	60
Intsct	No arguments	A 2	60
Minimum	No arguments	A 3	60
Maximum	No arguments	A 4	61
Y_zero	No arguments	A 5	61
Y_Incpt	No arguments	A 6	61
Inflec	No arguments	A 7	94
≡dx	No arguments	A 8	

8. SLIDE SHOW menus

Functions Commands	Syntax	Keystrokes	Page
SLIDE SHOW CURR/PLAY/NEW/SELECT/EDIT			
CURR	No arguments	A ENTER	118
PLAY	No arguments	B	118
NEW	No arguments	C ENTER	118
SELECT	No arguments	D	118
MOVE	No arguments	E 1	118
DEL	No arguments	E 2	119
RENAME	No arguments	E 3	119

9. PRGM menus

Functions Commands	Syntax	Keystrokes	Page
PRGM			
EXEC	No arguments	A	202
EDIT	No arguments	B	202
NEW	No arguments	C ENTER	202
V_INDX	No arguments	D	
PRGM (in the Prgramming mode) PRGM			
Print	Print *variable* Print "*character strings* ["]	A 1	207
"	"*characters* ["]	A 2	207
Input	Input *["prompt strings",] variable*	A 3	207
Wait	Wait [*natural number*]	A 4	208
Rem	Rem *comments*	A 5	208
End	No arguments	A 6	208
Key	Key *variable*	A 7	208
PRGM (in the Prgramming mode) BRNCH			
Label	Label *label name*	B 0 1	214
Goto	Goto *label name*	B 0 2	214
If	If *conditional statements*	B 0 3	214
Then	Then *commands*	B 0 4	214
Else	[Else *commands*]	B 0 5	214
EndIf	EndIf	B 0 6	214

Functions Commands	Syntax	Keystrokes	Page
For	For *variable, start value, end value [, increment] commands*	B 0 7	215
Next	Next	B 0 8	215
While	While *conditional statements commands*	B 0 9	215
WEnd	WEnd	B 1 0	215
Gosub	Gosub *label name*	B 1 1	216
Return	No arguments	B 1 2	216
PRGM (in the Prgramming mode) SCRN			
ClrT	No arguments	C 1	209
ClrG	No arguments	C 2	209
DispT	No arguments	C 3	209
DispG	No arguments	C 4	209
PRGM (in the Prgramming mode) I/O			
Get	Get *variable*	D 1	209
Send	Send *variable*	D 2	209
PRGM (in the Prgramming mode) SETUP			
Rect	No arguments	E 0 1	210
Param	No arguments	E 0 2	210
Polar	No arguments	E 0 3	210
Web	No arguments	E 0 4	210
Time	No arguments	E 0 5	210
uv	No arguments	E 0 6	210
uw	No arguments	E 0 7	210
vw	No arguments	E 0 8	210
Deg	No arguments	E 0 9	210
Rad	No arguments	E 1 0	210
Grad	No arguments	E 1 1	210
FloatPt	No arguments	E 1 2	211
Fix	No arguments	E 1 3	211
Sci	No arguments	E 1 4	211
Eng	No arguments	E 1 5	211
Tab	Tab *integer*	E 1 6	211

Functions Commands	Syntax	Keystrokes	Page
Decimal	No arguments	E 1 7	211
Mixed	No arguments	E 1 8	211
Improp	No arguments	E 1 9	211
x ± yi	No arguments	E 2 0	211
r ∠ θ	No arguments	E 2 1	211
PRGM (in the Prgramming mode) FORMAT			
RectCursor	No arguments	F 0 1	211
PolarCursor	No arguments	F 0 2	211
ExprON	No arguments	F 0 3	211
ExprOFF	No arguments	F 0 4	211
Y'ON	No arguments	F 0 5	211
Y'OFF	No arguments	F 0 6	211
AxisON	No arguments	F 0 7	212
AxisOFF	No arguments	F 0 8	212
GridON	No arguments	F 0 9	212
GridOFF	No arguments	F 1 0	212
Connect	No arguments	F 1 1	212
Dot	No arguments	F 1 2	212
Sequen	No arguments	F 1 3	212
Simul	No arguments	F 1 4	212
PRGM (in the Prgramming mode) S_PLOT			
Plt1(	Plt1(*graph type, X list name [, Y list name, frequency list]*)	G 1	213
Plt2(	Plt2(*graph type, X list name [, Y list name, frequency list]*)	G 2	213
Plt3(	Plt3(*graph type, X list name [, Y list name, frequency list]*)	G 3	213
PlotON	PlotON [*number*]	G 4	213
PlotOFF	PlotOFF [*number*]	G 5	213
LimON	No arguments	G 6	213
LimOFF	No arguments	G 7	213

Functions Commands	Syntax	Keystrokes	Page
PRGM (in the Prgramming mode) COPY			
StoLine	No arguments	H 1	216
RclLine	No arguments	H 2	217

10. MATRIX menus

Functions Commands	Syntax	Keystrokes	Page
2ndF MATRIX NAME			
mat A	[(*row, column*)]	A 1	130
mat B	[(*row, column*)]	A 2	130
mat C	[(*row, column*)]	A 3	130
mat D	[(*row, column*)]	A 4	130
mat E	[(*row, column*)]	A 5	130
mat F	[(*row, column*)]	A 6	130
mat G	[(*row, column*)]	A 7	130
mat H	[(*row, column*)]	A 8	130
mat I	[(*row, column*)]	A 9	130
mat J	[(*row, column*)]	A 0	130
2ndF MATRIX EDIT			
mat A	No arguments	B 1	122
mat B	No arguments	B 2	122
mat C	No arguments	B 3	122
mat D	No arguments	B 4	122
mat E	No arguments	B 5	122
mat F	No arguments	B 6	122
mat G	No arguments	B 7	122
mat H	No arguments	B 8	122
mat I	No arguments	B 9	122
mat J	No arguments	B 0	122
2ndF MATRIX OPE			
dim(	dim(*matrix name*)	C 0 1	125
fill(	fill(*value, matrix name*)	C 0 2	125
cumul	cumul *matrix name*	C 0 3	126

Functions Commands	Syntax	Keystrokes	Page
augment(	augment(*matrix name A, matrix name B*)	C 0 4	126
identity	identity *dimension value*	C 0 5	126
rnd_mat(	rnd_mat(*number of row, number of column*)	C 0 6	126
row_swap(	row_swap(*matrix name, row number, row number*)	C 0 7	127
row_plus(	row_plus(*matrix name, row number, row number*)	C 0 8	127
row_mult(	row_mult(*multiplied number, matrix name, row number*)	C 0 9	127
row_m.p.(	row_m.p.(*multiplied number, matrix name, row number, row number*)	C 1 0	127
mat→list(	mat→list(*matrix name, list name 1, …, list name n*) mat→list(*matrix name, column number, list name*)	C 1 1	128
list→mat(	list→mat(*list 1, …, list n, matrix name*)	C 1 2	128
2ndF MATRIX MATH/[ ]			
det	det *matrix name*	D 1	129
trans	trans *matrix name*	D 2	129
rowEF	rowEF *matrix name*	D 3	129
rrowEF	rrowEF *matrix name*	D 4	129
[	No arguments	E 1	130
]	No arguments	E 2	130

11. FINANCE menus

Functions Commands	Syntax	Keystrokes	Page
2ndF FINANCE SOLVER/CALC			
SOLVER	(TVM SOLVER screen appears)	A ENTER	185
slv_pmt	slv_pmt *[(N, I%, PV, FV, P/Y, C/Y)]*	B 0 1	189
slv_I%	slv_I% *[(N, PV, PMT, FV, P/Y, C/Y)]*	B 0 2	189
slv_PV	slv_PV *[(N, I%, PMT, FV, P/Y, C/Y)]*	B 0 3	189
slv_N	slv_N *[(I%, PV, PMT, FV, P/Y, C/Y)]*	B 0 4	189
slv_FV	slv_FV *[(N, I%, PV, PMT, P/Y, C/Y)]*	B 0 5	189
Npv(	Npv(*interest rate, initial investment, list of following collected investment [, frequency list]*)	B 0 6	190

Functions Commands	Syntax	Keystrokes	Page
Irr(	Irr(*initial investment, list of following collected investment [, frequency list] [, assumed revenue rate]*)	B 0 7	190
Bal(	Bal(*number of payments [, decimal place to round]*)	B 0 8	191
∑Prn(	∑Prn(*initial number of payments, end number of payments [, decimal place to round]*)	B 0 9	191
∑Int(	∑Int(*initial number of payments, end number of payments [, decimal place to round]*)	B 1 0	191
→Apr(	→Apr(*effective interest rate, number of settlements*)	B 1 1	192
→Eff(	→Eff(*nominal interest rate, number of settlements*)	B 1 2	192
days(	days(*start month. day year, end month. day year*) days(*day month. year, day month. year*)	B 1 3	192
2ndF FINANCE PERIOD			
PmtEnd	No arguments	C 1	188
PmtBegin	No arguments	C 2	188
2ndF FINANCE VARS			
N	No arguments	D 1	193
I%	No arguments	D 2	193
PV	No arguments	D 3	193
PMT	No arguments	D 4	193
FV	No arguments	D 5	193
P/Y	No arguments	D 6	193
C/Y	No arguments	D 7	193

12. TOOL menus

Functions Commands	Syntax	Keystrokes	Page
2ndF TOOL N BASE/SYSTEM/POLY			
NBASE	No arguments	A ENTER	81
2	No arguments	B 2	82
3	No arguments	B 3	82
4	No arguments	B 4	82
5	No arguments	B 5	82

Functions Commands	Syntax	Keystrokes	Page
6	No arguments	B 6	82
2	No arguments	C 2	82
3	No arguments	C 3	82

13. SOLVER menus

Functions Commands	Syntax	Keystrokes	Page
2ndF SOLVER (in the Solver mode) METHOD/EQTN/SAVE/RENAME			
Equation	No arguments	A 1	194
Newton&bisect	No arguments	A 2	196
Graphic	No arguments	A 3	198
EQTN	No arguments	B	201
SAVE	No arguments	C ENTER	200
RENAME	No arguments	D	200

INDEX

R

S

Information on the Disposal of this Equipment and its Batteries

IF YOU WISH TO DISPOSE OF THIS EQUIPMENT OR ITS BATTERIES, DO NOT USE THE ORDINARY WASTE BIN ! DO NOT PUT THEM INTO A FIREPLACE !

1. In the European Union

Used electrical and electronic equipment and batteries must be collected and treated SEPARATELY in accordance with law. This ensures an environment-friendly treatment, promotes recycling of materials, and minimizes final disposal of waste. Each household should participate ! ILLEGAL DISPOSAL can be harmful to human health and the environment due to contained hazardous substances ! THIS SYMBOL appears on electrical and electronic equipment and batteries (or the packaging) to remind you of that ! If 'Hg' or 'Pb' appears below it, this means that the battery contains traces of mercury (Hg) or lead (Pb), respectively.

Take USED EQUIPMENT to a local, usually municipal, collection facility, where available. Before that, remove batteries. Take USED BATTERIES to a battery collection facility; usually a place where new batteries are sold. Ask there for a collection box for used batteries. If in doubt, contact your dealer or local authorities and ask for the correct method of disposal.

2. In other Countries outside the EU

If you wish to discard this product, please contact your local authorities and ask for the correct method of disposal.

ENGLISH

SHARP CORPORATION

EL-9950 upgrade manual

Nov.28, 2014

Upgrade to **ver1.2** from ver1.1 with CE-LK4.

Step1.
　　Connect cable (CE-LK4) to PC.

Step2.
　　Execute "CE-LK4 for EL-9950" on PC.
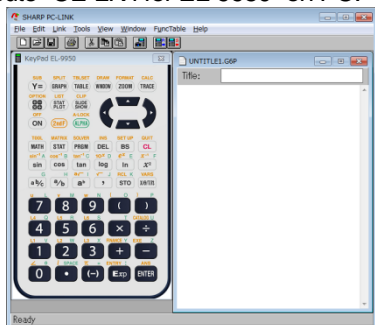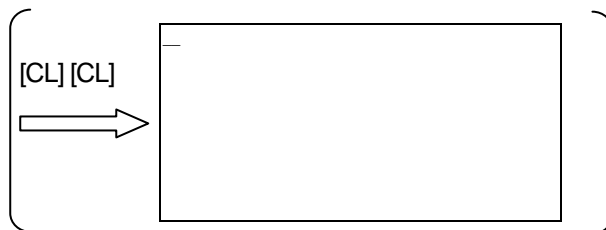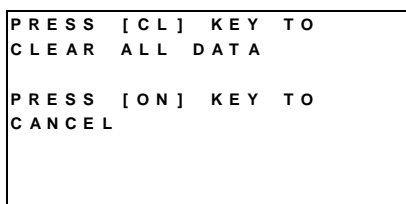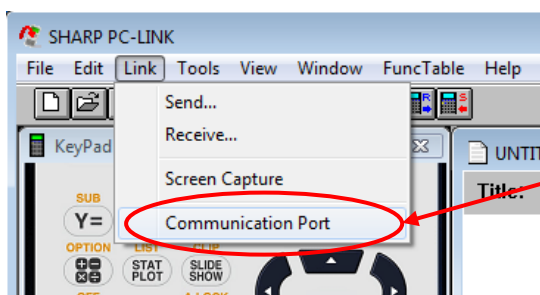

Step3.
　　Connect cable to EL-9950.

Step4.

　　Turn on EL-9950 and press ⊞ key.
　　If the following screen is displayed, please press [CL] key twice on EL-9950.
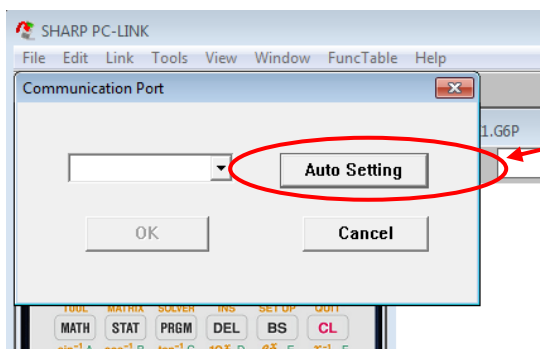
```
PRESS [CL] KEY TO
CLEAR ALL DATA

PRESS [ON] KEY TO
CANCEL
```

[CL] [CL] ⟹

Step5.
　　Select "Communication Port" at Link menu.

Step6.
　　Click "Auto Setting" button.

Step7.

Click "OK" button.
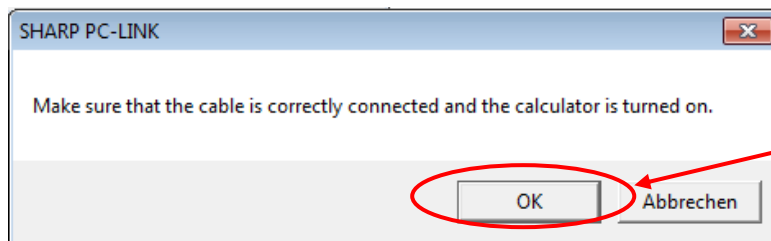
Step8.

The following window is displayed.   And a progress bar is extended.
When setting is finished, the window is closed automatically.
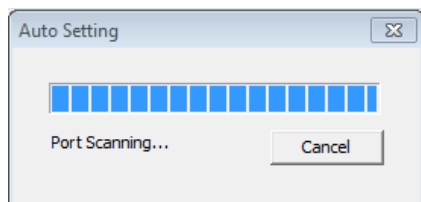
Note:

If the following window "No response" is displayed, check whether a cable is connect properly.
Then do it again from Step6.
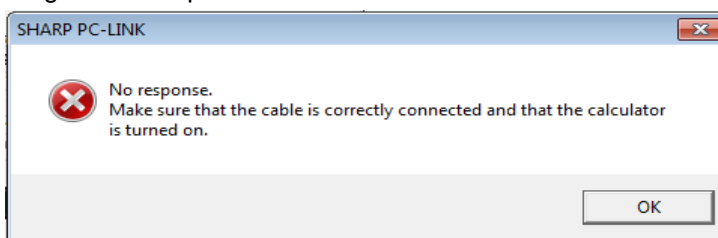
Sep9.

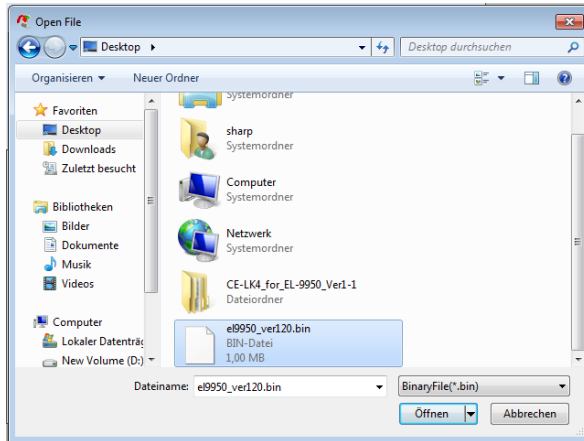Select "Repro" at Tools menu.
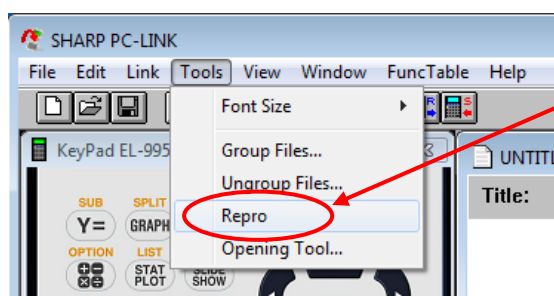
Step10.

Click "Browse" button .
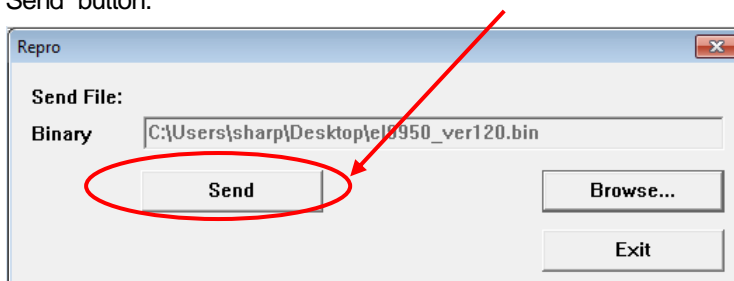If "el9950_ver120.bin" is already selected, go to Step12.
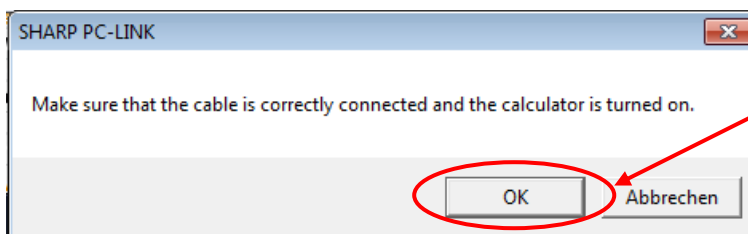
Step11.

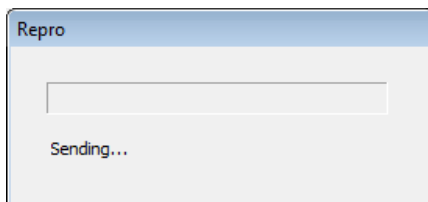Select "el9950_ver120.bin"

Step12.

Click "Send" button.

Step13.

Click "OK" button.
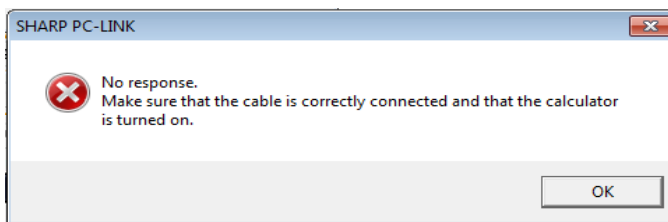

Step14.

The following window is displayed.

After 15seconds, the following screen is displayed on EL-9950.

```
RE-PROGRAM  RECEIVE

DATA
```

Note:
If the following window "No response" is displayed , check whether a cable is connect properly.
Please carry out recovery operation(*1) of EL-9950. (Refer to APPENDIX)

SHARP PC-LINK

No response.
Make sure that the cable is correctly connected and that the calculator is turned on.

OK

If the following window "This is an older version...." is displayed, it is not necessary to upgrade.
Because it is already ver1.2.

Repro

This is an older version of the currently installed.

OK
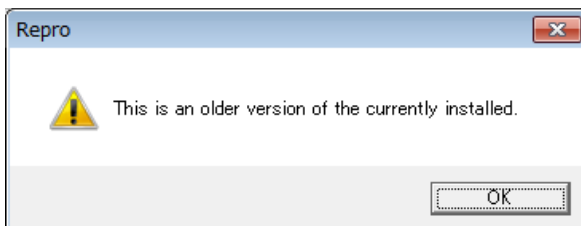
Step15.
A progress bar is extended.
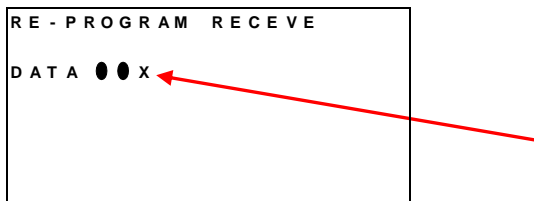
Repro

Sending...

A black circle is indicated on EL-9950 during the transfer.   After 30 seconds, the first circle is displayed.
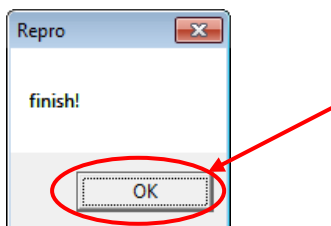The total transfer time is about 4 minutes.

RE-PROGRAM RECEVE

DATA ●●

Note:
If "x" mark is indicated on EL-9950, Please carry out recovery operation(*1) of EL-9950.
(Refer to APPENDIX)

RE-PROGRAM RECEVE

DATA ●●X

Step16.
When transfer is finished, the following window is displayed.   Click "OK" button.
EL-9950 is turned off automatically
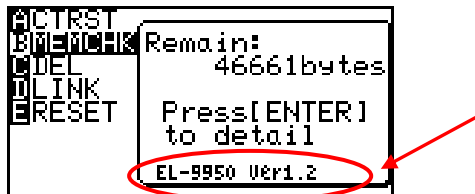
Repro

finish!

OK

Step17.

Remove the cable from EL-9950.

Step18.(Last)

Turn on EL-9950.
Press [2ndF][OPTION] and [cos] key, then the following screen is displayed.
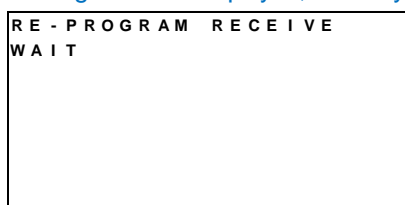Check name and version. (**EL-9950 Ver1.2**)

APPENDIX

(*1) Recovery operation of EL-9950
Step A1.
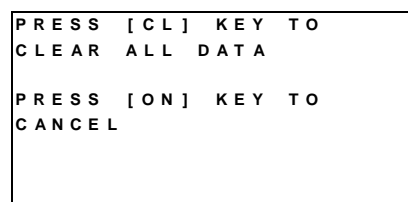
Open and close the battery cover of EL-9950.

Step A2.

If the following screen is displayed, recovery is finished.   Please go to Step12.

```
RE-PROGRAM  RECEIVE
WAIT
```

If it is not displayed even if it waits for 5 seconds, please turn on EL-9950.

Step A3.

If the following screen is displayed, please press [CL] key twice.

```
PRESS  [CL]  KEY  TO
CLEAR  ALL  DATA

PRESS  [ON]  KEY  TO
CANCEL
```

Step A4.(Last)

If the screen with only an underline is displayed, recovery is finished.   Please go to Step12.